

Mid end road


BRP310 Range

Mounting instruction 安装说明书

4441 000 65491



Product Name	LEDs	W	LED level	V/Hz	Beam width	Glass	kg
BRP310 LED46/CW 55W 220-240V MB	24	52	700mA	220V-240V 50Hz/60Hz	MB	FG	9.5
BRP310 LED61/CW 75W 220-240V MB	32	69	700mA				
BRP310 LED77/CW 95W 220-240V MB	40	86	700mA				
BRP310 LED92/CW 115W 220-240V MB	48	103	700mA				
BRP310 LED107/CW 130W 220-240V MB	56	120	700mA				
BRP310 LED51/CW 55W 220-240V MB	32	50	530mA				
BRP310 LED64/CW 70W 220-240V MB	40	63	530mA				
BRP310 LED77/CW 85W 220-240V MB	48	77	530mA				
BRP310 LED90/CW 100W 220-240V MB	56	90	530mA				
BRP310 LED102/CW 110W 220-240V MB	64	103	530mA				
BRP310 LED127/CW 140W 220-240V MB	80	129	530mA				
BRP310 LED47/CW 45W 220-240V MB	40	41	350mA				
BRP310 LED56/CW 55W 220-240V MB	48	49	350mA				
BRP310 LED66/CW 65W 220-240V MB	56	58	350mA				
BRP310 LED75/CW 75W 220-240V MB	64	66	350mA				
BRP310 LED85/CW 85W 220-240V MB	72	75	350mA				
BRP310 LED95/CW 95W 220-240V MB	80	82	350mA				
BRP310 LED103/CW 100W 220-240V MB	88	90	350mA				
BRP310 LED122/CW 122W 220-240V MB	104	106	350mA				
BRP310 LED52/CW 45W 220-240V MB	56	43	270mA				
BRP310 LED60/CW 50W 220-240V MB	64	49	270mA				
BRP310 LED82/CW 70W 220-240V MB	88	69	270mA				
BRP310 LED90/CW 80W 220-240V MB	96	76	270mA				
BRP310 LED105/CW 95W 220-240V MB	112	88	270mA				

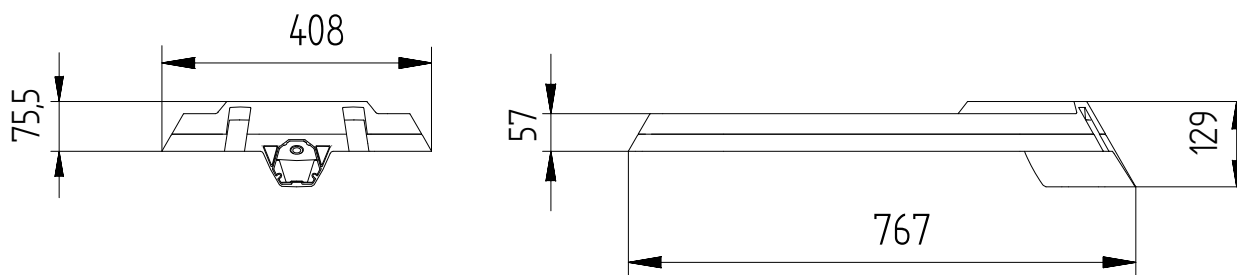

1.First switch main supply and then replace broken glass






先切断电源，再更换破碎玻璃

2.First switch off main supply and then replace damaged gear unit or LED modules

先切断电源，再更换损坏的电器组件或LED模块

3. Do not allow to cover the luminaire with combustible

灯具不允许被易燃物覆盖

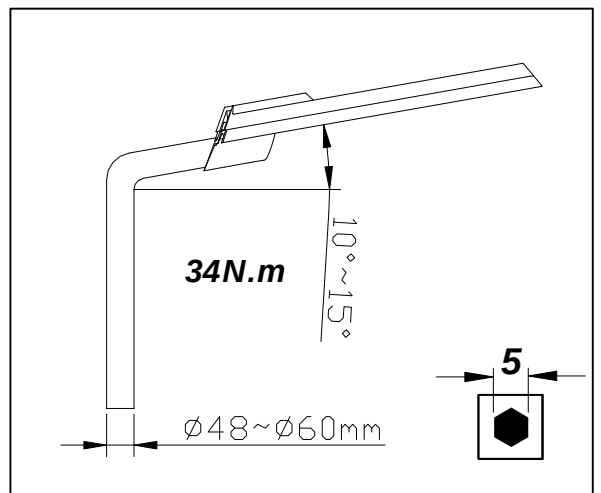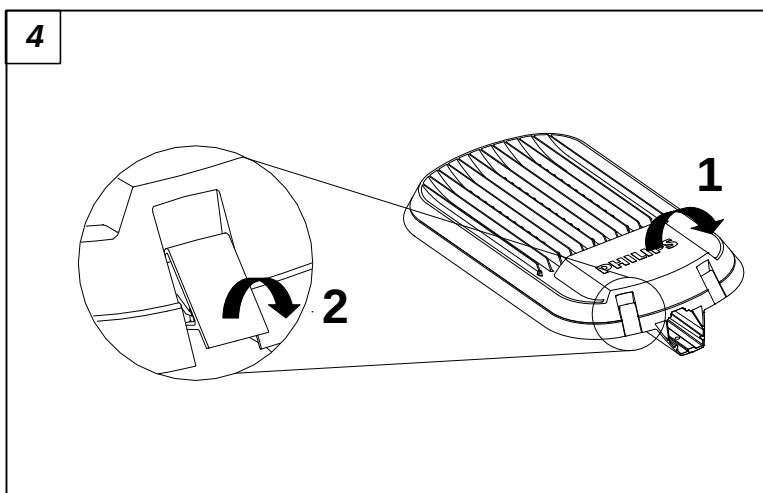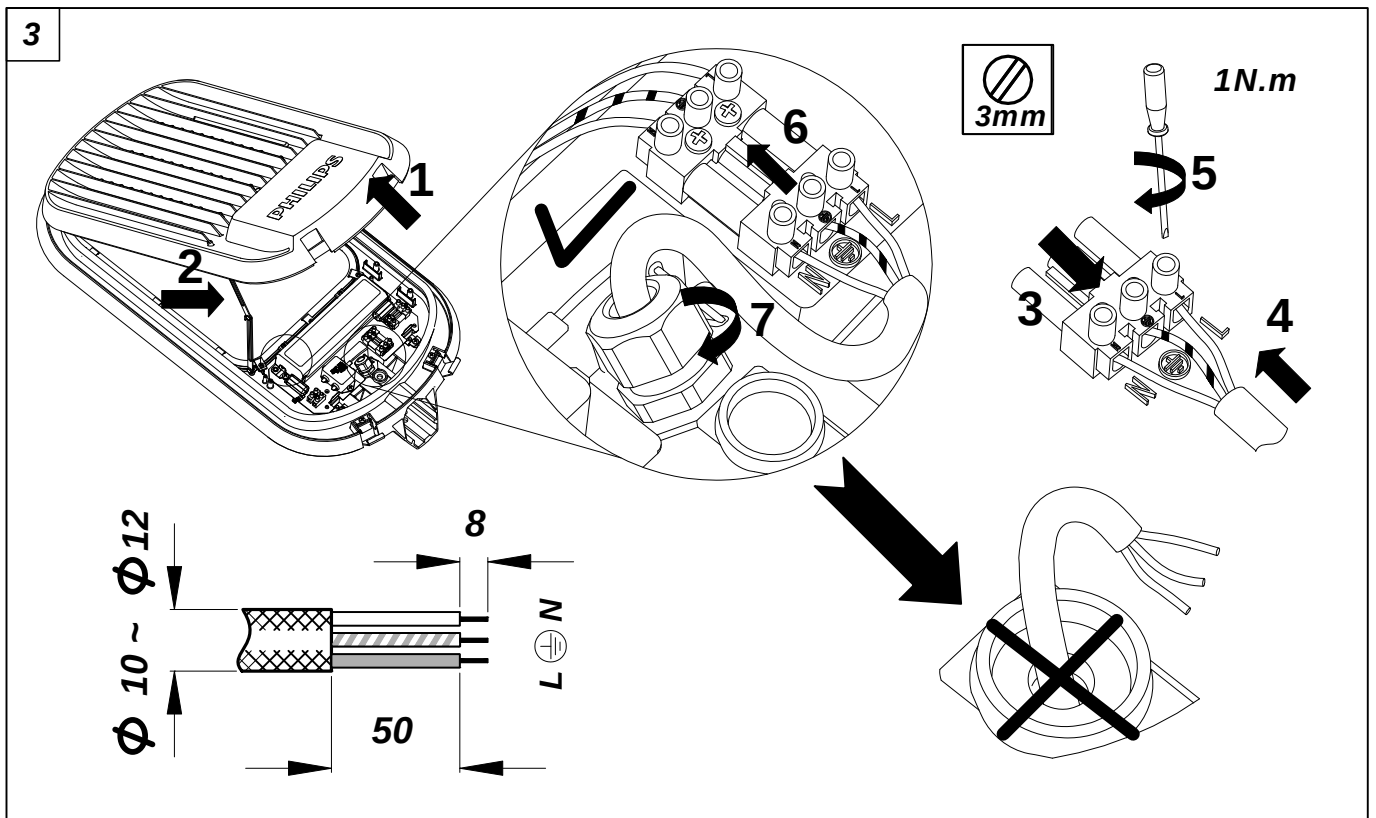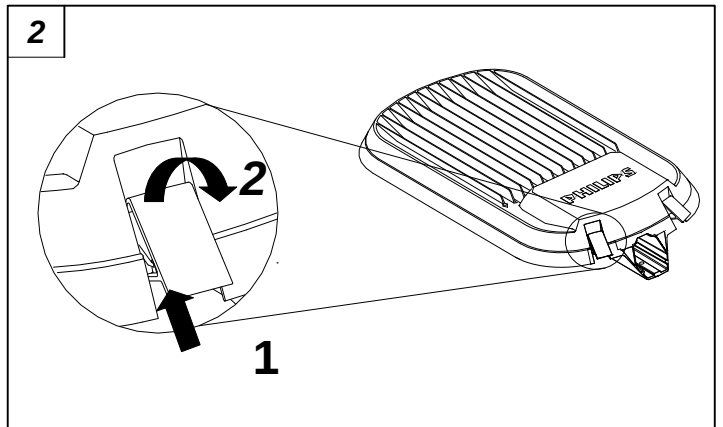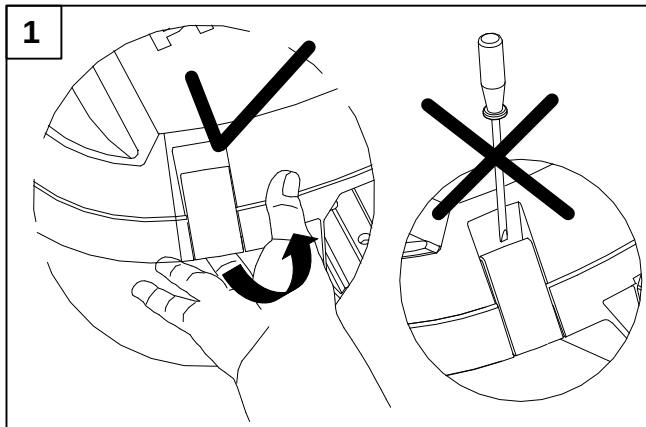

Notice:Correct connection for polarities
注意:正确的极性连接


60245IEC57
3 pole1.5mm² Multi-core with rubber insulated layer
1.5mm²三芯橡胶护套软线

1



Warning: Switch off main power supply before maintenance

警告:维护前请切断主电源

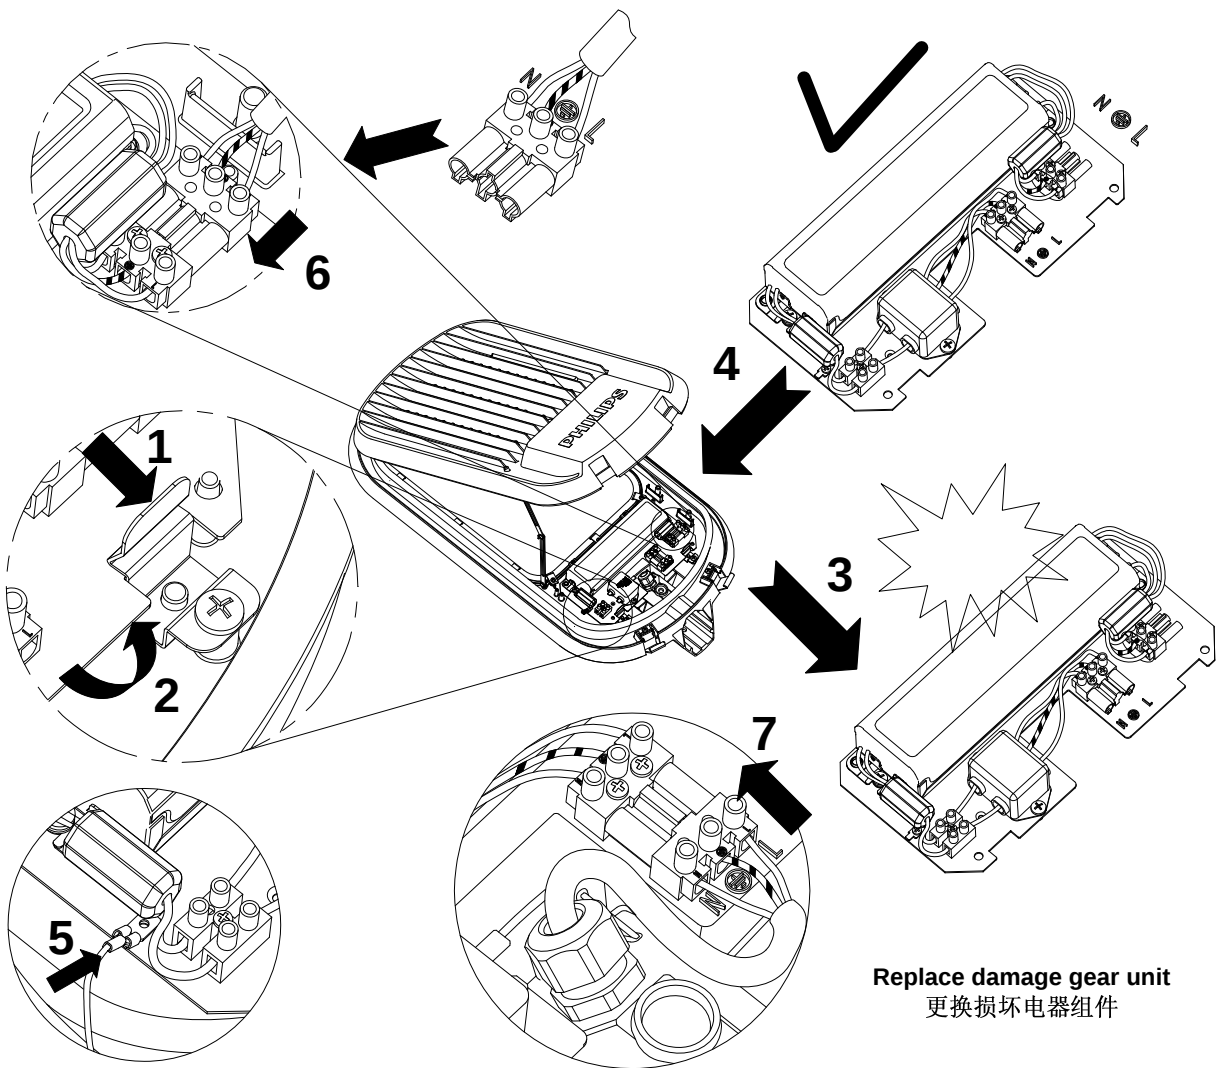

2

