
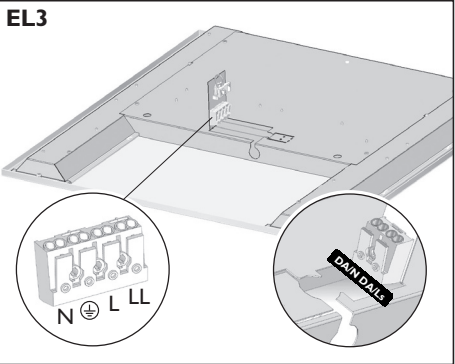


Maintenance instructions

To assure the lighting quality of this unique LED lighting concept there are a few instructions regarding the maintenance of this LED luminaire:

- ☐ Do not touch electronic components!
Electronic components are under high voltage.
Electronic components are ESD sensitive.
- ☐ During installation or when maintaining the luminaire please use static free gloves to avoid marks on the luminaire.
- ☐ To remove dirt and spots use the following:
 - o Dust: only use micro fiber cloths
 - o Fingerprints, etc.: use a cleaner for synthetic materials with antistatic properties.
- ☐ Do not stare into the LED light beam.
- ☐ To avoid scratches and dirt on optical parts remove protective foil after installation.
- ☐ The luminaire shall be installed by a qualified electrician and wired in accordance with the latest IEE electrical regulations or the national requirements.

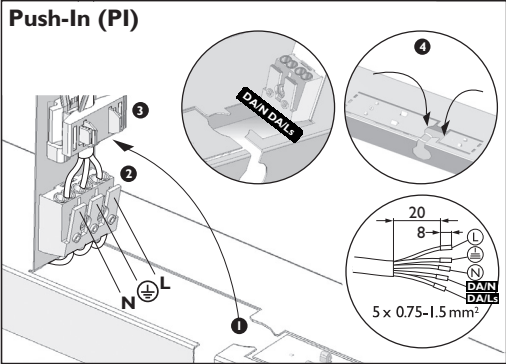

CoreLine RC120B Recessed

Installation instructions

Instructions de montage
Montageanleitung
Montage instructie
Istruzioni di montaggio


Instrucciones de montaje
Instruções de montagem
Monteringsinstruktioner
Monteringsvejledning

Kokoonpano- ja kiinnitysohjeet
Montaj yönergesi
Οδηγίες συναρμολόγησης
Instrukcja montażu

Szerelési utasítások
Návod k montáži
ИНСТРУКЦИЯ ПО МОНТАЖУ
Návod k montáži



Type	Dimension (mm)				kg
	1	2	3	4	
RC120B W60L60	31	597	597	11	3.9
RC120B W30L120	32	1197	297	11	4.1
RC120B W60L60 EL3	31	597	597	11	4.5
RC122B W62L62	31	622	622	11	4.1

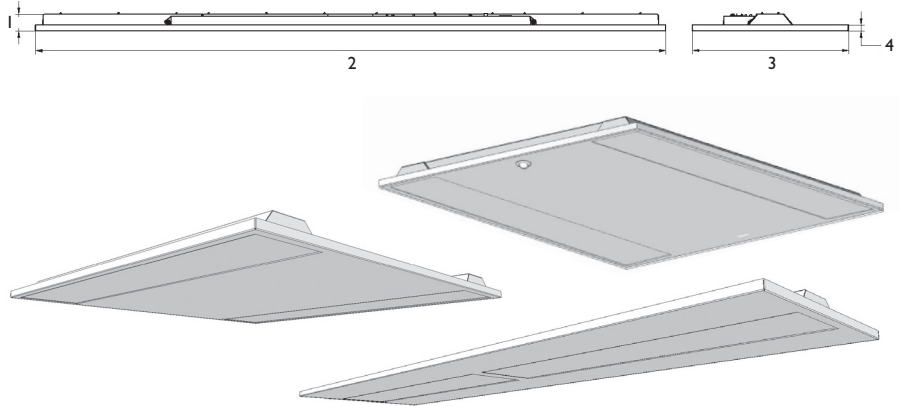

Inrush current peak	22 A (max)
Mains current pulse time half peak	1 ms
Earth leakage current	0.7 mA (max)
Number of drivers on one MCB (16A type-B)*	24 (max)
Number of drivers connected to one 30 mA residual current detector*	24 (max)

*verify per installation

