

Downlight



FBH145

Installation Instruction 安装说明

FBH145-M001a



Type Number 产品型号	Lamp 光源	Lampholder 灯座	Voltage/Frequency 电压/频率	L	kg
1XPL-C/2P13W I	1xPL-C 13W/2P	G24d-1	220V~/50Hz	250	1.15
1XPL-C/2P18W I	1xPL-C 18W/2P	G24d-2	220V~/50Hz	250	1.25
1XPL-C/2P18W IC	1xPL-C 18W/2P	G24d-2	220V~/50Hz	315	1.35
1XPL-C/4P18W EBE & EBP	1xPL-C 18W/4P	G24q-2	EBE220~/50/60Hz EBP220V-240~/50/60Hz	315	1.15
1XPL-C/2P26W I	1xPL-C 26W/2P	G24d-3	220V~/50Hz	250	1.35
1XPL-C/2P26W IC	1xPL-C 26W/2P	G24d-3	220V~/50Hz	315	1.5
1XPL-C/4P26W HFA & EBP	1xPL-C 26W/4P	G24q-3	HFA230~/50/60Hz EBP220V-240~/50/60Hz	315	1.3
2XPL-C/2P13W I	2xPL-C 13W/2P	G24d-1	220V~/50Hz	250	1.3
2XPL-C/2P13W IC	2xPL-C 13W/2P	G24d-1	220V~/50Hz	315	1.5
2XPL-C/4P13W EBE & EBP	2xPL-C 13W/4P	G24q-1	EBE220~/50/60Hz EBP220V-240~/50/60Hz	315	1.3
2XPL-C/2P18W I & IC	2xPL-C 18W/2P	G24d-2	220V~/50Hz	315	1.8
2XPL-C/4P18W EBE & EBP	2xPL-C 18W/4P	G24q-2	EBE220~/50/60Hz EBP220V-240~/50/60Hz	315	1.15
2XPL-C/2P26W I & IC	2xPL-C 26W/2P	G24d-3	220V~/50Hz	250	3
2XPL-C/4P26W HFA & EBP	2xPL-C 26W/4P	G24q-3	HFA220~/50/60Hz EBP220V-240~/50/60Hz	250	2.2
ZBH145 GC GLASS CLEAR	Glass as the accessory, need be ordered individually. 为玻璃附件（镜面和雾面），需要额外订购。				
ZBH145 FRG FROSTED GLASS					

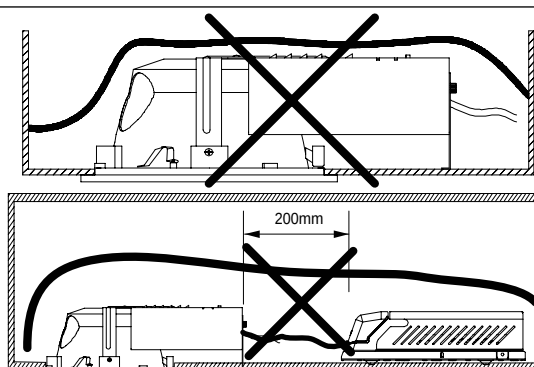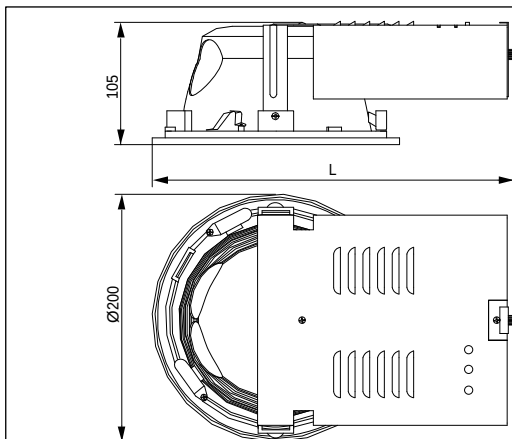


The luminaire should not be covered with thermally insulating matting or similar material!

本灯具不允许被隔热衬垫或类似材料覆盖！


1

Cut a hole on the ceiling
在天花板上开孔

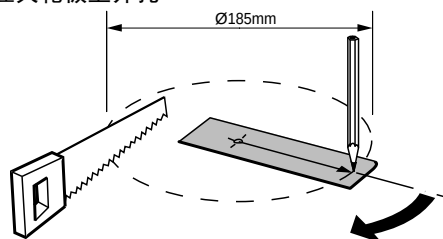

2

Loose the Screw on the top surface of the Gear box,
turn the Gear box cover out
松开电器箱顶部的螺丝，取下后盖

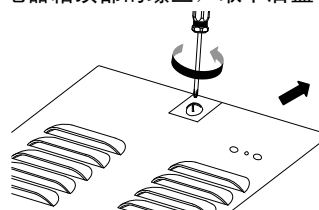


Philips Lighting Luminaires (Shanghai) Co., Ltd.
Address: No. 2688, Huyi Road, Jiading, Shanghai, China
Postcode: 201801


飞利浦灯具（上海）有限公司
地址：中国上海市嘉定区马陆镇沪宜公路2688号
邮编：201801

PHILIPS


- 3 Put the Power cord through the Grommet on the Gear box cover, connect the Power cord to the Terminal block
将线接入接线端子，然后锁紧压线板

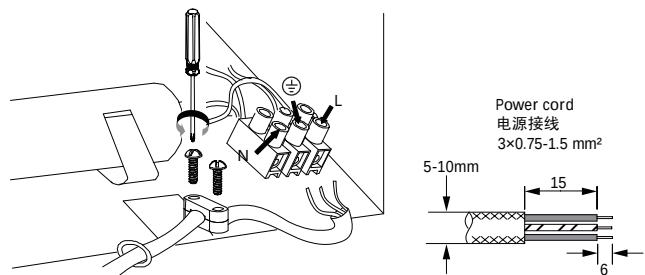


- 4 Rotate the Screw clockwise and fix the Gear box cover
锁紧螺丝，安装后盖

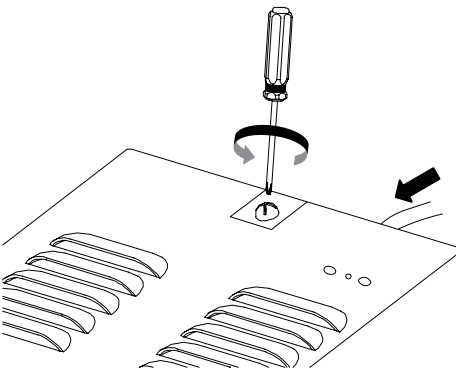


- 5 2×26W, Separated gear box cable installation
2×26W, 分离式电箱接线

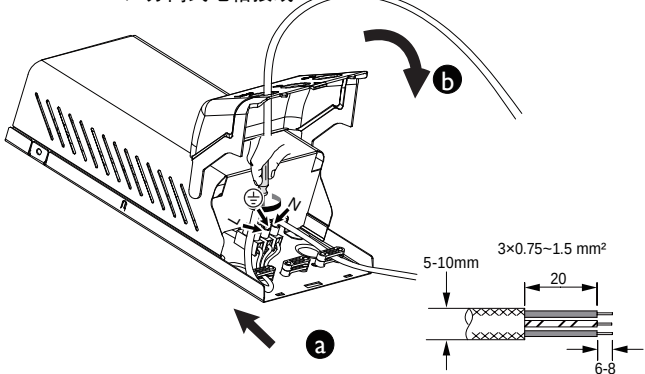


- 6 a. Rotate the Panel counter-clockwise and pull it out
逆时针方向拆下白环
b. Rotate the Screw counter-clockwise and pull the Reflector out
逆时针方向拧开螺丝，并取下反射器

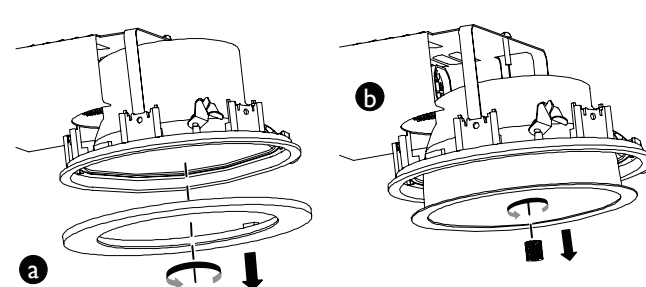


- 7 a. Put the Luminaire into the Hole on the Ceiling and adjust the Supporter to support the Luminaire
将灯从天花孔中穿入，并调节搭扣，安装好灯具
b. Rotate three Clips to fix the Luminaire on the Ceiling
通过旋转搭扣，将灯具安装固定于天花板

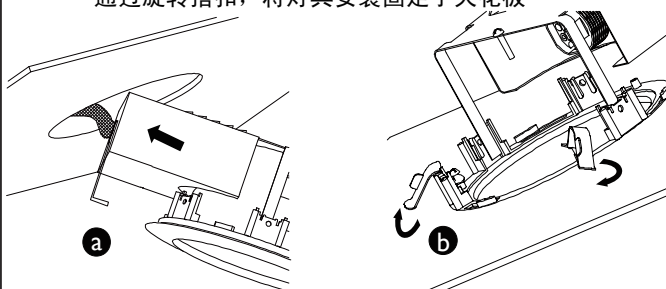


- 8 a. Install Lamp into the Lampholder
装入光源
b. Fix the Reflector by using Screw and Rotate the Panel clockwise to fix it on
安装反射器并拧紧螺帽，然后盖上白环

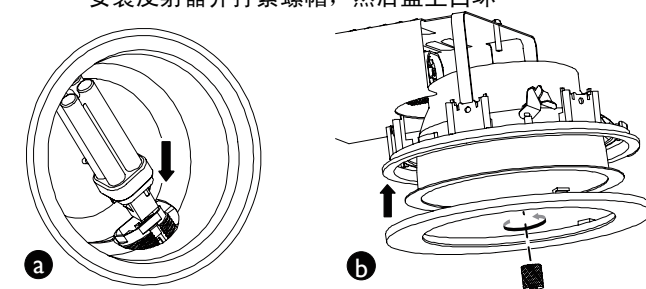

- 9 Put the glass in the clip, then fasten the screw;
玻璃装入弹片中，然后锁紧螺丝

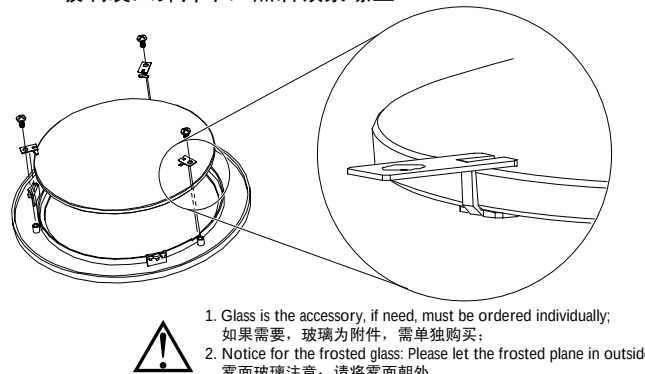

10

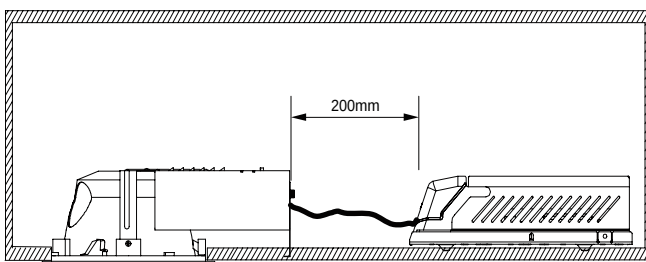

1. Please turn off the power before maintenance and lamp replacement.
须断开电源后，才能维修和更换光源。
2. The luminaire shall be installed by a qualified electrician and wired in accordance with the latest IEE electrical regulations or the national requirements.
灯具应由有资格的电工安装，接线要符合IEE电气标准或国家标准。

