

DOWNLIGHT

FBS145

Installation Instruction






IEC
60598

IP20




Model	Lamp	Lampholder	Voltage/Frenquency	Current	P.F.
FBS145/113	1XPL-C 13W/4P	G24q-1	220-240V/50-60HZ	0.075A	0.98
FBS145/118	1XPL-C 18W/4P	G24q-2	220-240V/50-60HZ	0.093A	0.98
FBS145/126	1XPL-C 26W/4P	G24q-3	220-240V/50-60HZ	0.133A	0.98

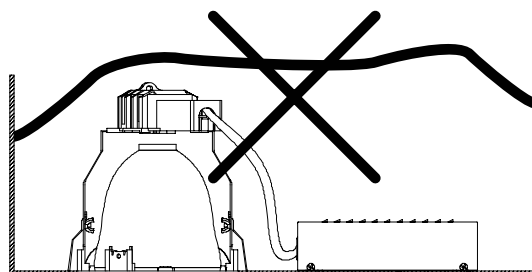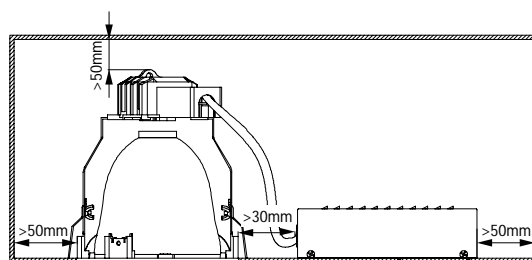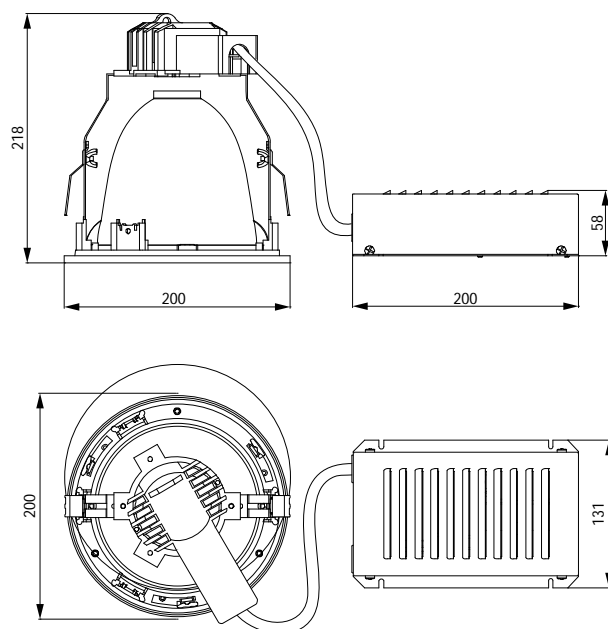


The luminaire should not be covered with thermally insulating matting or similar material!


- 1 Cut a hole on the ceiling

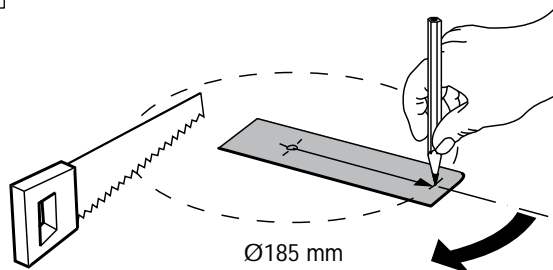


- 2 Loose four Screws on the Gear box, pull the Gear box cover out

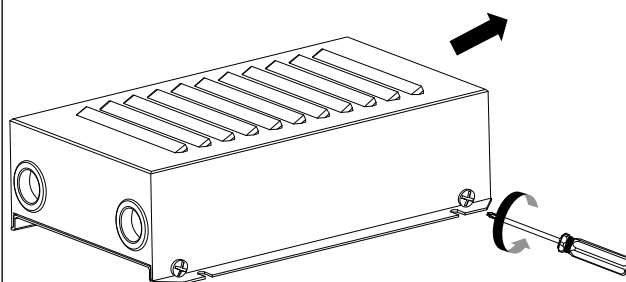


3 Connect the Power cord to the Terminal block

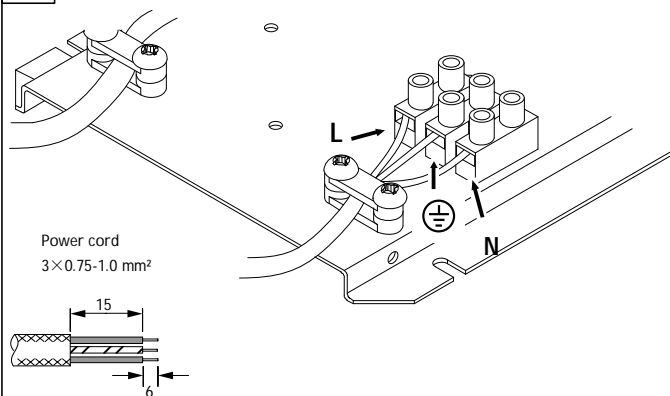


4 Put the Power cord through the Grommet on the Gear box cover, rotate the Screws clockwise and fix the Gear box cover

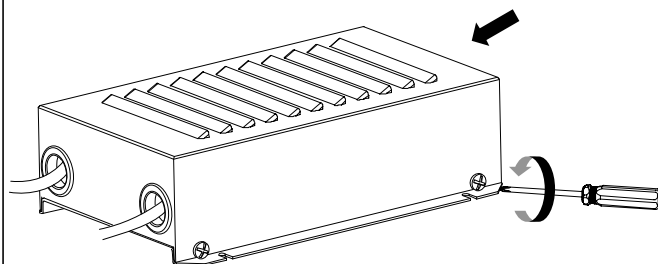


5 Rotate the Panel counter-clockwise and pull it out

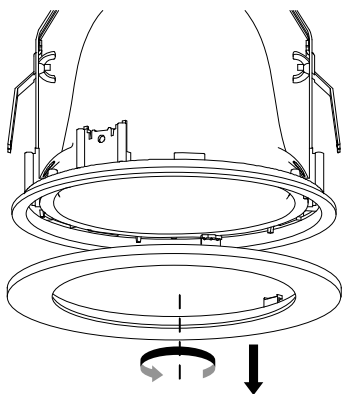


6 Pull the Reflector out

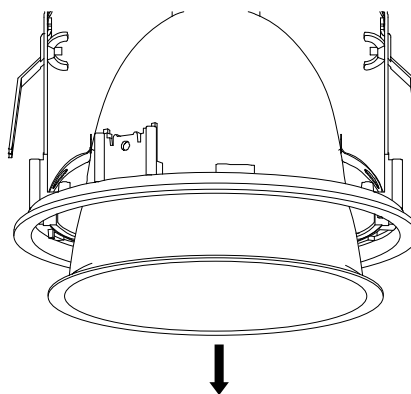


7 Put the Luminaire into the Hole on the Ceiling

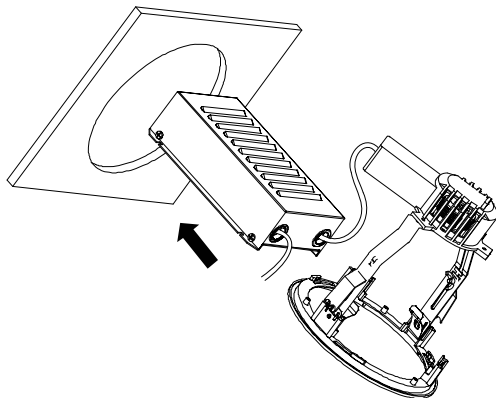


8 Adjust two Screws to fix the Luminaire on the Ceiling

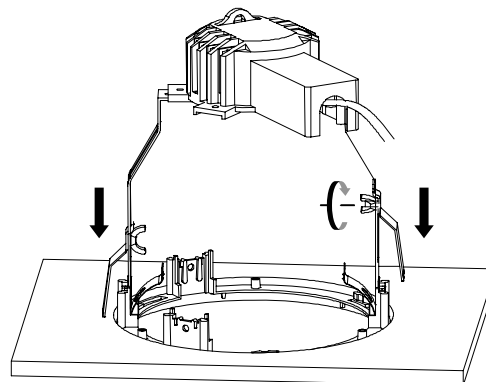

9 Install the Reflector into the Luminaire

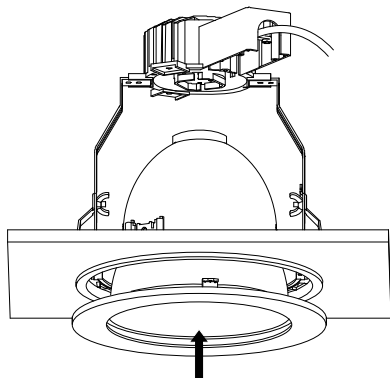

10 Install Lamp into the Lampholder, then fix the Panel

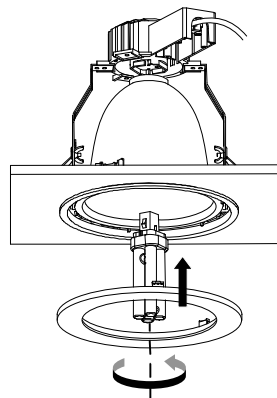

1. Disconnect the Unit before replacing the Lamp
2. Replace any cracked safety Front glass