

MVF028

Mounting instruction 安装说明

4441 000 63381e



ta
35°

IP65

Connection box
IP44
接线盒






IEC
60598

GB
7000



0.309m²


Type Number 型号	Lamp 光源	Reflect 反射器		
MVF028	SON-T1000W HPI-T1000W	MB WB	1.5m	15.4kg
	MHN-LA1000W X528/CABLE MHN-LA2000W X528/CABLE MHN-SA1800W X830ROD MHN-SA2000W X830ROD	A1 A3		

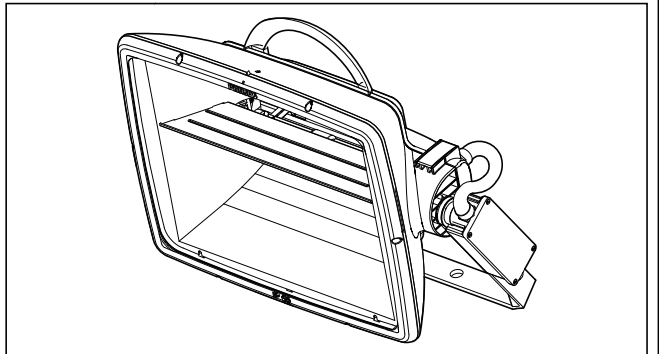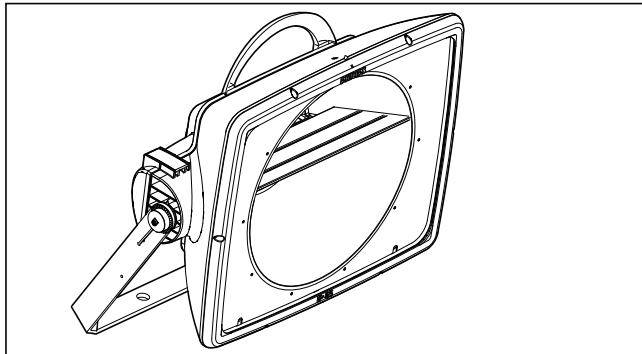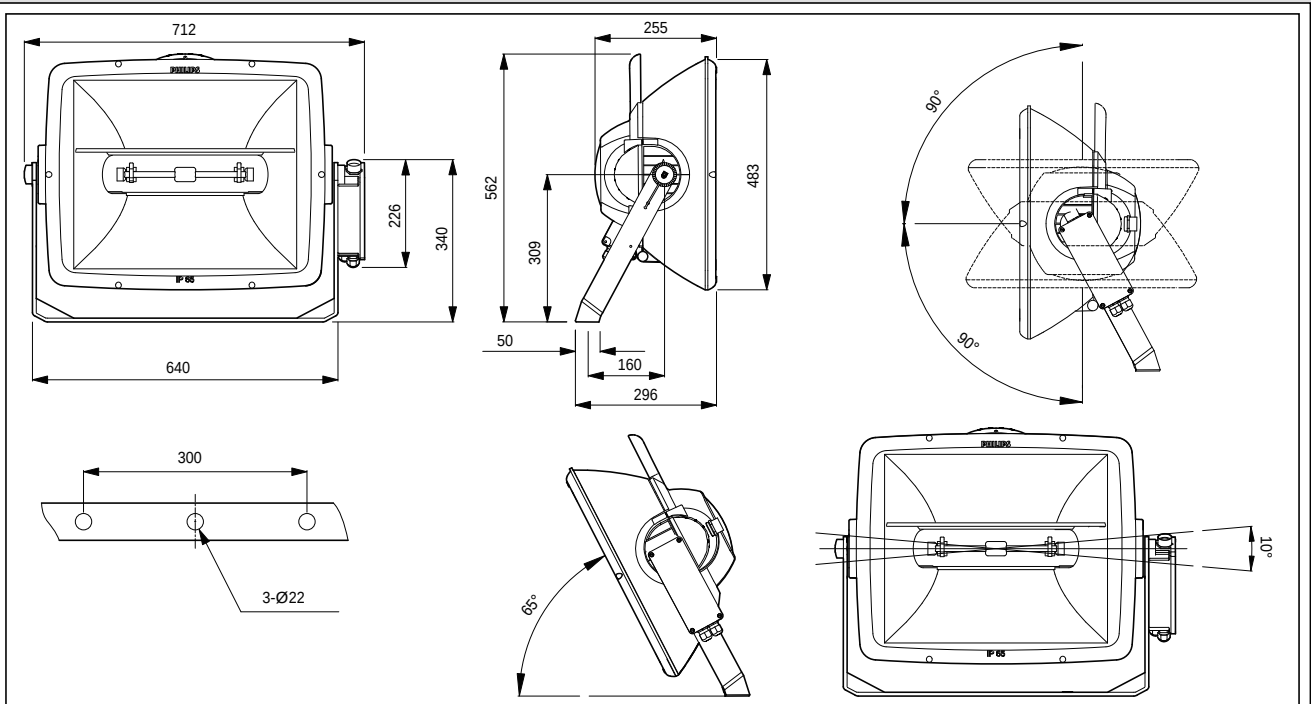


1. If the front glass is broken, switch off the main supply and replace the front glass.
切断电源，更换玻璃。
2. Disconnect the unit before changing the lamp.
更换灯泡前，请先切断电源。
3. Do not cover the luminaire with combustibles.
灯具不允许被可燃物覆盖。

MVF028/1000W SON/HPI-T 1000W


Product Name 产品名称	Optical system 光学系统	Matching Lamp 光源	Voltage / Hz 电压/赫兹	Weight 重量
MVF028/1000W	WB/MB/NB	SON/HPI-T 1000W	220V/50Hz	15.6kg
MVF028/1000W	WB/MB/NB	MHN-LA 1000W	220V/50Hz	15.8kg
MVF028/2000W	WB/MB/NB	MHN-LA 2000W	380V/50Hz	15.8kg
MVF028/1800W	A1/A2/A3/A4 A5/A6/A7	MHN-SA 1800W MHN-SA 1800W	220V/50Hz 380V/50Hz	15.8kg
MVF028/2000W	A1/A2/A3/A4 A5/A6/A7	MHN-SA 2000W	380V/50Hz	15.8kg

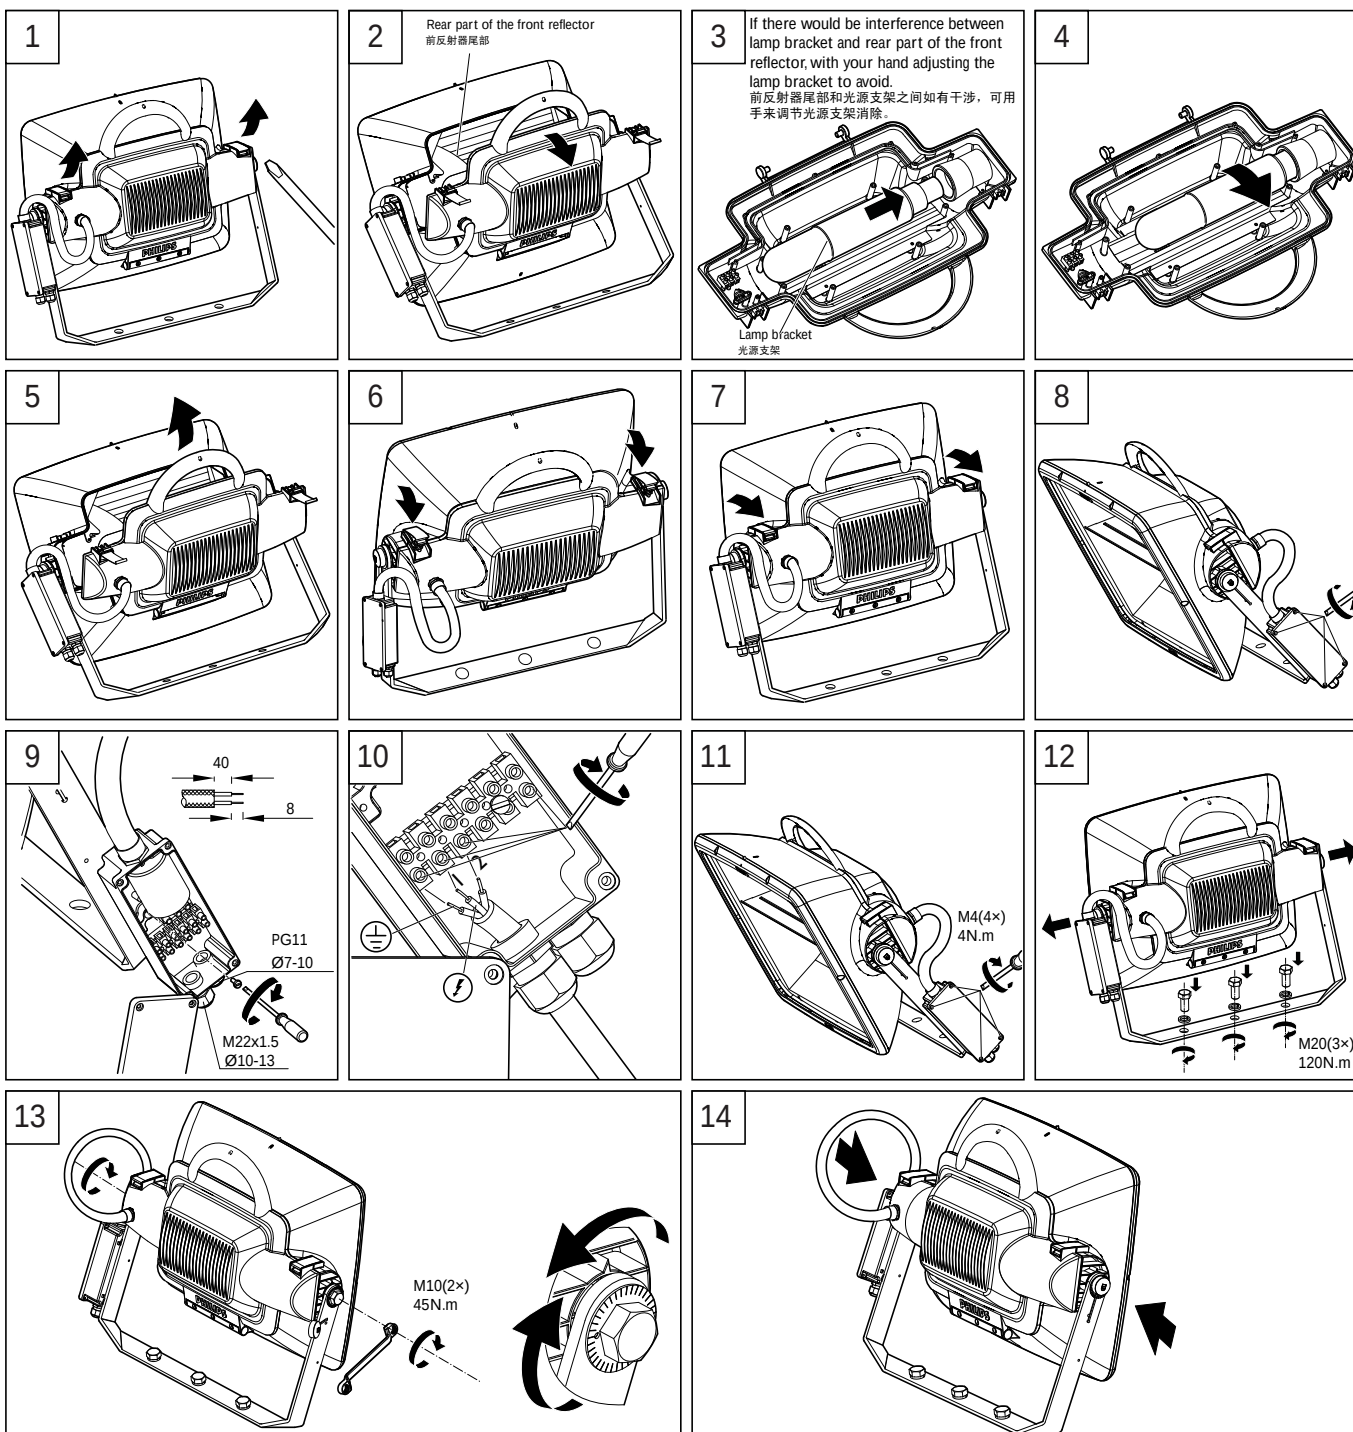

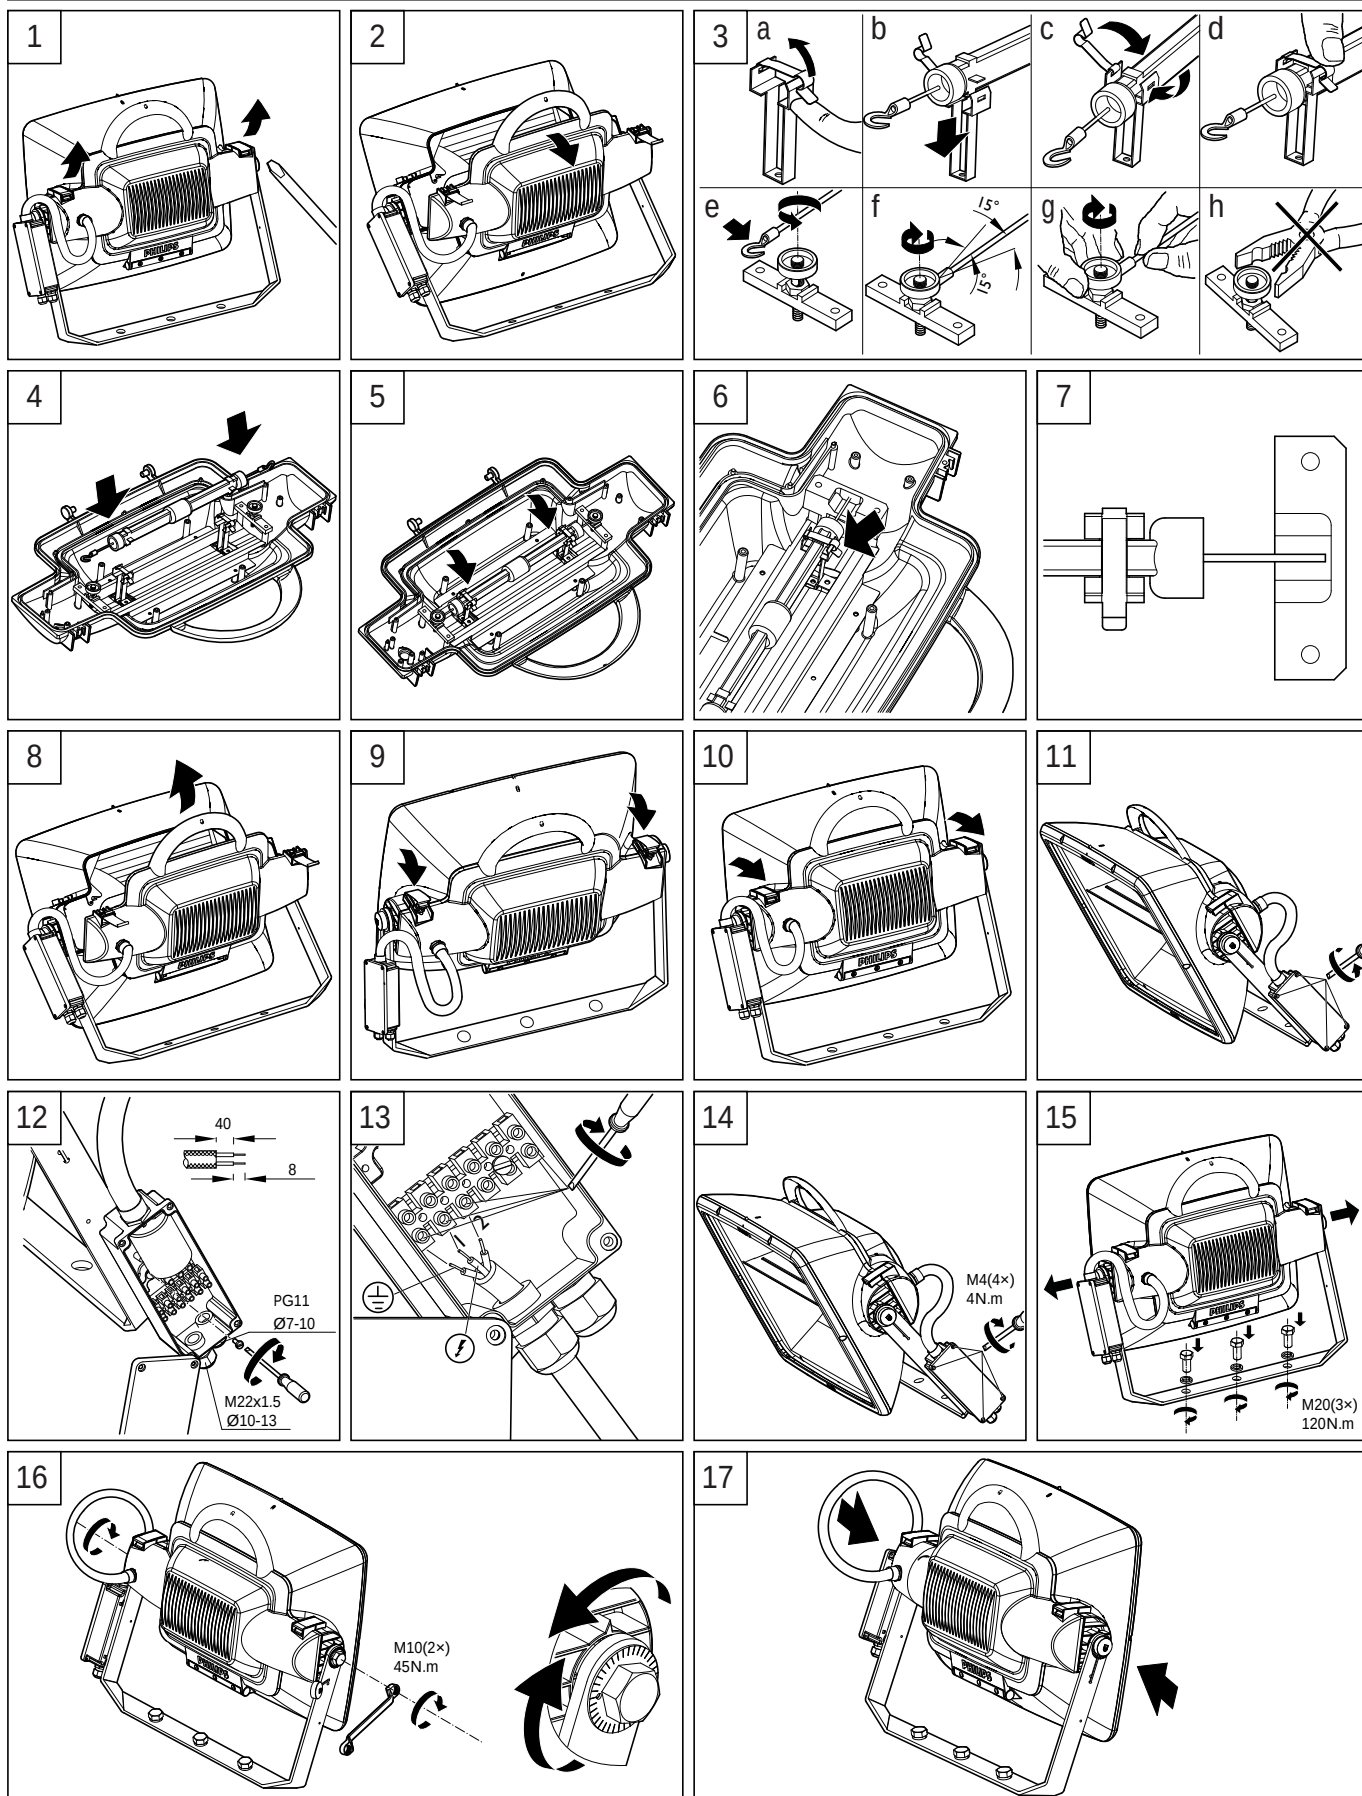

For safety reasons, you must connect the safety circuit, or use another cut-off device. If connected as shown in the diagram 13 above (connection points 4 and 5), the safety switch will control the relays which interrupt the mains when back section of the luminaire is opened.

为了安全，请务必使用安全回路或其它断路开关。上图13连接所示（连接点4和5）。当灯具后盖被打开时，安全回路将控制继电器切断主电源。

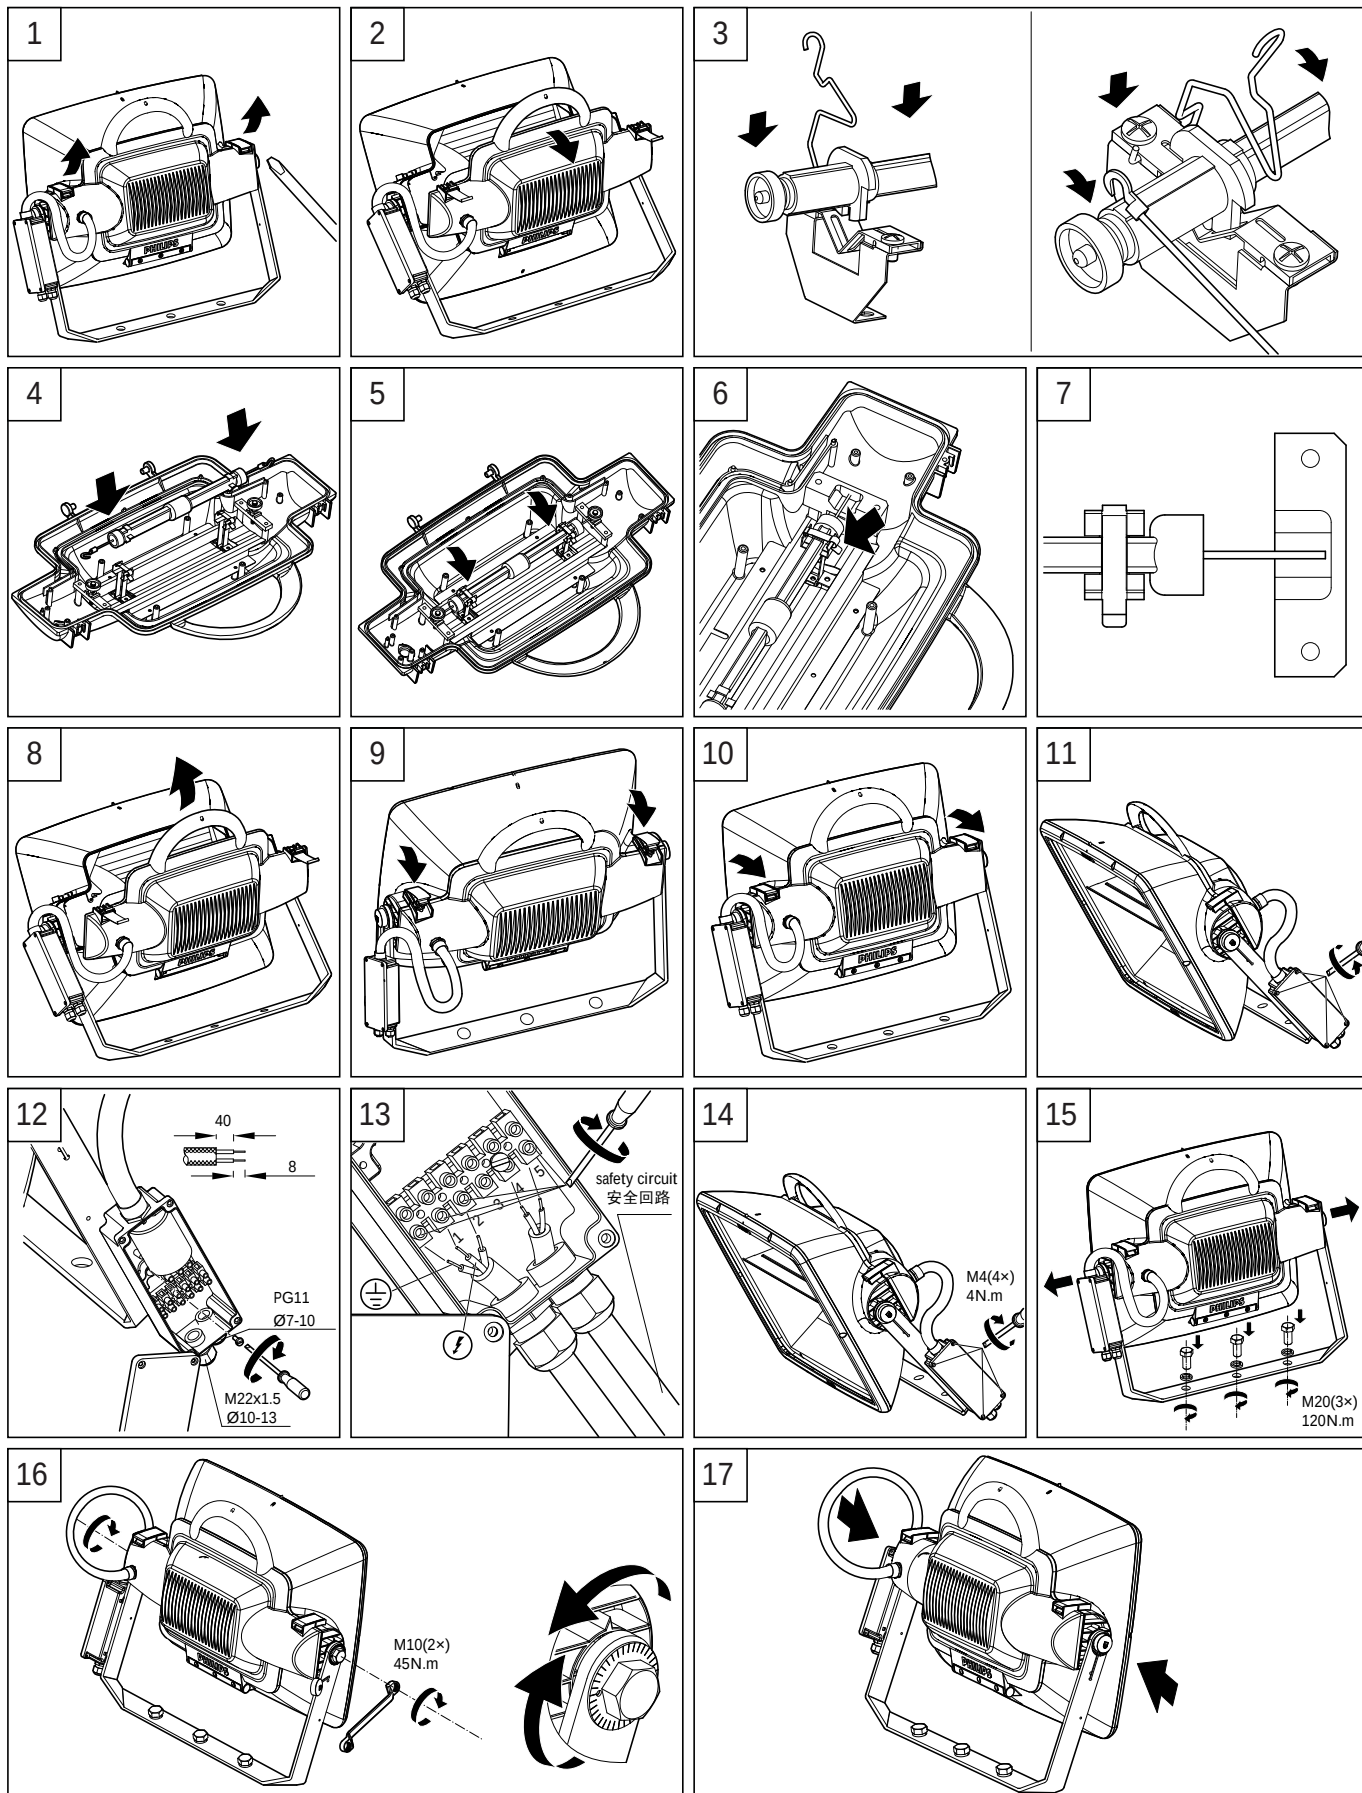

For safety reasons, you must connect the safety circuit, or use another cut-off device. If connected as shown in the diagram 13 above (connection points 4 and 5), the safety switch will control the relays which interrupt the mains when back section of the luminaire is opened.


为了安全，请务必使用安全回路或其它断路开关。上图13连接所示（连接点4和5）。当灯具后盖被打开时，安全回路将控制继电器切断主电源。

To Connection Box with Ignitor:

Wring diagram for SON-T 1000W

SON-T 1000W接线盒带触发器的接线

A Gear box 电箱
C Connection box 灯具接线盒

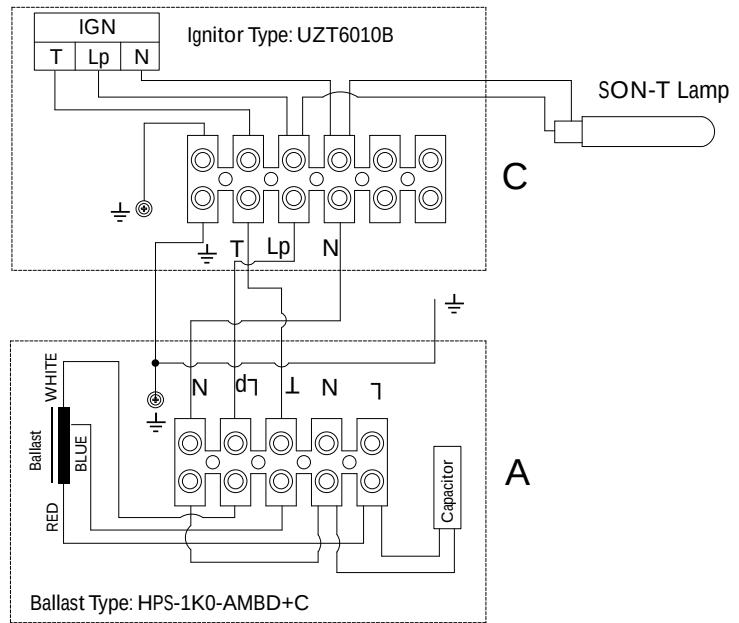


Notice: The ports, like T, Lp, N and Earthing must be connected between Gear Box and Connection Box.
For the similar Ballast and Ignitor type, the update of description will not be shown here.
注意：在电箱和灯具接线盒之间的T、Lp、N和接地端口必须被联接。
对于相似的镇流器和触发器型号描述的更新，在此不再列出。

To Connection Box with Ignitor:

Wring diagram for MHN-LA 1000W

MHN-LA 1000W接线盒带触发器的接线

A Gear box 电箱
C Connection box 灯具接线盒

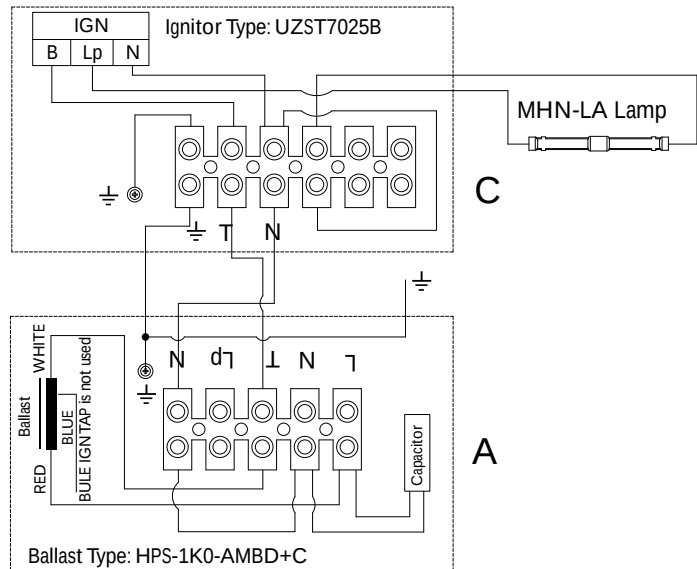


Notice: The ports, like T, N and Earthing except Lp must be connected between Gear Box and Connection Box.
For the similar Ballast and Ignitor type, the update of description will not be shown here.
注意：除Lp外，在电箱和灯具接线盒之间的T、N和接地端口必须被联接。
对于相似的镇流器和触发器型号描述的更新，在此不再列出。

To Gear Box with Ignitor:

Wring diagram for HPI-T 1000W

HPI-T 1000W电箱带触发器的接线

A Gear box 电箱
C Connection box 灯具接线盒

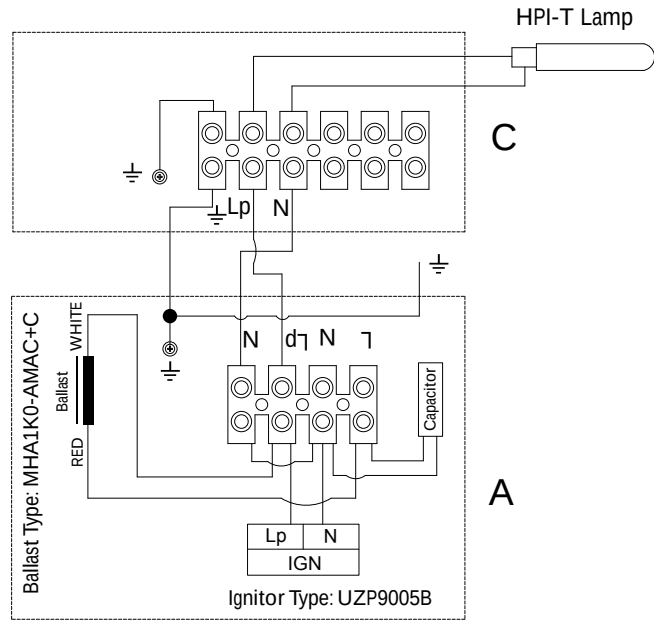


Notice: The ports, like Lp, N and Earthing must be connected between Gear Box and Connection Box.
For the similar Ballast and Ignitor type, the update of description will not be shown here.
注意：在电箱和灯具接线盒之间的Lp、N和接地端口必须被联接。
对于相似的镇流器和触发器型号描述的更新，在此不再列出。

To Gear Box with Ignitor:

Wring diagram for SON-T 1000W

SON-T 1000W接线盒带触发器的接线

A Gear box 电箱
C Connection box 灯具接线盒

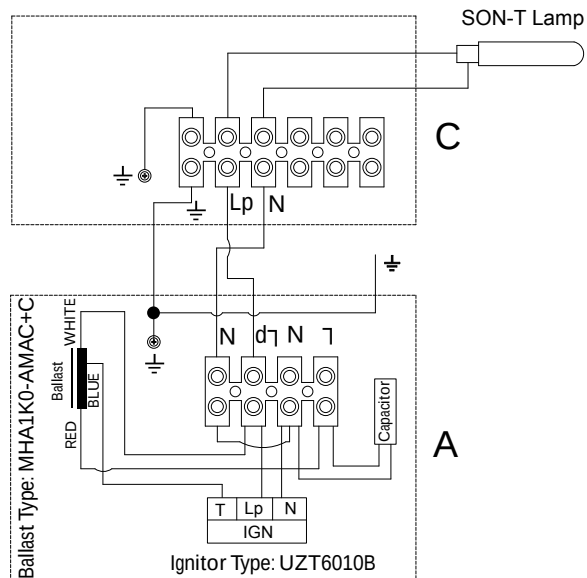


Notice: The ports, like Lp, N and Earthing must be connected between Gear Box and Connection Box.
For the similar Ballast and Ignitor type, the update of description will not be shown here.
注意：在电箱和灯具接线盒之间的Lp、N和接地端口必须被联接。
对于相似的镇流器和触发器型号描述的更新，在此不再列出。

To Gear Box with Ignitor:

Wring diagram for HPI-T 1000W

HPI-T 1000W电箱带触发器的接线

A Gear box 电箱
C Connection box 灯具接线盒

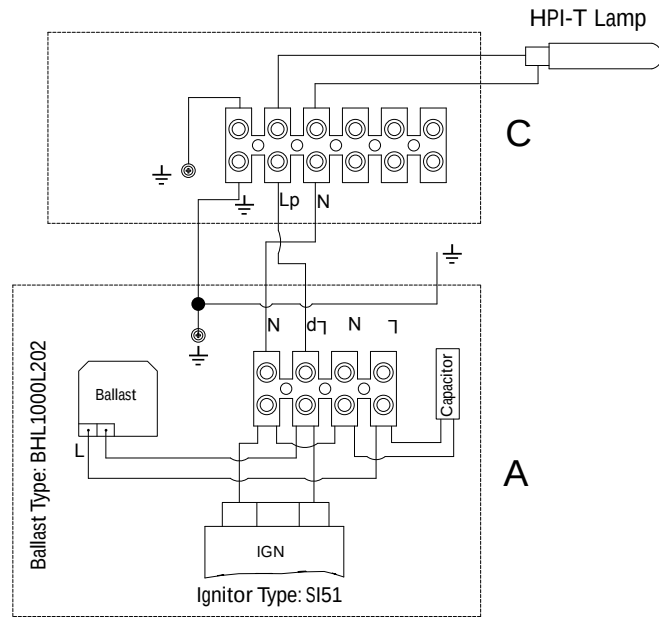


Notice: The ports, like Lp, N and Earthing must be connected between Gear Box and Connection Box.
For the similar Ballast and Ignitor type, the update of description will not be shown here.
注意：在电箱和灯具接线盒之间的Lp、N和接地端口必须被联接。
对于相似的镇流器和触发器型号描述的更新，在此不再列出。

To Gear Box with Ignitor:

Wring diagram for SON-T 1000W
and MHN-LA1000W

SON-T 1000W及and MHN-LA1000W
接线盒带触发器的接线

A Gear box 电箱
C Connection box 灯具接线盒

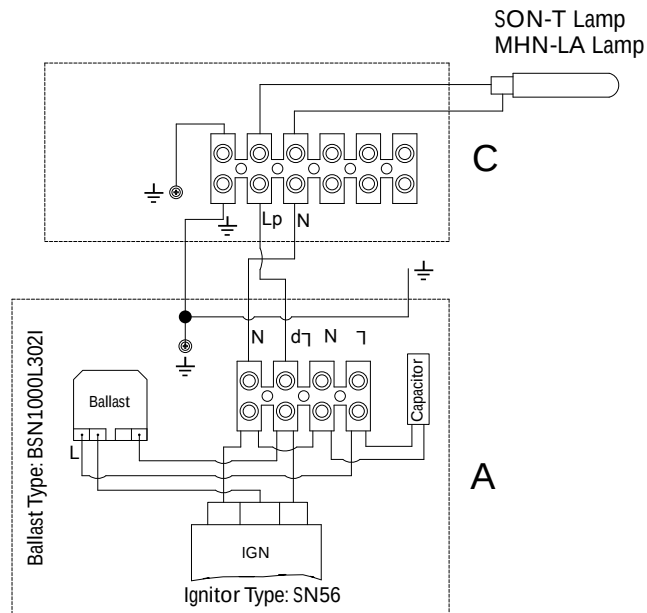


Notice: The ports, like Lp, N and Earthing must be connected between Gear Box and Connection Box.
For the similar Ballast and Ignitor type, the update of description will not be shown here.
注意：在电箱和灯具接线盒之间的Lp、N和接地端口必须被联接。
对于相似的镇流器和触发器型号描述的更新，在此不再列出。

To Gear Box with Ignitor:

Wring diagram for SON-T 600W

SON-T 600W电箱带触发器的接线

- A Gear box 电箱
C Connection box 灯具接线盒

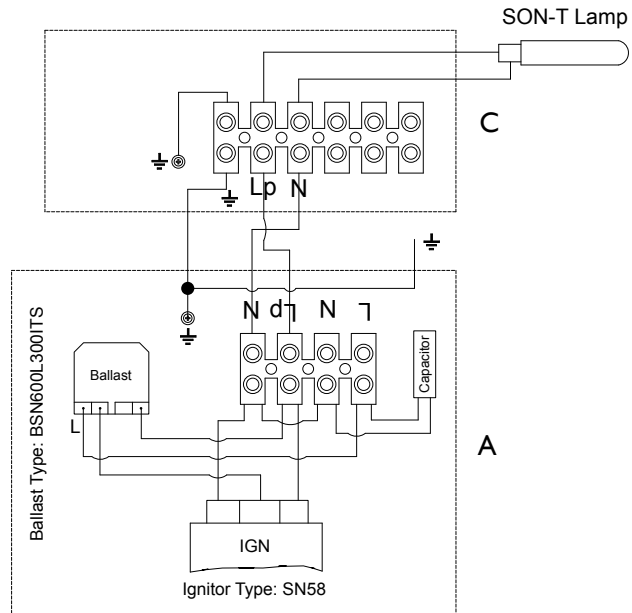


Notice: The ports, like Lp, N and Earthing must be connected between Gear Box and Connection Box.
For the similar Ballast and Ignitor type, the update of description will not be shown here.
注意：在电箱和灯具接线盒之间的Lp、N和接地端口必须被联接。
对于相似的镇流器和触发器型号描述的更新，在此不再列出。

To Gear Box with Ignitor:

Wring diagram for HPI-T 1000W

HPI-T 1000W接线盒带触发器的接线

- A Gear box 电箱
C Connection box 灯具接线盒

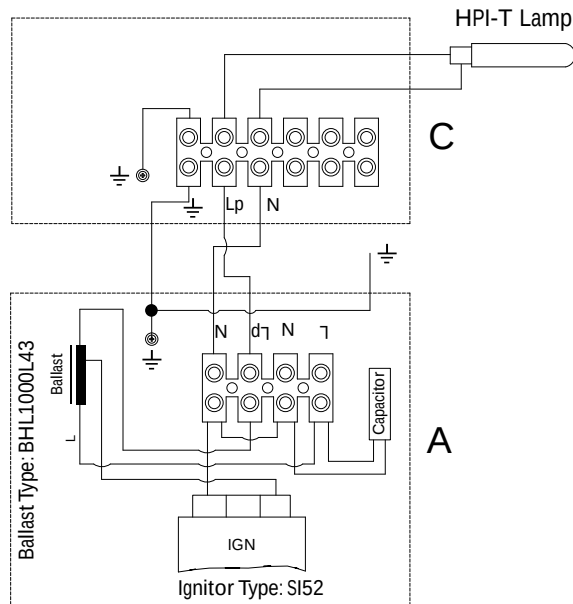


Notice: The ports, like Lp, N and Earthing must be connected between Gear Box and Connection Box.
For the similar Ballast and Ignitor type, the update of description will not be shown here.
注意：在电箱和灯具接线盒之间的Lp、N和接地端口必须被联接。
对于相似的镇流器和触发器型号描述的更新，在此不再列出。

To Connection Box with Ignitor:

Wring diagram for MHN-LA 2000W/400V
and for MHN-SA 1800W/400V

MHN-LA 2000W/400V和MHN-SA
1800W/400V 接线盒带触发器的接线

A Gear box 电箱
C Connection box 灯具接线盒

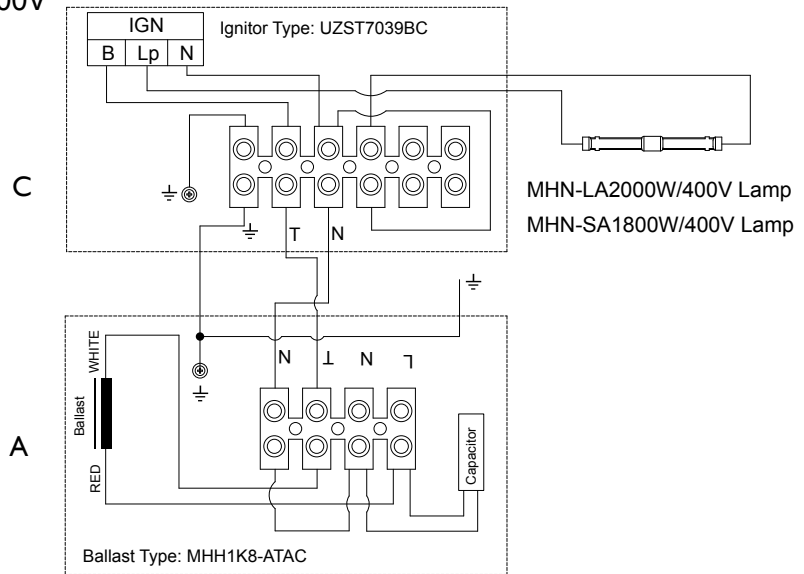


Notice: The ports, like T, N and Earthing must be connected between Gear Box and Connection Box.
For the similar Ballast and Ignitor type, the update of description will not be shown here.
注意：在电箱和灯具接线盒之间的T、N和接地端口必须被联接。
对于相似的镇流器和触发器型号描述的更新，在此不再列出。

To Connection Box with Ignitor:

Wring diagram for MHN-SA 1800W/230V

MHN-SA 1800W/230V 接线盒带
触发器的接线

A Gear box 电箱
C Connection box 灯具接线盒

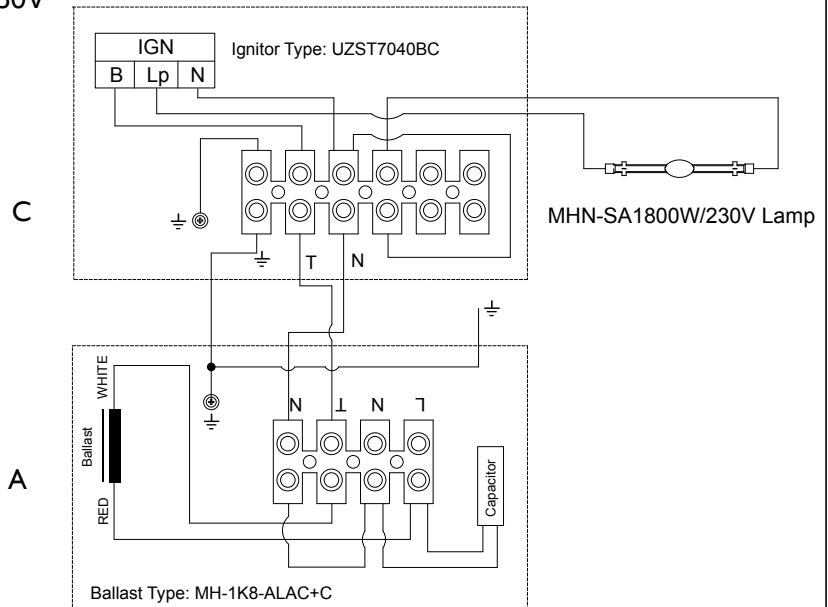

Notice: The ports, like T, N and Earthing must be connected between Gear Box and Connection Box.
For the similar Ballast and Ignitor type, the update of description will not be shown here.
注意：在电箱和灯具接线盒之间的T、N和接地端口必须被联接。
对于相似的镇流器和触发器型号描述的更新，在此不再列出。

To Connection Box with Ignitor:

Wring diagram for MHN-SA 2000W/400V

MHN-SA 2000W/400V 接线盒带


触发器的接线

A Gear box

电箱

C Connection box

灯具接线盒

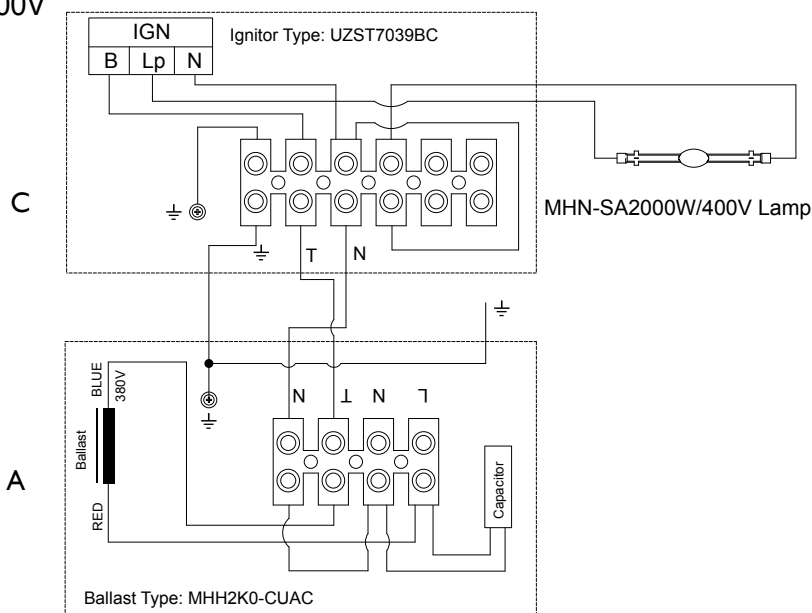

Notice: The ports, like T, N and Earthing must be connected between Gear Box and Connection Box.

For the similar Ballast and Ignitor type, the update of description will not be shown here.

注意：在电箱和灯具接线盒之间的T、N和接地端口必须被联接。

对于相似的镇流器和触发器型号描述的更新，在此不再列出。

To Gear Box with Ignitor:

Wring diagram for MHN-LA 2000W/400V

MHN-LA 2000W/400V 电箱带


触发器的接线

A Gear box

电箱

C Connection box

灯具接线盒

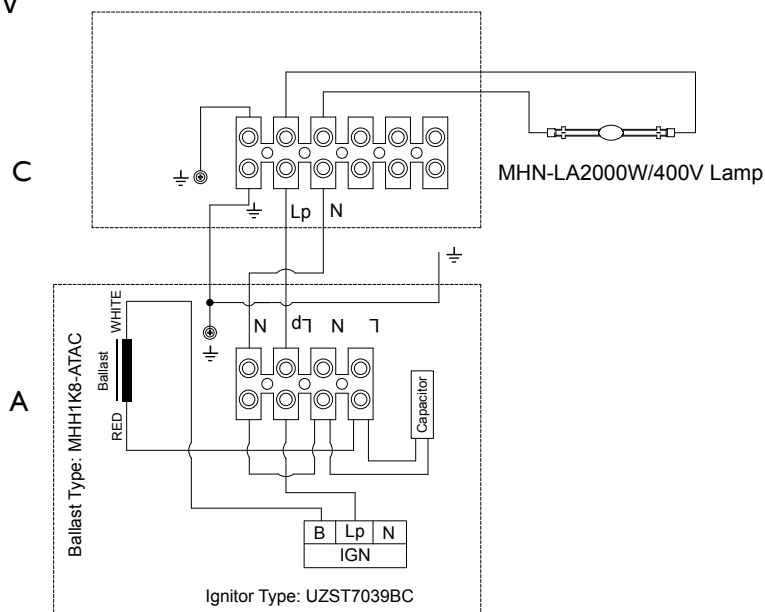

Notice: The ports, like Lp, N and Earthing must be connected between Gear Box and Connection Box.


For the similar Ballast and Ignitor type, the update of description will not be shown here.

注意：在电箱和灯具接线盒之间的Lp、N和接地端口必须被联接。


对于相似的镇流器和触发器型号描述的更新，在此不再列出。

Alignment in two ways: 用两种方法瞄准:

1 Alignment by
graduated disc
用刻度盘瞄准

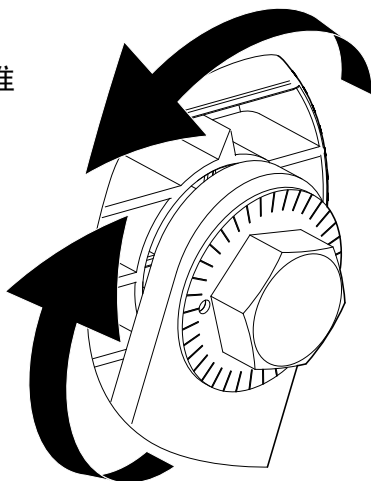

2 Alignment by small hole aiming point
用小孔与对准点连线瞄准

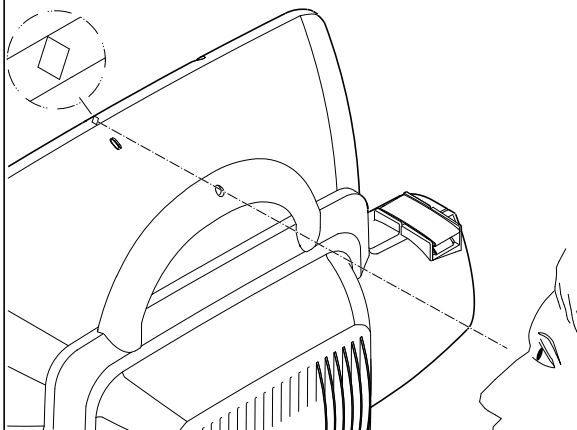

Important: Observe correct polarities

特别强调: 注意极性连接正确