

**Read and understand these instructions before installing luminaire.**

This luminaire is intended for installation in accordance with the National Electrical Code and local regulations. To assure full compliance with local codes and regulations, check with your local electrical inspector before installation. To prevent electrical shock, turn off electricity at fuse box before proceeding. Allow fixture to cool before handling.

**Retain these instructions for maintenance reference.**

**INSTRUCTIONS FOR ATTACHING VISOR 22VZ4 TO ALCYON™ 22WW4, T4 WALL WASHER AND TO POWER ARC MODULAR™ 83W4, T4 WALL WASHER**

NOTE: GLASS LENS must always be installed as shown in FIG. 1 for proper luminaire operation and safety (See luminaire instruction sheet IS:22WW4)

**INSTRUCTIONS FOR INSTALLING VISOR INTO T4 Wall Washer LUMINAIRE:**

1. Turn off power to luminaire.
2. First insert FLANGE on VISOR into the BOTTOM GROOVE in the luminaire (see FIG 1).
3. While pushing down on the TOP SURFACE of the VISOR, rotate TAB toward the TOP GROOVE in the luminaire until it snaps in and is secure in the GROOVE (see FIG's 2 & 3).
4. To remove, push down on top surface and rotate away from the luminaire (see FIG. 2).

**INSTRUCTIONS FOR INSTALLING VISOR INTO T4 Wall Washer LUMINAIRE AS A SNOOT (See FIG. 4):**

Follow the instructions above, changing the position of the FLANGE to the TOP GROOVE in the luminaire, and the position of the TAB to the BOTTOM GROOVE in the luminaire.

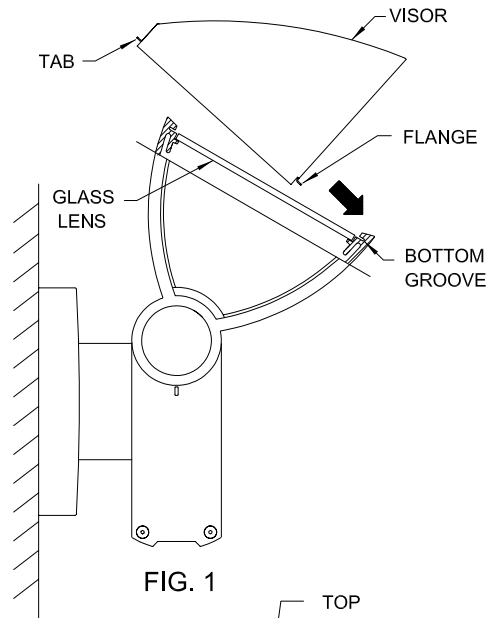


FIG. 1

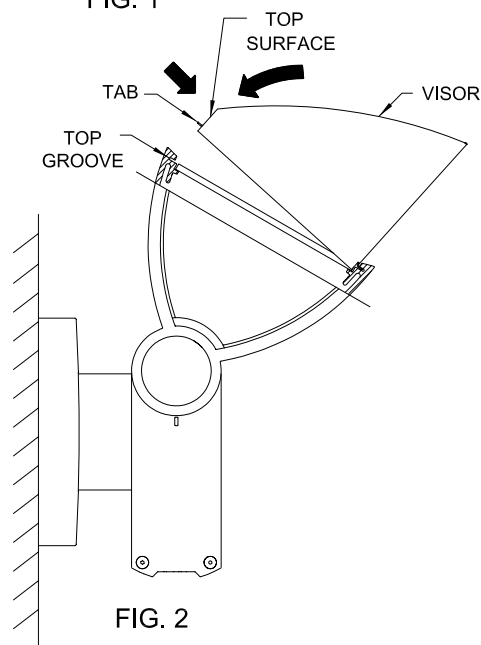


FIG. 2

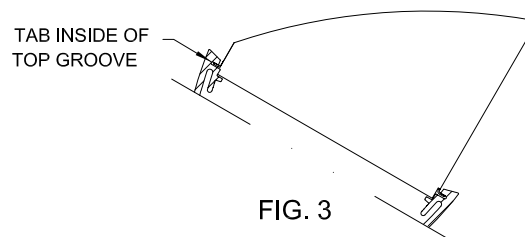


FIG. 3

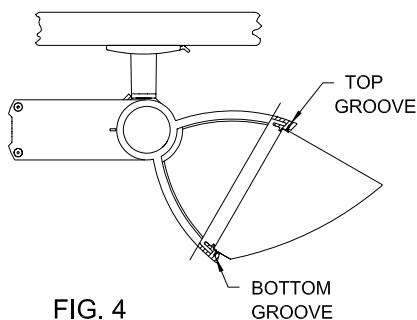


FIG. 4