

FX SERIES DIRECT MOUNT INSTRUCTIONS






The luminaire connections shall be performed by qualified personnel in conformance with local and national electrical codes. Ensure that the AC service is OFF before installation or maintenance. Do not switch AC service to ON until the entire installation is complete.






V Driver Enclosure

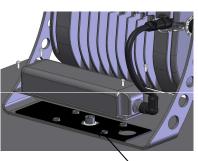

Conduit Lock Nut

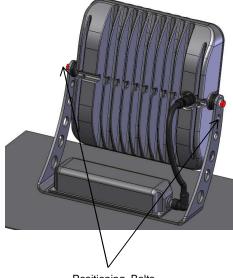

Positioning Bolts

1) Mounting

Remove 4 screws and driver Enclosure as shown. Place fixture on conduit and tighten down conduit lock nut (provided by others). Conduit should measure ³/₄ inch from mounting surface.

2) Connecting AC Power.

Connect AC wires from conduit to wires provided from fixture. Ensure excess wire is properly placed inside the driver enclosure or conduit to prevent pinching or damage.



For safety reasons, the ground leads must always be connected before any other leads.

3) Assemble

Replace driver enclosure and 4 mounting screws. Tighten to 20 in-lbs

4) Aiming Housing

Loosen positioning bolts on side of housing to allow housing angle to be adjuste fixture as needed. Tighten bolts to fully secure positioning.



Torque bolts 10 to 15 ft-lb

CAUTION Prevent over torque damage

Do not over torque nuts and bolts.

PHILIPS