

# GreenSpace Flex


## RS378B LED Downlight/筒灯

### Mounting instructions/安装说明



Type Number 产品型号	Power 功率	Light Source 光源	Cut out 开孔尺寸	Luminaire Size 整灯尺寸	kg
RS378B MR16 D78 R-R AJ D	Max. 10W	Max. 10W LED MR16	φ78mm	φ85*104mm	0.41
RS378B MR16 D78 R-R FX D	Max. 10W	Max. 10W LED MR16	φ78mm	φ85*104mm	0.41
RS378B MR16 D78 S-S AJ D	Max. 10W	Max. 10W LED MR16	78*78mm	85*85*104mm	0.42
RS378B MR16 D92 R-R AJ D	Max. 10W	Max. 10W LED MR16	φ92mm	φ105*110mm	0.46
RS378B MR16 D92 R-R FX D	Max. 10W	Max. 10W LED MR16	φ92mm	φ105*110mm	0.46
RS378B MR16 D102 R-R AJ D	Max. 10W	Max. 10W LED MR16	φ102mm	φ115*114mm	0.49
RS378B MR16 D102 R-R FX D	Max. 10W	Max. 10W LED MR16	φ102mm	φ115*114mm	0.49



#### Dimension 灯具尺寸

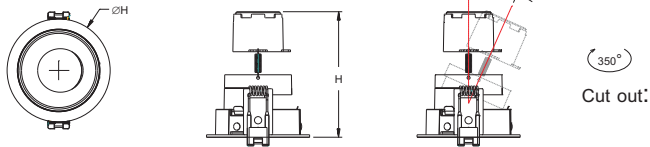


#### 1



#### 2 Supply Power Cable 建议电源线规格

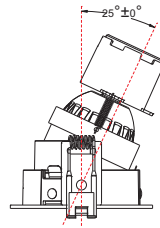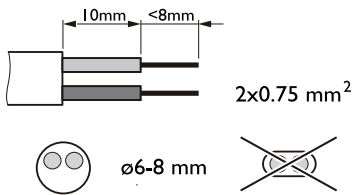


#### 3 Wire connecting 接电源线

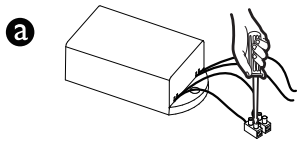


The MR16 lamp and transformer not included in the package.  
(Customer self-buying) 光源和变压器需另购

#### b

推荐使用飞利浦电子变压器ET-E 10  
Recommend to use PHILIPS Electronic transformer ET-E 10

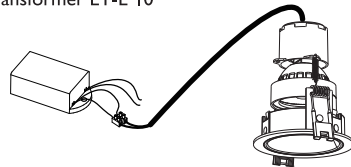


#### 4 Connect Power Supply Cable 连接电源线

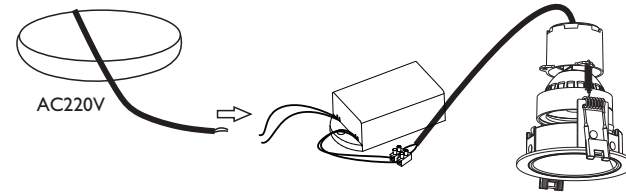

60227 IEC52 2x0.75mm²  
L:Brown/棕; N: Blue/蓝

推荐使用飞利浦LED MR16光源  
Recommend to use PHILIPS LED MR16 light source

#### 5 Mounting the luminaire 安装灯具

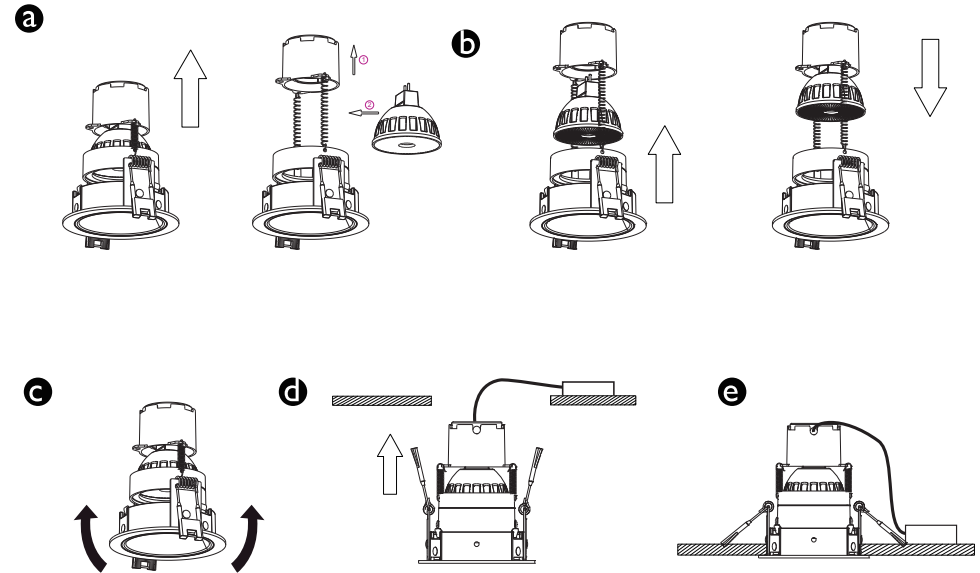

Following installation method is NOT allowed  
请不要使用以下几种方式安装灯具

