
PHILIPS

100 Craftway, P.O. Box 128 Littlestown, Pennsylvania 17340-0128

INSTALLATION INSTRUCTIONS: ABOVE GROUND BALLAST BOX ABH/BABH

MAXIMUM DISTANCE FROM ABOVE GROUND **BALLAST BOX TO LAMP USING 12 GA** COPPER WIRE is 50 FT.

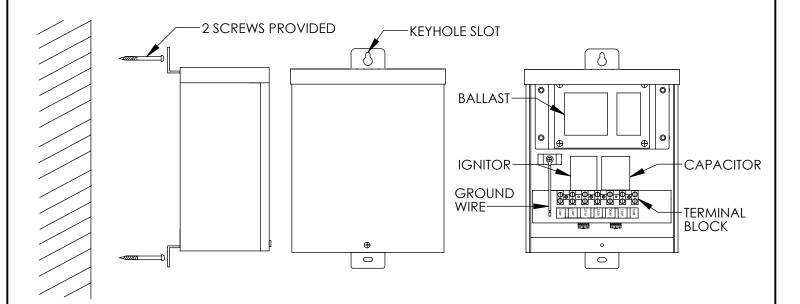

CAUTION: Disconnect power before servicing.

- 1. The transformer box must be mounted at least one foot above ground level with the conduit knock-outs facing down.
- Improper installation may allow water to enter and void warranty.

 2. Mark the location of the two mounting screws provided in hardware pack 8-5/8" apart vertically on the mounting surface. If mounting box to a tree, use combination lag screws (catalog #MF1) to keep box off surface of tree.
- 3. Install the top mounting screw and leave screw loose
- 4. Hang the ballast box on the top screw utilizing the keyhole slot in the top mounting tab.
- 5. Install the lower screw in bottom mounting tab.
- Tighten both mounting screws.
- Remove the front cover by removing the screw on the front of the box.
- 8. Remove 2 of the 3 knock-outs on the bottom of the box. Remove 3 knock-outs for through-wire connections.
- 9. Connect conduit (by others) to the box and pull supply wires & fixture wires into box.
- 10. Connect green ground wire from fixture and green ground wire from box to green supply wire.
- 11. Attach fixture wires to terminal blocks marked Lamp.
- 12. Attach common supply wires to terminal blocks marked COM.
- 13. Attach voltage supply wires to terminal blocks marked with correct voltage for your installation.
 14. Replace cover and tighten screw.
- 15. Supply power to ballast and check for proper operation.



This fixture is intended for installation in accordance with the National Electrical Code and local code specifications. Failure to adhere to these codes and instructions may result in serious injury and/or damage to the ballast and void the warranty. These instructions do not purport to cover all details or variations in equipment, nor to provide for every possible contingency related to installation, operation, maintenance, or mounting situation. Should specific problems occur that are not addressed by these instructions, contact your Sales Representative or distributor for assistance. Retain these instructions for future reference.



page 1 of 1 32000641, revision H

