

TTX188


Mounting instruction 安装说明




Type No 型号	Voltage / Frenquency 电压 / 频率	Lamp 光源	Mounting Position 可安装位置	Reflector Option 可选反射器	L(mm) 长度(mm)	W(mm) 宽度(mm)
TTX188/3611	220V~ / 50Hz	1 x TL-D36W	ST / MD / ED	stl / optic / AL	1240	157
TTX188/3612	220V~ / 50Hz	2 x TL-D36W	ST / MD / ED	stl / optic / AL	1240	157
TTX188/3621	220V~ / 50Hz	2 x TL-D36W	MD	stl / optic / AL	2480	157
TTX188/3622	220V~ / 50Hz	4 x TL-D36W	MD	stl / optic / AL	2480	157
TTX188/5811	220V~ / 50Hz	1 x TL-D58W	ST / MD / ED	stl / optic / AL	1540	177
TTX188/5812	220V~ / 50Hz	2 x TL-D58W	ST / MD / ED	stl / optic / AL	1540	177
TTX188/5821	220V~ / 50Hz	2 x TL-D58W	ST / MD / ED	stl / optic / AL	3080	177
TTX188/5822	220V~ / 50Hz	4 x TL-D58W	MD	stl / optic / AL	3080	177

Dimension 尺寸图

Unit: mm
单位: mm

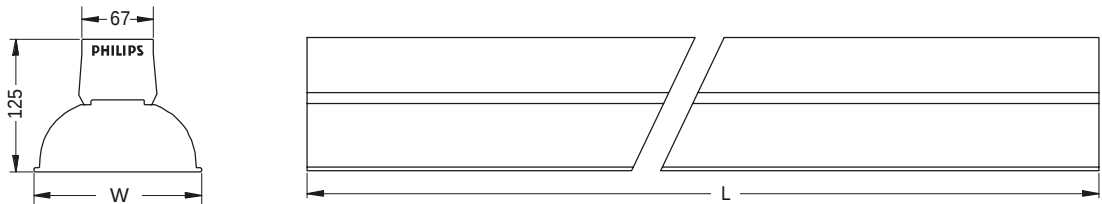

Installation view 安装示意图

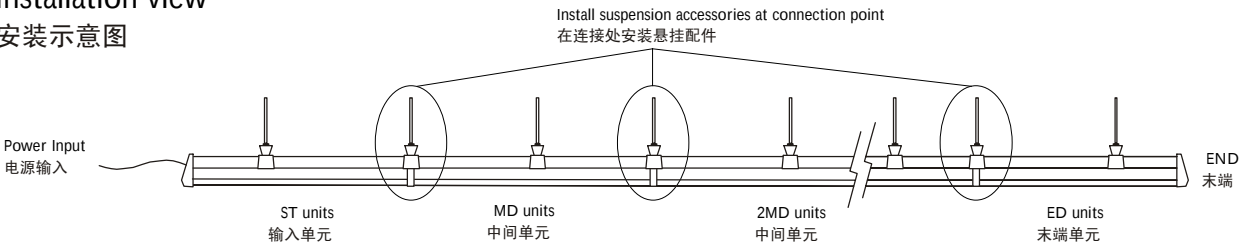


Please note Installation position of each product, related description can be found on type label.
请注意产品标签上的描述，以保证产品安装在正确的位置。

Mounting position 可安装位置		Reflector 可选反射器	
ST units	输入单元	Stl ref	安装铁反射器
MD units	中间单元	optic ref	安装光学反射器
ED units	末端单元	AL ref	安装铝反射器




1. 5 main wires, cross section of core is 2.5mm²
线槽主线为五线，线芯横截面积为2.5mm²
2. Max I: 16A
回路最大电流: 16A
3. Suspension pole, diameter is 10mm
线槽吊管配件直径: 10mm
4. F-mark is only suit for electronic ballast luminaire.
F标记只适用于安装电子镇流器的产品。


- 1 Select your phase supply by connecting the ballast to the required phase
调整镇流器与接线排接线，选择需要的回路，注意保持压降平衡

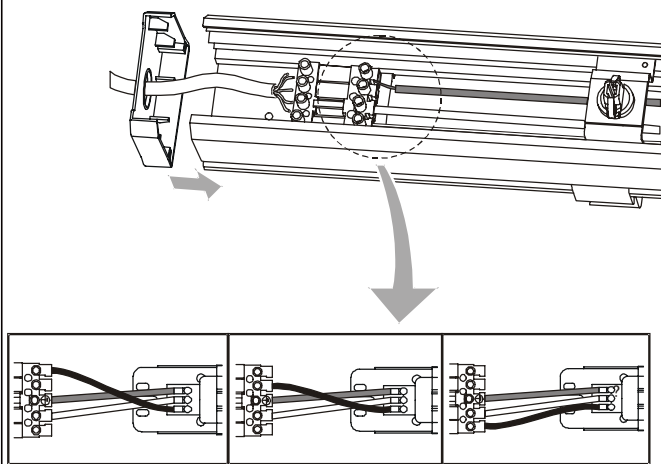


- 2 Install suspension accessories
安装悬挂配件

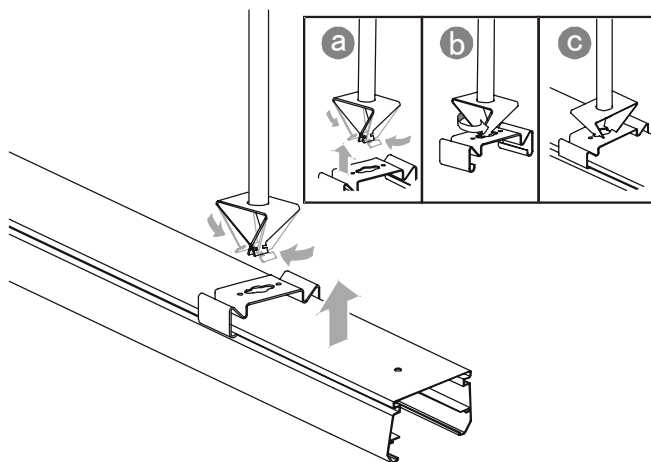


- 3 Connect trunking and main wire, lock trunking with screw
连接导轨接口及接线排后，用螺栓固定导轨接口

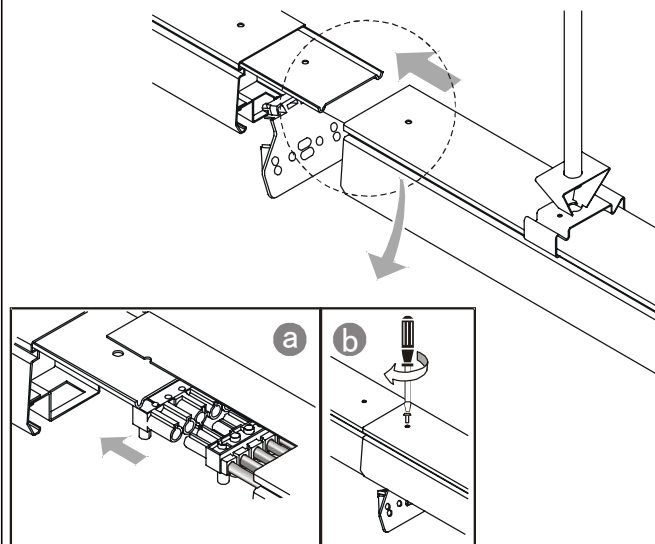

- 4 Fit in the reflector and earthing
安装反射器和接地片

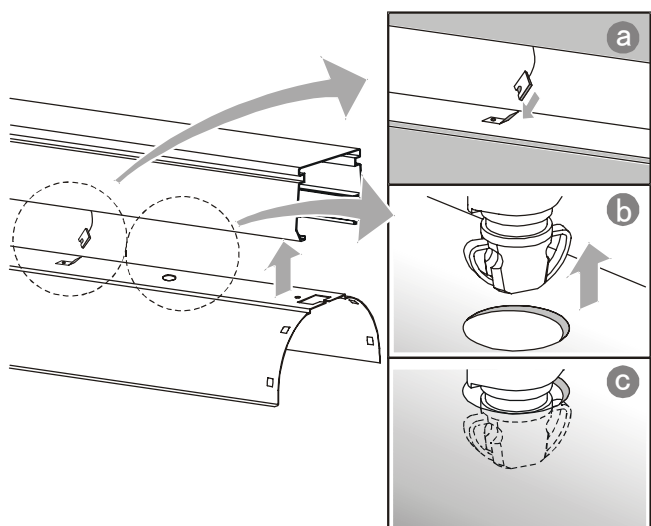

- 5 Fit in the lamp holder and coupling pieces for the reflector
安装灯头及反射器连接片

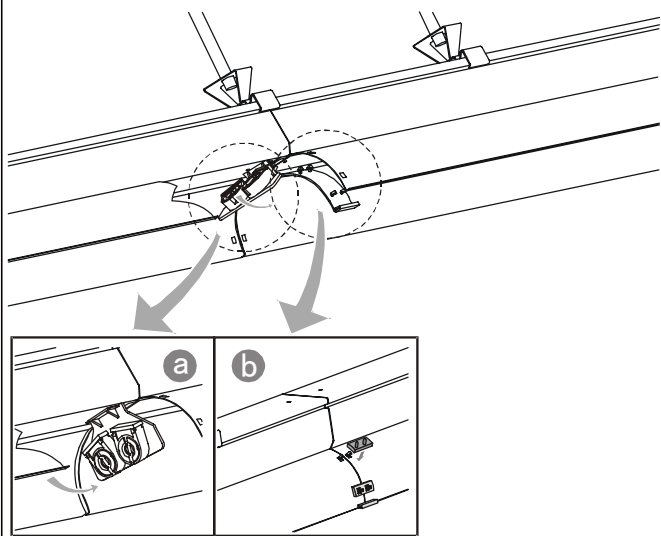

- 6 Fit in lamps and louvers (for optical system)
安装光源及格栅 (如果选配格栅系列)

