





WT120C EL

220 V 240 V




























	System light output (Lm)	System light output Emergency mode (Lm)	Color temperature (K)	kg	_	
WT120C LED22S/840 PSU L1200 EL1	2900	390	4000	2,3	- (1
WT120C LED22S/840 PSU L1200 EL3	2900	390	4000	2,5	_	
WT120C LED40S/840 PSU L1200 EL1	4100	390	4000	2,3	_	
WT120C LED40S/840 PSU L1500 EL3	4100	390	4000	2,5	_	
WT120C LED34S/840 PSU L1500 EL1	3500	390	4000	2,5		
WT120C LED34S/840 PSU L1500 EL3	3500	390	4000	2,7	- _ (J
WT120C LED60S/840 PSU L1500 EL1	6000	380	4000	2,5		_
WT120C LED60S/840 PSU L1500 EL3	6000	380	4000	2,7	_	
WT120C LED80S/840 PSU L1500 EL3	8000	380	4000	2,7	_	

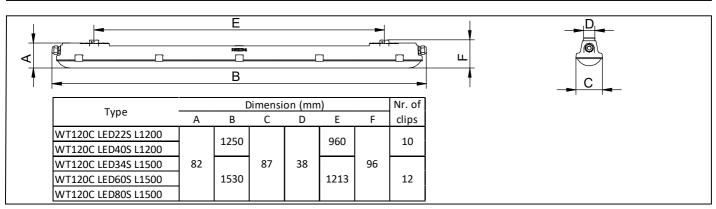


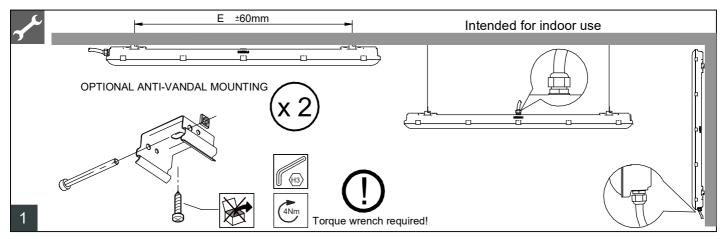

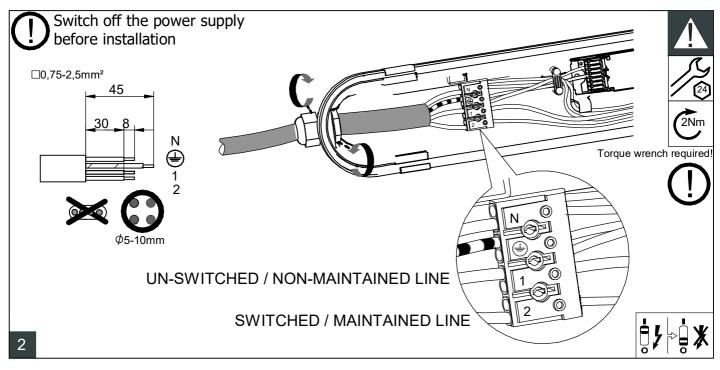

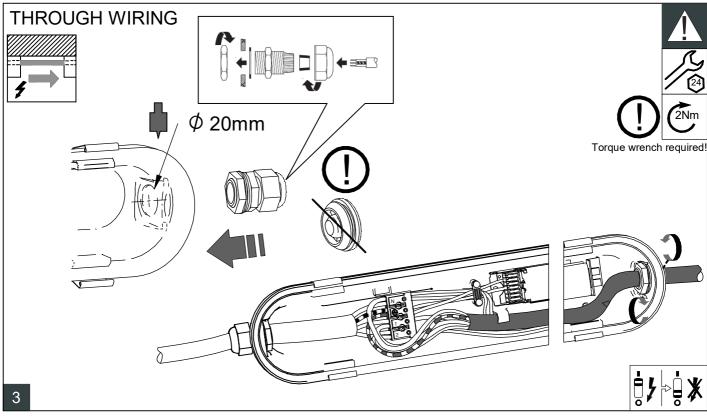

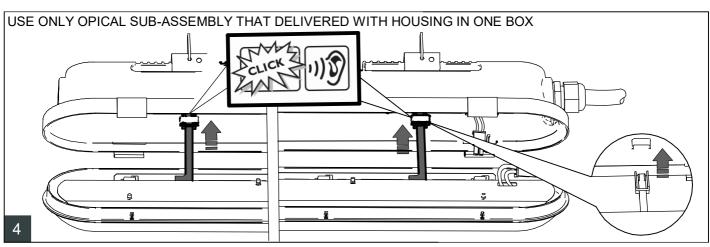


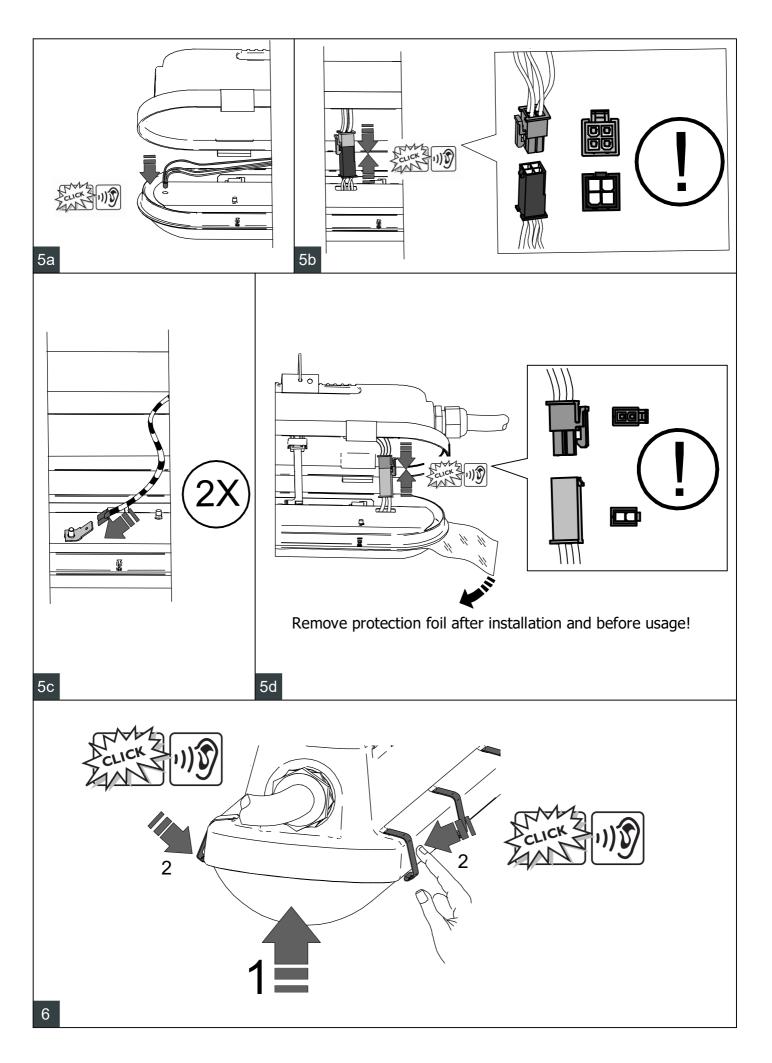


SERVICE (DRIVER REPLACEMENT)

The batteries have a life time expectancy of 4 years.

Light source (LED) is non-user replaceable. The light source contained in this luminaire shall only be replaced by the manufacturer or his agent or a similar qualified person.

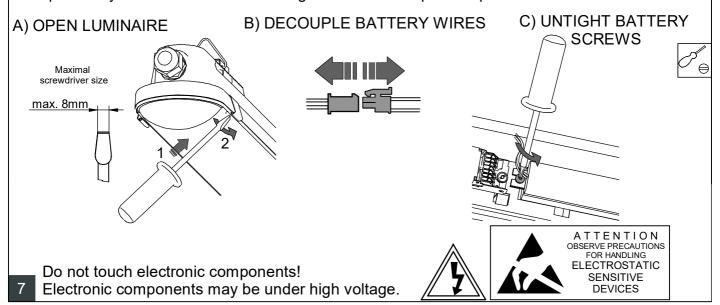


		LED22S	LED34S	LED40S	LED60S	LED80S
Ipeak [A]		15,1	15,1	15,1	17,8	6,02
Twidth [μs]		230	230	230	282	65
Duting / NACI	2.464 to D [- 22			24	10
Drivers / IVICE	B 16A type B [max.]	33	33	33	24	18
Drivers / MCB 10A type B [max.]		20	20	20	15	11
Drivers / MCB 16A type C [max.]		56	56	56	40	30
Drivers / MCB 10A type C [max.]		34	34	34	24	18

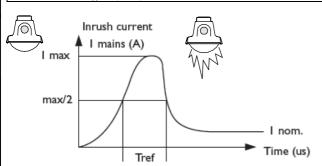

LIGHT INTENSITY DISTRIBUTION CURVES EMERGENCY MODE

— – C 0-180 PLANE

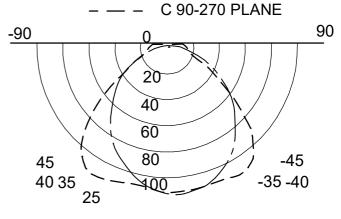

Maintenance instructions

To assure the lighting quality of this unique LED lighting concept there are only a few instructions regarding the maintenance of this LED luminaire:

- * Do not stare into LED light beam.
- * The luminaire shall be installed by a qualified electrician and wired in accordance with the latest IEE electrical regulations or the national requirements.
- * Above average concentracion of sulfur effects the useful lifetime of the product. E.g. Light color changes from white to blue. Typically in chicken & pig farms.

