 


User Manual

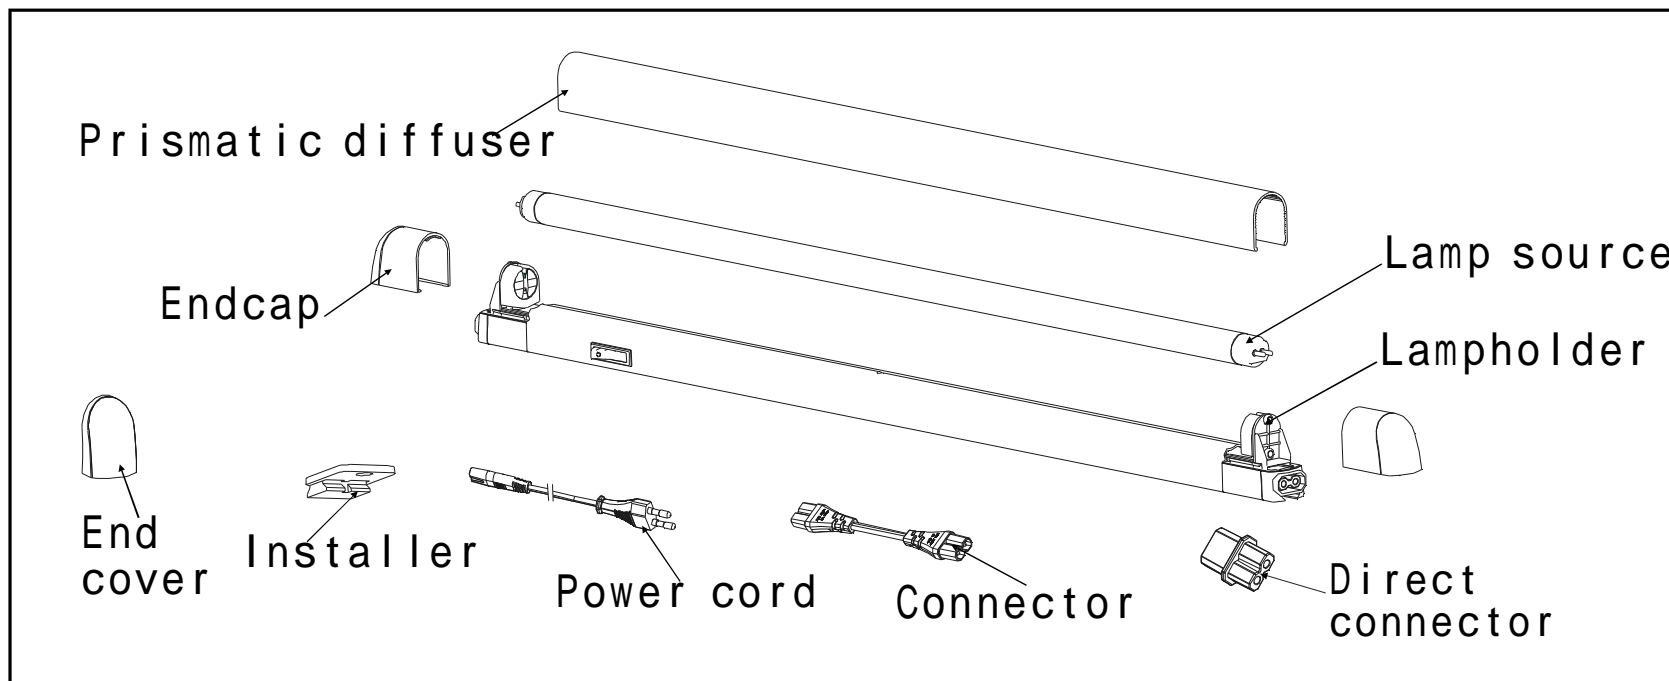

Caution

- Please read the manual carefully before using the product
- Please keep the manual for reference later
- The manufacture will not be held responsible for improper usage or modifications of the product
- Please be careful to avoid damaging the prismatic diffuser while installing
- The total recommended maximum number of battens linked together is eight battens
- Only use the connecting adapters provided by original manufacturer
- Please keep a space of at least 0.5m between lamp source and any combustible object

Operation instruction

- Do not use the product in outdoor environments
- The product is suitable for ceiling or wall mounting
- Do not use in supply voltage exceeding $230V \pm 10\%$
- Do not touch the lamp or shade when the power is switched on
- Do not place readily flammable material near the lamp
- In case of operation failure, please switch off the power and contact your nearest Philips dealer

Electrical Specification

- Voltage: 220~240V/50Hz/60Hz
- Lamp: Philips TL5 28W Max
- Lampholder: G5
- Electrical insulation classification: II
- Current: 0.17A


Maintenance

- In order to ensure optimum performance, please clean the product regularly (recommended twice a year). When cleaning the product, please use material made of soft cotton only.
- Do not use chemical solvents to clean the luminaire, it might damage the surface.


Attention: Please shut off the power supply before changing the lamp!

Toll free service line: 800-820-1201 (for P.R.C)



1. Making batten ready for mounting

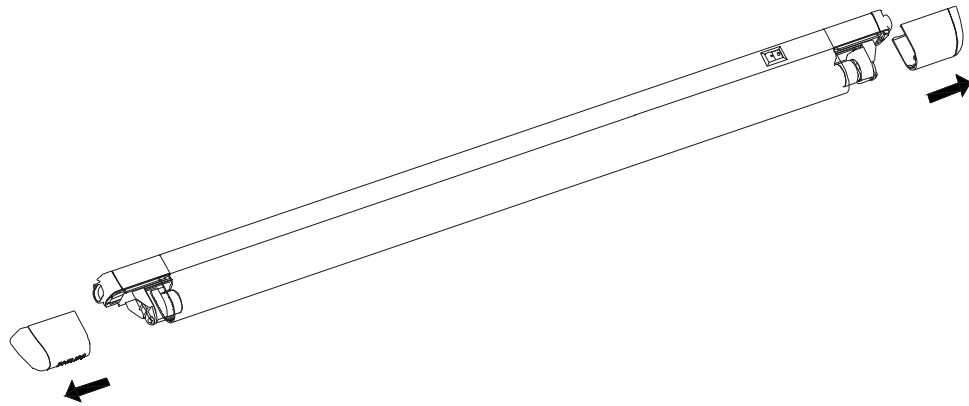


A. Pull out the endcap from the bracket

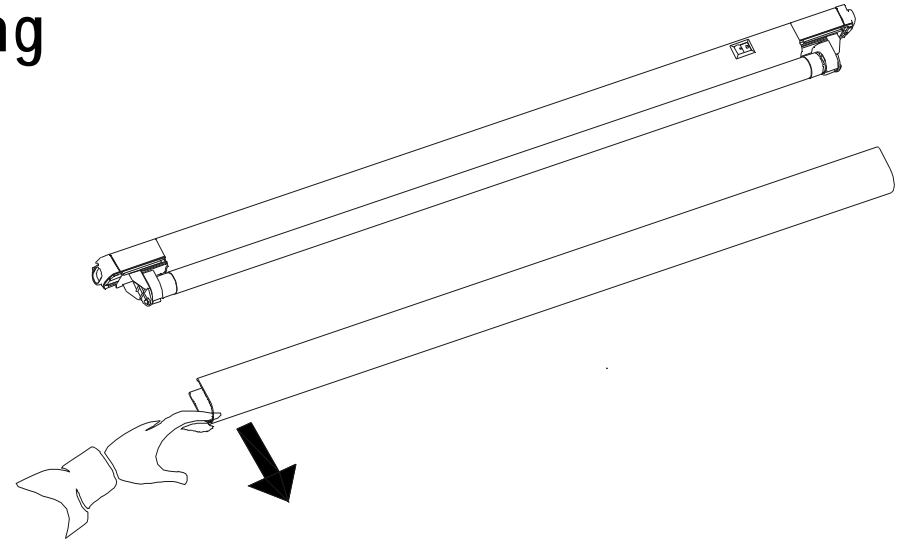

B. Take off the prismatic diffuser gently from one side, by using your fingers.
Caution: Do not press diffuser tightly during installation/ maintenance.

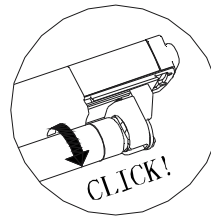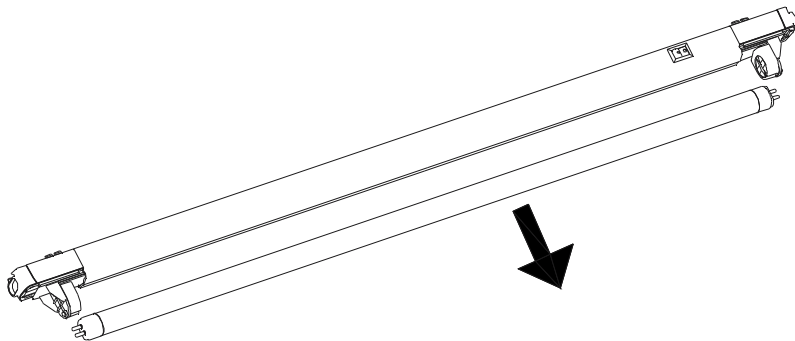


C. Turn round the lamp by 90°

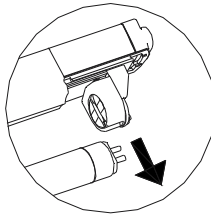




D. Pull out the lamp gently

2.Individual Mounting(mode 1)


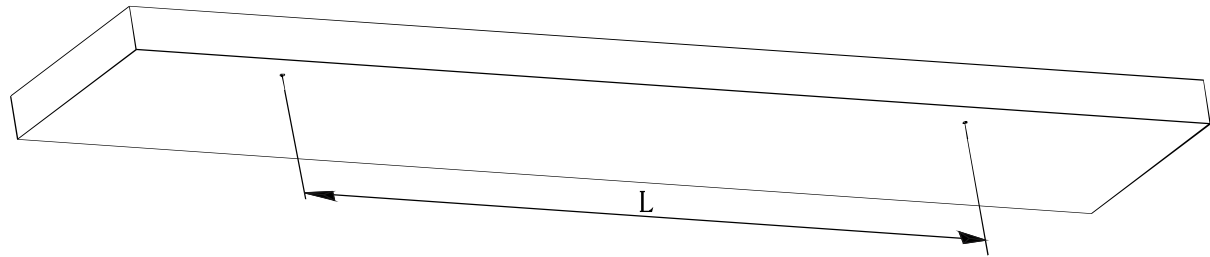


Pre-drill two holes on the ceiling/wall,
at an appropriate distance as below:

14W	L=0.545m
21W	L=0.845m
28W	L=1.145m

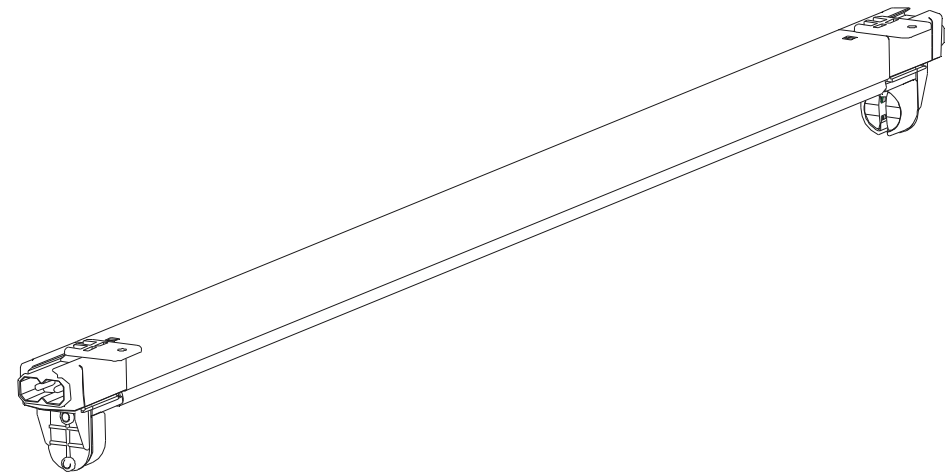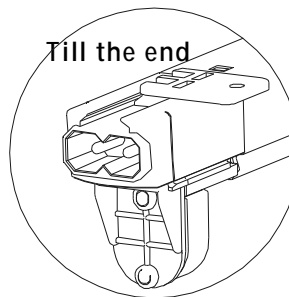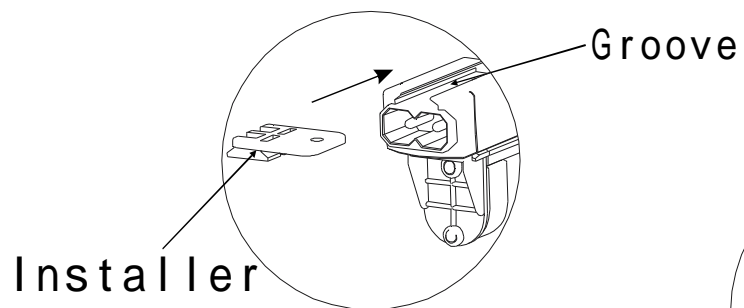


Slide in the installers into
the channel groove, till the end

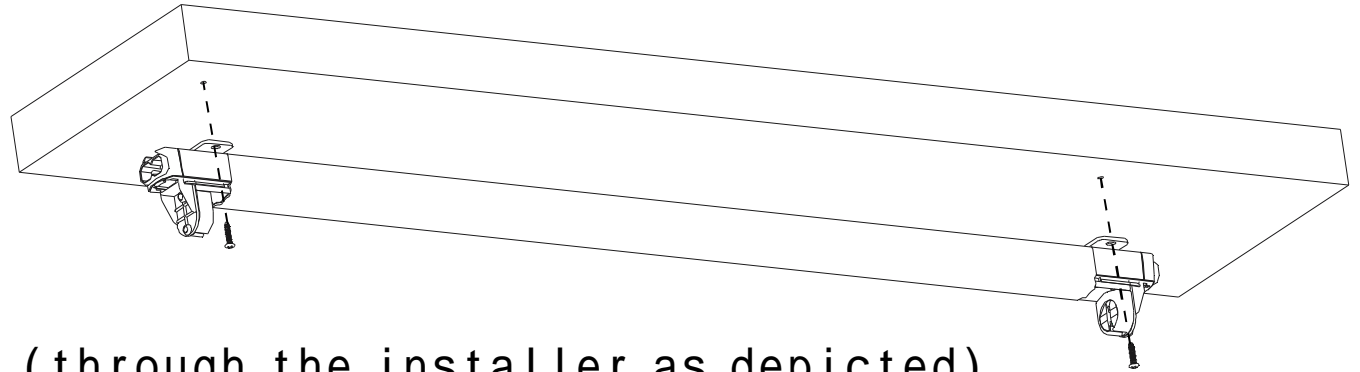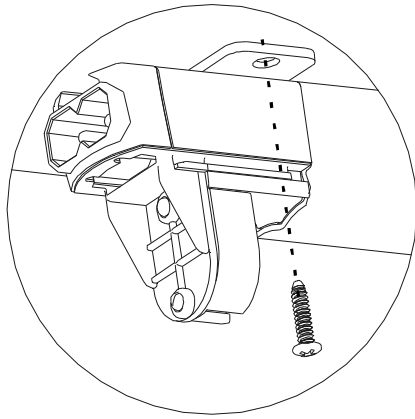

Firmly fix the batten (through the installer as depicted) with provided screws on the ceiling/wall.



(For mounting at difficult to access areas, the Installers can be premounted, and the batten can be slid in conveniently. For this, fix one of the Installers first; slide in one side of the batten to it fully. Fix the second Installer adjacent to the other end; and slide back the batten into it till both sides are firmly in place.)

2. Individual Mounting(mode 2)

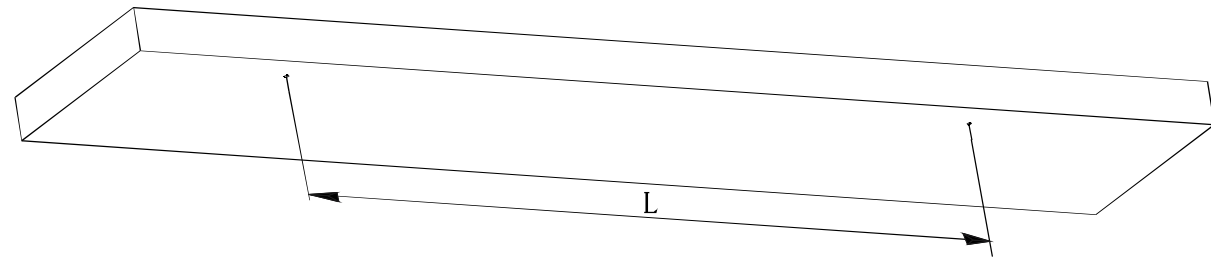



Pre-drill the holes on the ceiling/wall,
at an appropriate distance as below:

14W	L=0.54m
21W	L=0.84m
28W	L=1.14m

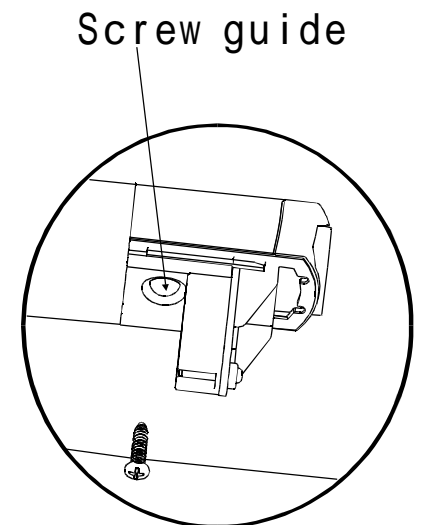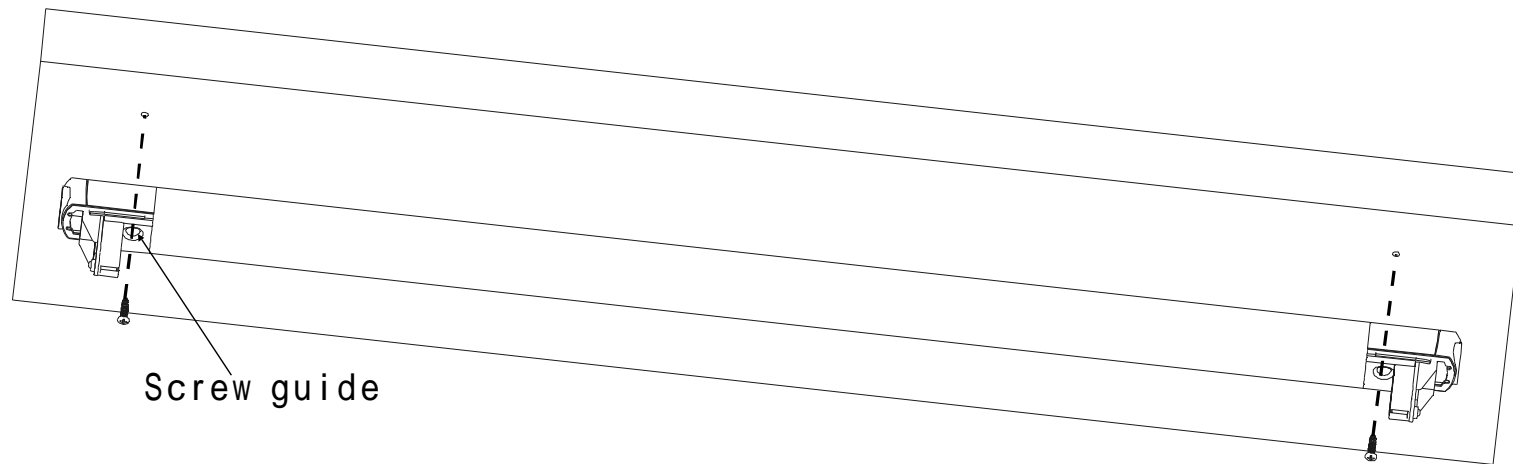


Firmly fix the batten (through the screw guide)
with provided screws on the ceiling/wall.


3. Making batten/battens ready for use

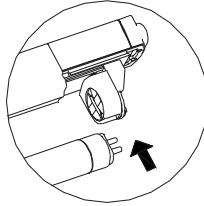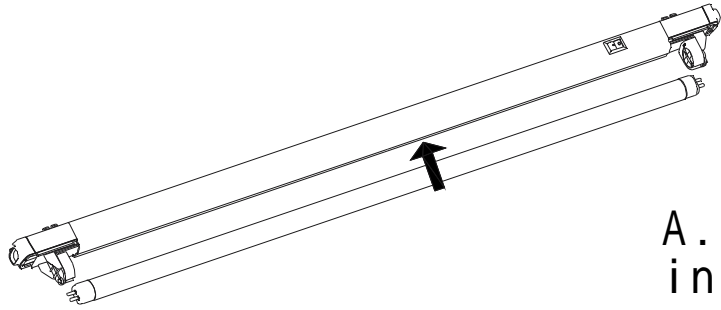


A. Insert the lamp into the lampholder

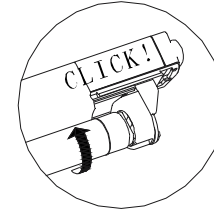



B. Turn round by 90°

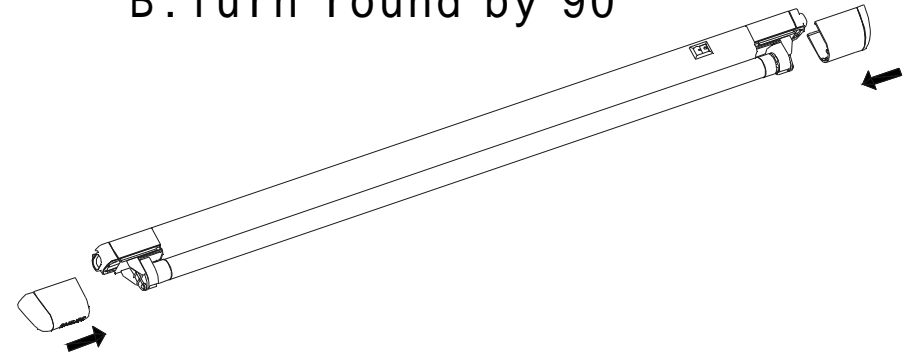

C. Slide the endcaps into the bracket

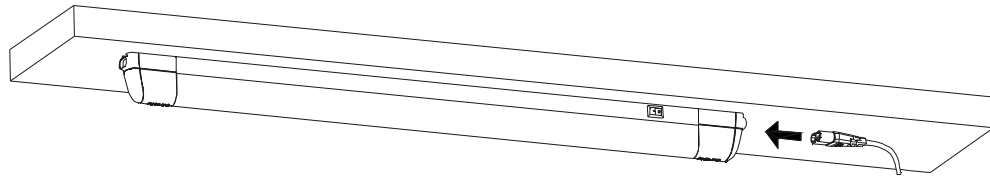


E. Connect the power cord. Put the switch (provided in most versions) in ON position.

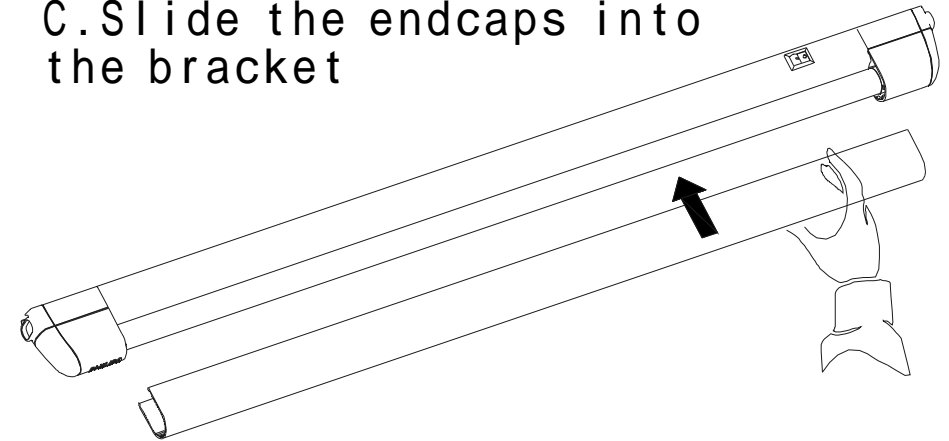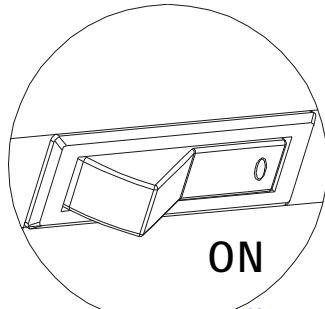


D. Push the prismatic diffuser back into the channel

4. Batten replacement(mode 1)

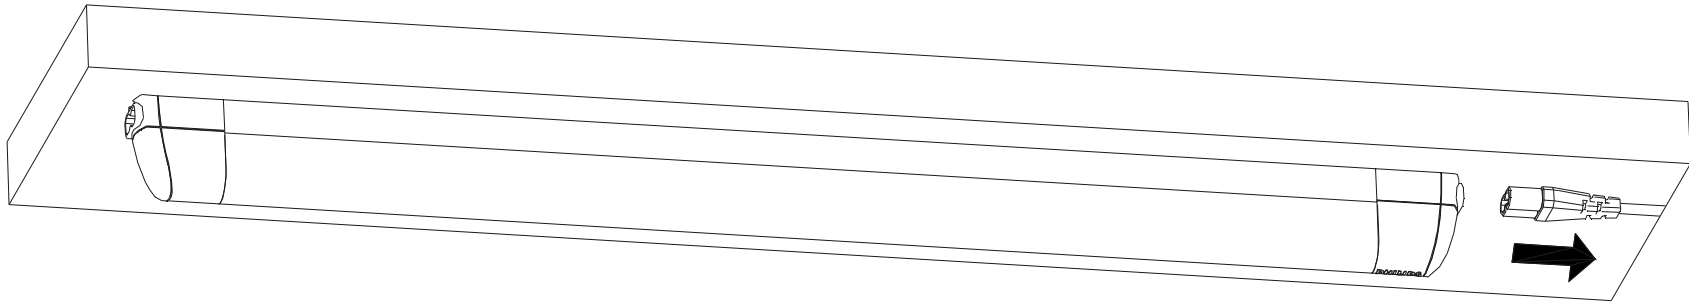


Switch off and pull out the power cord

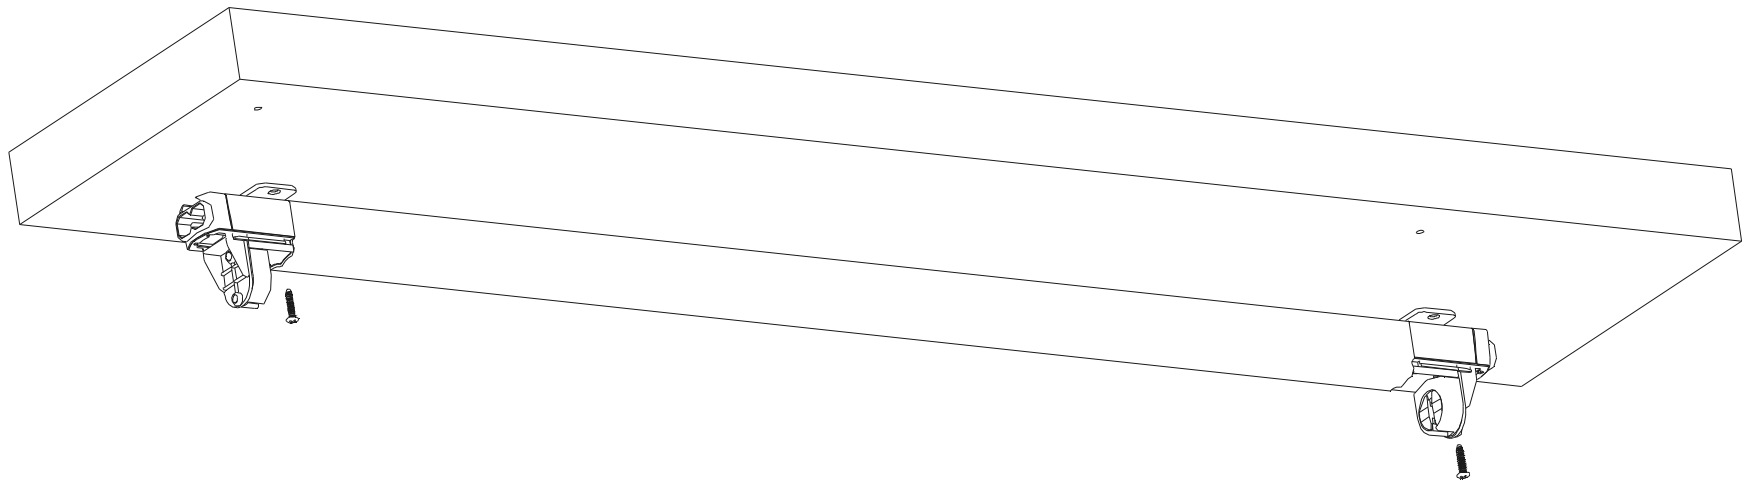


Twist off the screws (on the installer) and take off the batten.


5. Batten replacement(mode 2)

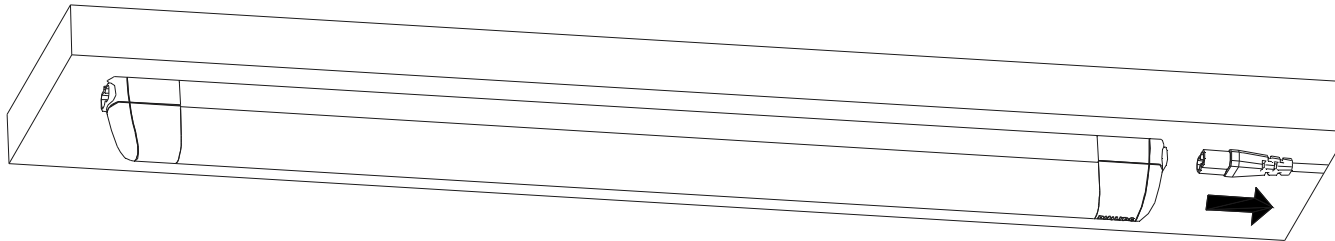

A. Switch off and pull out the power cord

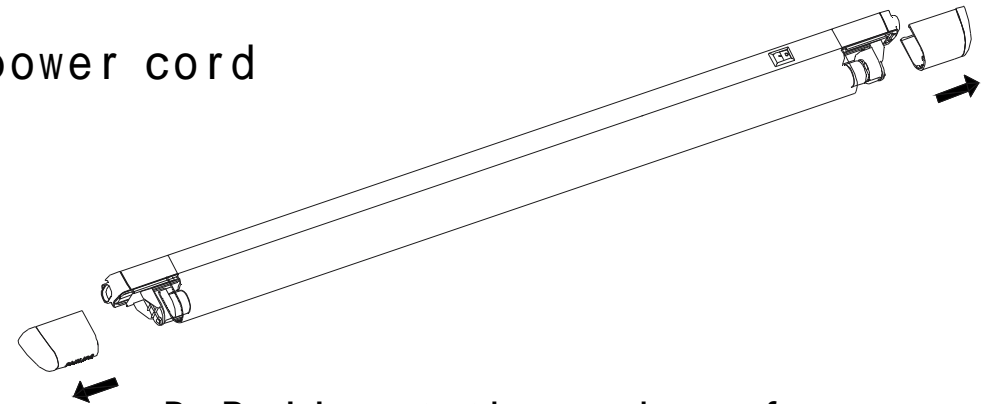


B. Pull out the endcap from bracket



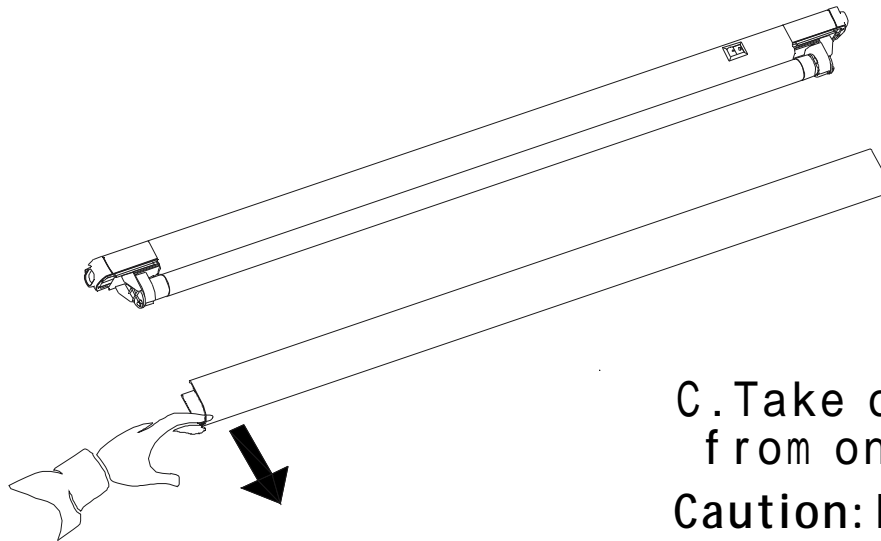


C. Take off the prismatic diffuser gently from one side of it, by using your fingers.
Caution: Do not press diffuser tightly during installation/ maintenance.

D. Turn round the lamp by 90°

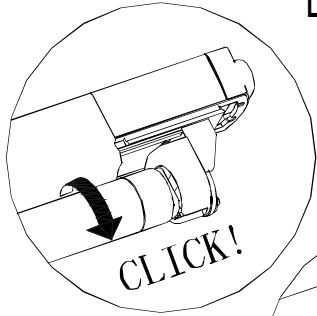


E. Pull out the lamp

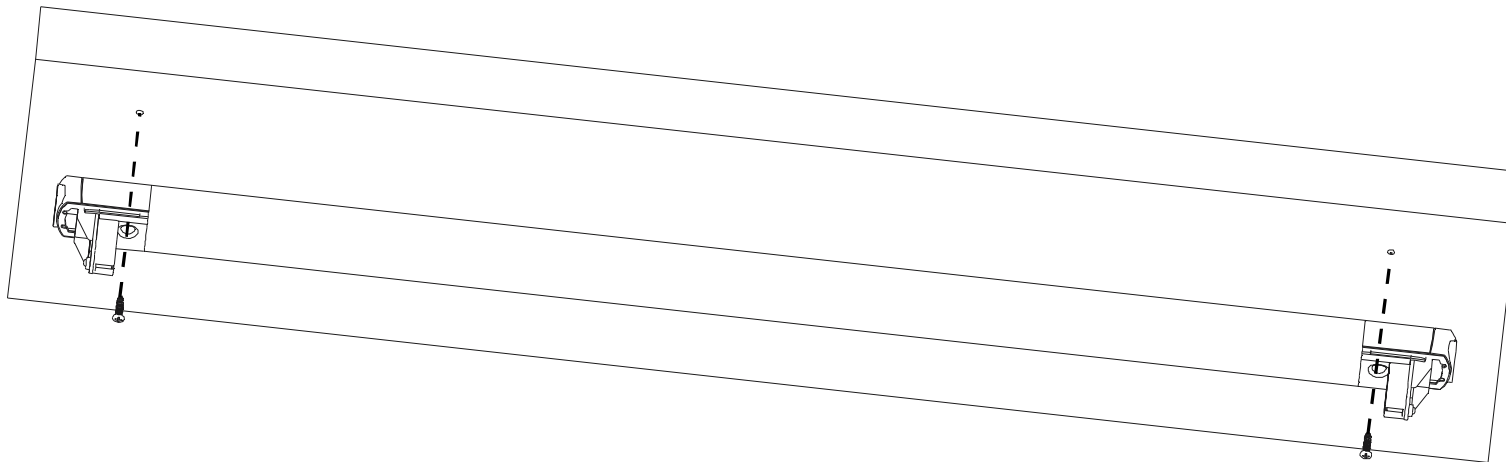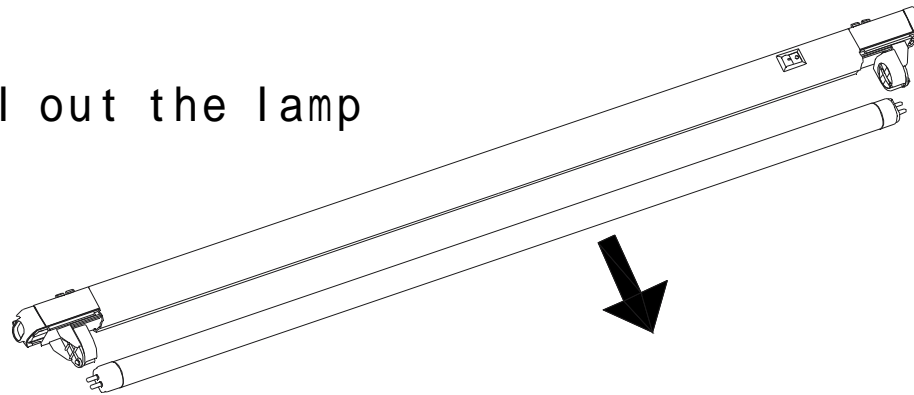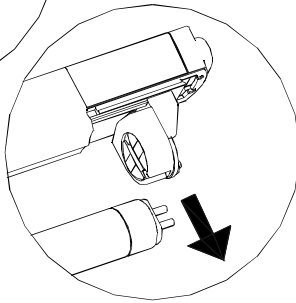


F. Twist off the screws (through the screw guides) and take off the batten.

6. Decorative cap replacement





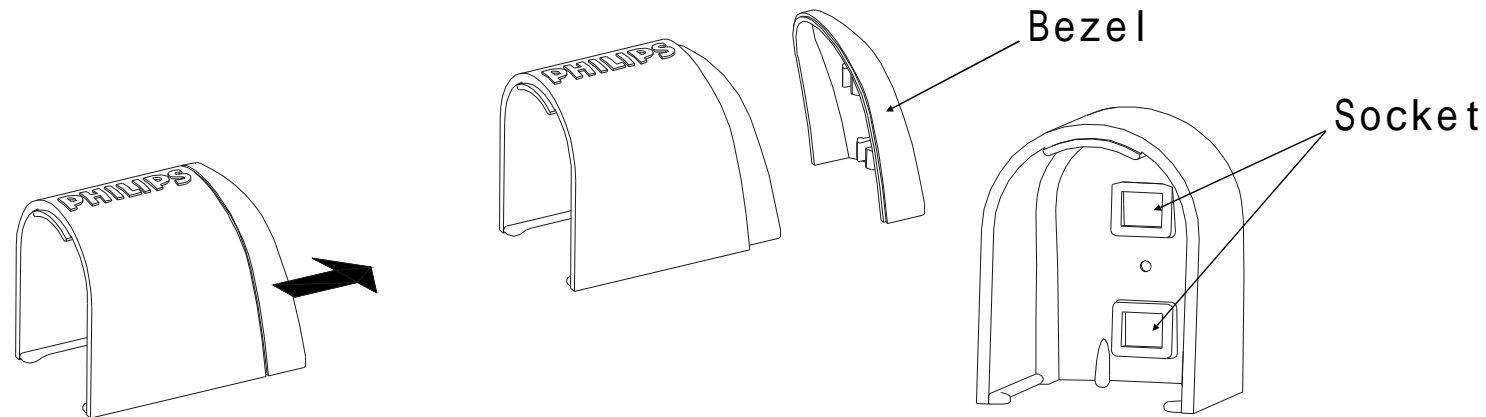


Pull out the metallised bezel from the endcap gently

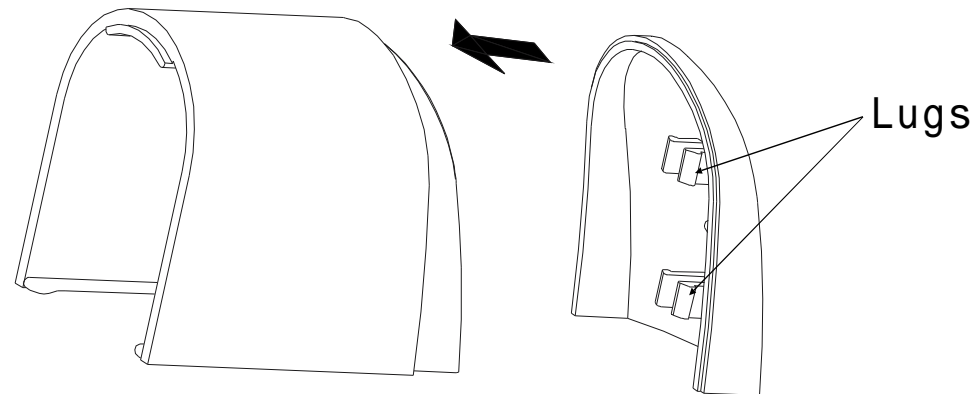





Click fit the new bezel onto the endcap gently- ensuring that the lugs fit properly into the sockets.

7.Linkage Instruction(mode 1)

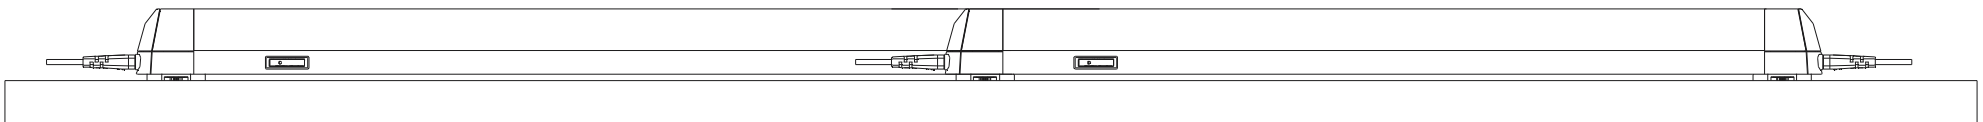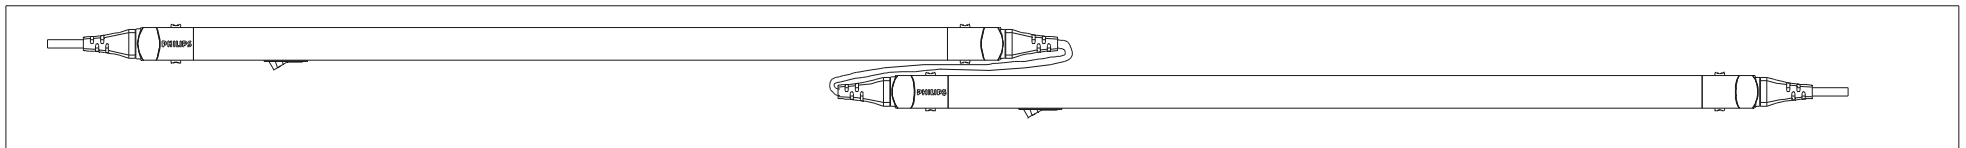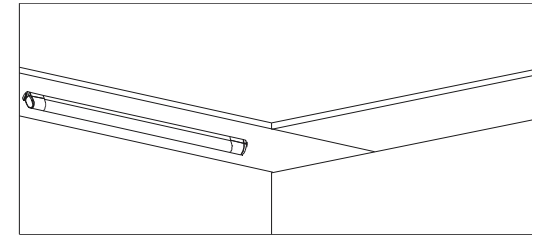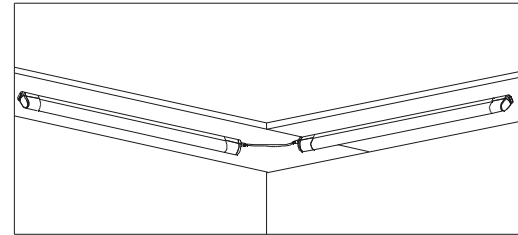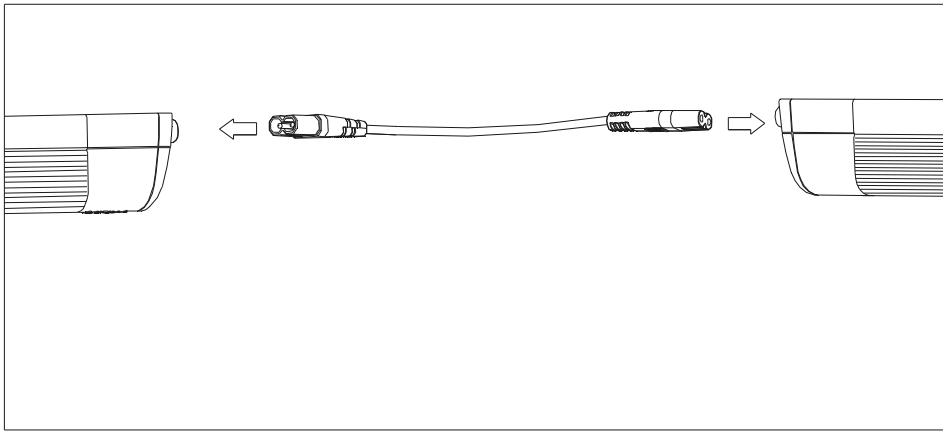

Inter connect two battens with the provided connector as depicted.

7.Linkage Instruction(mode 2)

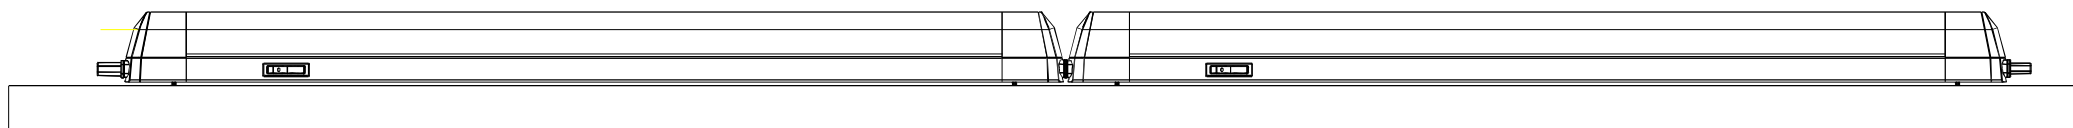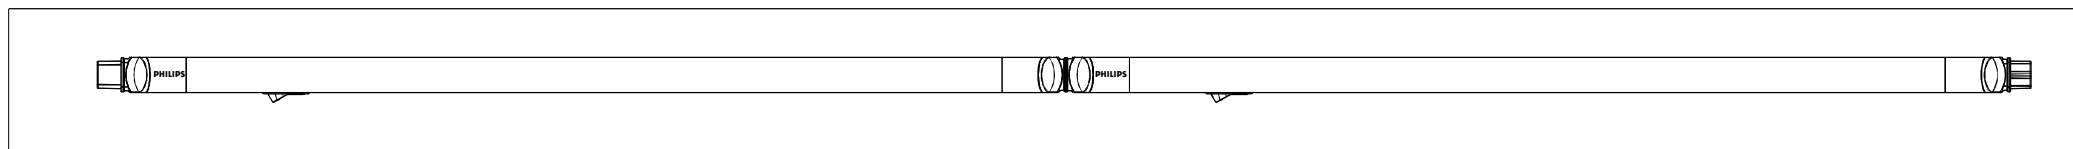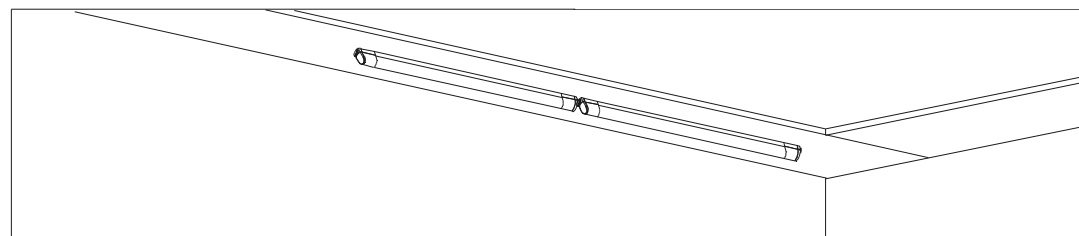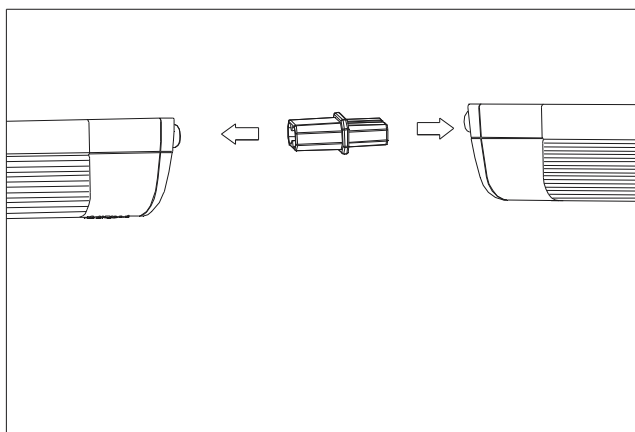

Inter connect two battens with the provided direct connector as depicted.
Caution: Linkage battens(mode1&mode2) (max. upto eight battens)