## IS:1101

# Lytecaster 1001, 1101 & 2001 UNIFRAME Series Trims.

1101 Series Trims for use with 1101 Series Frame-In Kits only

1001 Series Trims for use with 1001 Series Frame-In Kits only.

2001 Series Trims for use with 2001 Series Frame-In Kits only.

### Read and understand these instructions before installing luminaire.

This luminaire is intended for installation in accordance with the National Electrical Code and Local Regulations. To assure full compliance with local codes and regulations, check with your local electrical inspector before installation. To prevent electrical shock, turn off electricity at fuse box before proceeding. Retain these instructions for maintenance reference.

### CAUTION: (RISK OF FIRE) THIS IS A NON-IC RATED FRAME-IN KIT.

DO NOT INSTALL INSULATION ABOVE OR WITHIN 3 INCHES (76mm) OF ANY PART OF LUMINAIRE.

**CAUTION:** USE ONLY WITH FRAME-IN KITS PROVIDED BY LIGHTOLIER. USE OF OTHER MANUFACTURER'S FRAME-IN KITS MAY VOID THE UNDERWRITERS LABORATORIES LISTING AND COULD CONSTITUTE A FIRE HAZARD.

CAUTION: BEFORE INSTALLING FRAME-IN KIT AND REFLECTOR TRIM, READ ALL MARKINGS ON FRAME-IN KIT AND REFLECTOR TO DETERMINE LAMP WATTAGE AND TYPE APPLICABLE FOR YOUR INSTALLATION.

1 FRAME-IN KIT INSTALLATION: See Frame-In Kit Instruction Sheet for installation procedure.

2 POSITION TRIM CLIPS (Figure A): Trim Clips (Quantity (4) on 1101 and 1001 series Frame-In Kits, Quantity (3) on 2001 series Frame-In Kits) must be positioned to extend inward towards center of aperture as shown in Figure A. Rotate into position if necessary.

### 3 SNAP-ON (Figure B):

Insert Socket Cup into neck of reflector. Make sure springs of socket cup snap into reflector slots.

**NOTE**: For optimum fixture performance, Lightolier recommends the Frame-In Kit, Lamp Type and Lamp Position combinations shown in the chart to the right. (Vertical trims only.)


## 4 PUSH UP (Figure C):


Push Reflector Trim straight up until it is tight against the ceiling.

NOTE: To remove Reflector Trim, turn Reflector Trim counter-clockwise while pulling downward.

### AUXILARY TRIM 1101HCLAUX, 1101HCDAUX

- 1.SNAP-ON SOCKET CUP see (Fig. B.) Also remove SCREW RING of AUXILARY LAMP HOLDER (Fig.B.1).
- 2.Insert AUXILARY LAMP HOLDER in AUXILARY HOLE of trim.
- 3. Then tighten SCREW RING to sandwich in place. See (FIG B.1). Then PUSH-UP Reflector. see (FIG.C.).

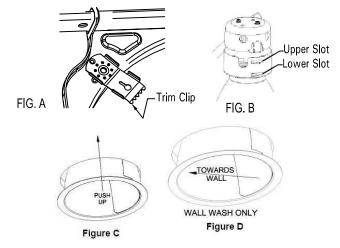

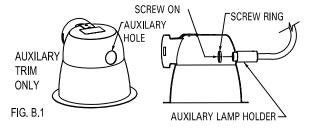

001HIDED SERIES

CFL FRAME-IN KITS	UPPER TRIM SLOT		LOWER TRIM SLOT
2001F SERIES	18W TRIPLE TUBE 13W QUAD TUBE		13W TRIPLE TUBE
1001F SERIES	26W TRIPLE TUBE 13W QUAD TUBE		18W TRIPLE TUBE 13W TRIPLE TUBE
1101F SERIES	42W TRIPLE TUBE 26W QUAD TUBE 18W QUAD TUBE		32W TRIPLE TUBE 26W TRIPLE TUBE 18W TRIPLE TUBE
H <b>I</b> D FRAME-IN KITS		FOR OPTIMAL PERFORMANCE USE SLOT POSITION LISTED BELOW	
1101HIDED SERIES		LOWER TRIM SLOT ED17 M.H.	

UPPER TRIM SLOT ED17 M.H.

© 2016 Philips Lighting Holding B.V. All rights reserved. Specifications are subject to change without notice. www.philips.com/luminaires

## IS:1101

For Wall Wash Series Trims: Position the trim so that wall wash reflector opening is pointed towards the wall to be illuminated before completing step 4 (Figure D). This direction is indicated by a label on the Frame-In Kit.

For Cross Blade Series Trims: Install Trim as instructed above in steps 1-4. For re-lamping or to align the cross blade assembly to the ceiling, remove the cross blade cone assembly from the trim by pulling the cone portion of the assembly straight down (it may be necessary to repeat this at multiple positions to work the cross blade assembly out of the reflector). To replace, align blades and push the cross blade cone assembly straight up into main trim reflector until each of the 3 cone retention clips are fully engaged in the groove on the exterior of the cone.

For Lens Series Trims: Install Trim as instructed above in steps 1-4. For re-lamping, remove just the lens support cone from the trim by inserting a finger between the lens and the support cone, gripping the cone and pulling straight down (it may be necessary to repeat this at multiple positions to work the cone out of the reflector). The lens will hang from the reflector by a chain located behind the cone. To replace the lens and cone, place the lens on top of the support cone and push straight up into main trim reflector. Make sure the lens chain is hidden behind the cone and does not interfere with the full engagement of the 3 cone retention clips into the groove on the exterior of the cone.



© 2016 Philips Lighting Holding B.V. All rights reserved. Specifications are subject to change without notice. www.philips.com/luminaires

Philips Lighting North America Corporation 200 Franklin Square Drive Somerset, NJ 08873 USA Phone: 835-486-2216 Philips Lighting Canada Ltd. 28 I Hillmount Road Markham ON, Canada L6C 2S3 Phone: 800-668-9008

IS:1101 Feb-16 page 2 of 2