
PHILIPS

READ THESE INSTRUCTIONS CAREFULLY BEFORE INSTALLING THIS FIXTURE CAUTION: THE ELECTRICAL POWER MUST BE DISCONNECTED BEFORE OPENING THE FIXTURE FAILURE TO FOLLOW THE INSTALLATION DOCUMENTATION OR OPERATING THIS PRODUCT OTHERWISE THAN FOR ITS INTENDED USE VOIDS THE WARRANTY

- 1. Compress the latch to release the access door
- 2. Install the bird guard for \(\text{\gamma} 1.66''\) tenon before sliding the fixture onto the tenon. See the important note below
- 3. Disconnect power and slide the fixture onto the tenon. See table for approximate penetration Horizontal angle can be adjusted in 2.5° steps

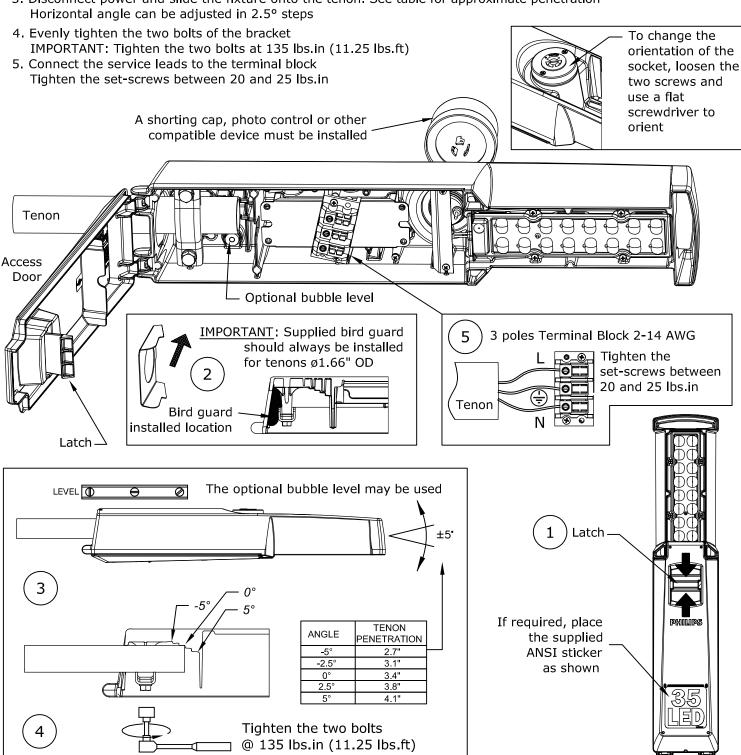

MINIVIEW

SVS