

INSTALLATION INSTRUCTIONS

FIELD INSTALLED FUSE KIT EC14, EC18

INSTALLATION PROCEDURE

1. OPEN DOOR AND REMOVE REFLECTOR AS DESCRIBED IN INSTRUCTIONS SUPPLIED WITH LUMINAIRE.
2. UNPLUG 6 POSITION RECEPTACLE ① FROM 6 POSITION PLUG ②, AS SHOWN IN FIGURE 1.
3. PULL POWER INPUT HARNESS WIRES BACK INTO HOUSING.
4. REMOVE SEALING COMPOUND AND DISCARD HARNESS.
5. ASSEMBLE FUSE KIT ③ INTO HOUSING, AS SHOWN IN FIGURE 2, USING (2) 8-32 X 1/4" SCREWS ④.
6. PLUG 6 POSITION PLUG ② INTO FUSE KIT ③. ALL PLUGS AND RECEPTACLES MUST BE POSITIONED IN TOP RIGHT HAND CORNER AREA TO PREVENT THEM FROM OVERHEATING.
7. PULL FUSE KIT WIRES OUT OF HOUSING THROUGH WIREWAY, RE-USING SEALING COMPOUND TO FILL HOLE.
8. INSTALL FUSE(S) INTO FUSEHOLDER(S). REFER TO CHART FOR RECOMMENDED FUSE AMPERAGE AND TYPE. FUSES MAY BE ORDERED FROM YOUR ELECTRICAL DISTRIBUTOR.
9. RE-INSTALL REFLECTOR AND DOOR.

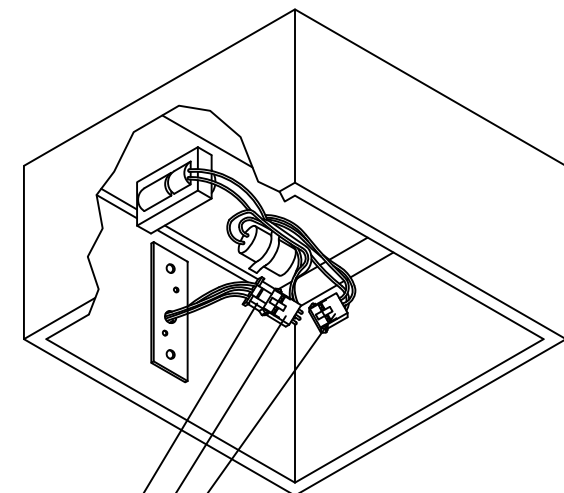


FIGURE 1

- ③ 3 POSITION RECEPTACLE TO REFLECTOR
- ② 6 POSITION PLUG TO BALLAST
- ① 6 POSITION RECEPTACLE TO POWER INPUT

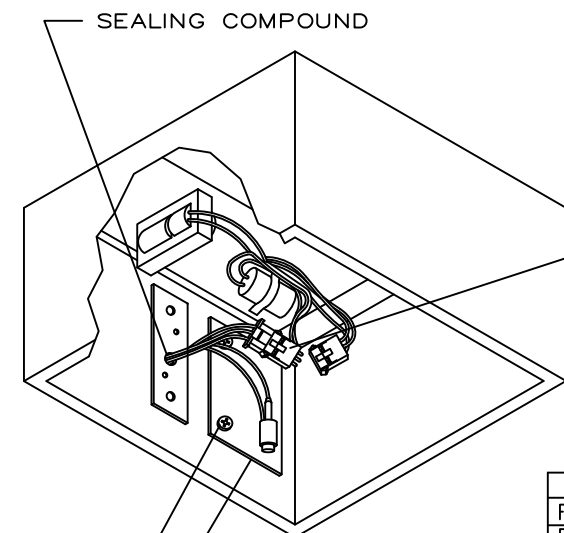


FIGURE 2

- ③ FUSE KIT
- ④ (2) 8-32 X 1/4" SCREWS

MUST BE IN TOP RIGHT HAND CORNER

WATTAGE	LAMP TYPE	VOLTAGE	RECOMMENDED FUSE AMPS	NO. OF FUSES PER HEAD
175	MH	120	5	1
		208	3	2
		240	3	2
		277	2	1
		480	2	2
150	HPS (S55,S56)	120	10	1
		208	5	2
		240	5	2
		277	5	1
		480	5	2
100	MH	120	6	1
		208	4	2
		240	3	2
		277	3	1
100	HPS	120	7	1
		208	5	2
		240	3	2
		277	3	1
		480	3	2
400	ALL	120	15	1
		208	8	2
		240	8	2
		277	5	1
		480	5	2
70	HPS	120	5	1
		208	3	2
		240	3	2
		277	2	1
		480	2	2

FUSE ORDERING INFORMATION				
FOR 120,208,240,277 USE BUSSMANN TYPE GLR				
FOR 480 USE BUSSMANN TYPE KTK				
WATTAGE	LAMP TYPE	VOLTAGE	RECOMMENDED FUSE AMPS	NO. OF FUSES PER HEAD
250	ALL	120	8	1
		208	5	2
		240	5	2
		277	4	1
		480	3	2
400	ALL	120	15	1
		208	8	2
		240	8	2
		277	5	1
		480	5	2