

**LYTEJACK STEMS  
INSTRUCTIONS FOR ASSEMBLY AND INSTALLATION****READ AND UNDERSTAND THESE INSTRUCTIONS BEFORE INSTALLING FIXTURE.**

This fixture is intended for installation in accordance with the National Electrical Code and local regulations. To assure full compliance with local codes and regulations, check with your local electrical inspector before installation. To prevent electrical shock, turn off electricity at fuse box before proceeding.

**Retain these instructions for maintenance reference.**

**THE LYTEJACK STEM IS USED TO LOWER 8600 SERIES LYTEJACK FIXTURES AND IS AVAILABLE IN 12", 18", 30" AND 42" DROPS.**

**FOR CONNECTING LYTEJACK STEMS TO 8600 SYSTEM POWER JACKS.**

1. Insert the top of the stem (Fig. 1) fully into the POWER JACK receptacle. Verify engagement by exerting a LIGHT downward pull. The stem should not release from the POWER JACK.
2. To remove the STEM, grasp the uppermost STEM, twist and pull firmly downward until STEM is disengaged from the POWER JACK receptacle.

**CAUTION: NO MORE THAN TWO STEMS SHOULD BE JOINED TOGETHER WITH A TOTAL DROP OF NOT MORE THAN 57".**  
**WHEN 2 STEMS ARE USED, THE LONGER STEM SHOULD BE THE UPPERMOST STEM.**

**FOR CONNECTING LYTEJACK FIXTURES TO LYTEJACK STEMS**

3. Insert the fixture STEM fully into the bottom portion of the LYTEJACK STEM. Verify engagement by exerting a LIGHT downward pull.
4. To remove the fixture from the STEM: FIRST ALLOW THE FIXTURE TO COOL. Hold the fixture in one hand, the STEM in the other and twist and pull apart.

**NOTE:** The 30" and 42" STEMS have a "CONCEALED FLEX" TO ABSORB IMPACT AND SHOULD BE INSERTED AND REMOVED WITH CARE (Fig. 2).

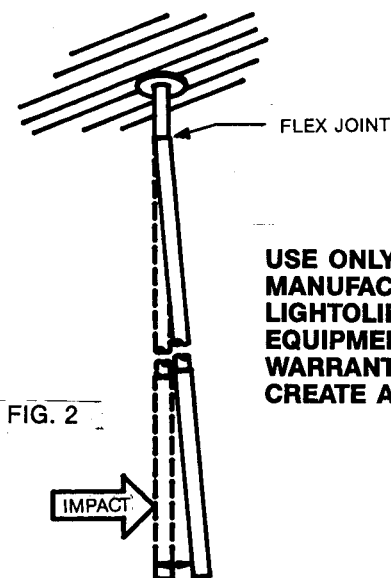


FIG. 2

**USE ONLY WITH JACKS  
MANUFACTURED BY  
LIGHTOLIER. USE OF OTHER  
EQUIPMENT VOIDS  
WARRANTY AND MAY  
CREATE A HAZARD.**

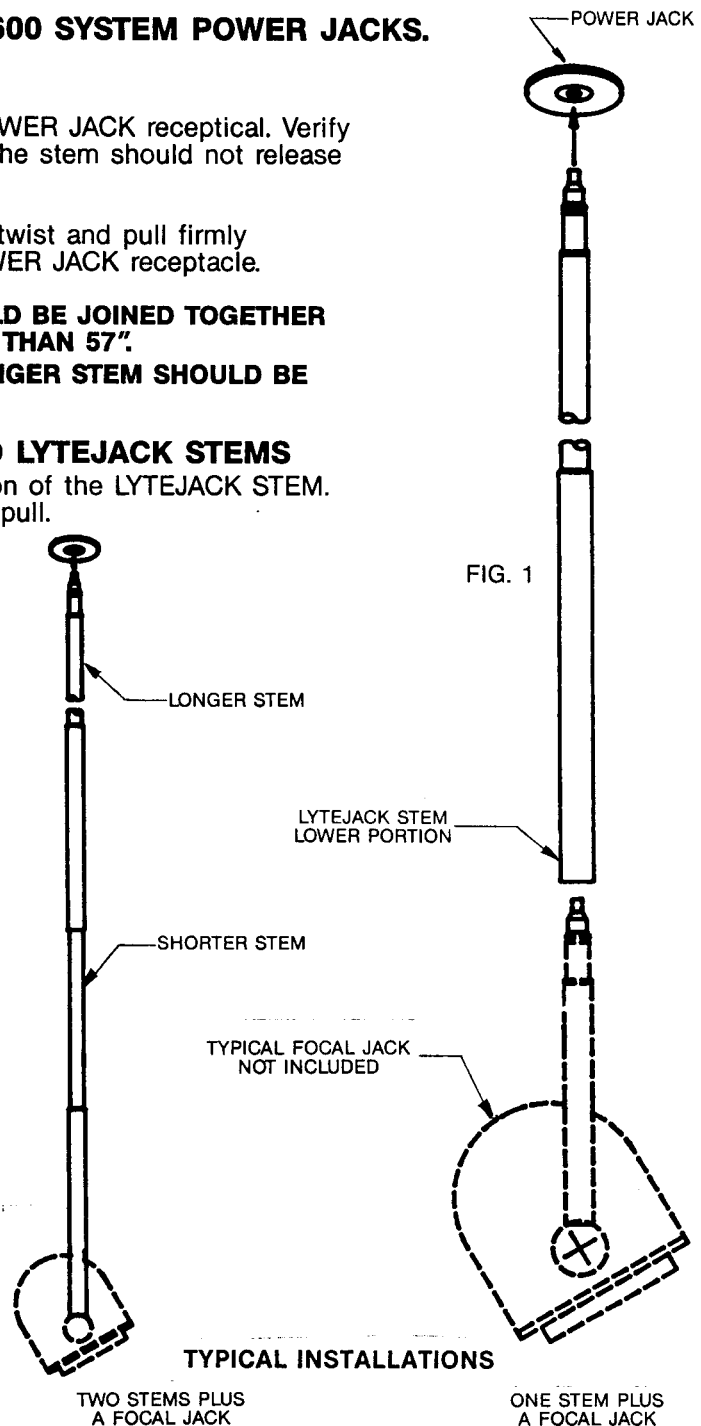


FIG. 1

TWO STEMS PLUS  
A FOCAL JACK

ONE STEM PLUS  
A FOCAL JACK