

INSTALLATION INSTRUCTIONS FOR RECESSED SPOTLED MUD-IN KIT**Read and understand these instructions before installing luminaire.**

This luminaire is intended for installation in accordance with the National Electrical Code and Local Regulations. To assure full compliance with local codes and regulations, check with your local electrical inspector before installation. To prevent electrical shock, turn off electricity at fuse box before proceeding.

Retain these instructions for maintenance reference.**Items needed for Installation:**

1. Phillips head screwdriver
2. Joint compound and related plaster tools
3. LLABR Series Trim

Step 1:

Place Mud-in Kit (MIK) within Frame-in kit (FIK) and flush with ceiling. Use the slots and holes (both sides) to hold the MIK in place, with the provided screws as shown in figure 2..

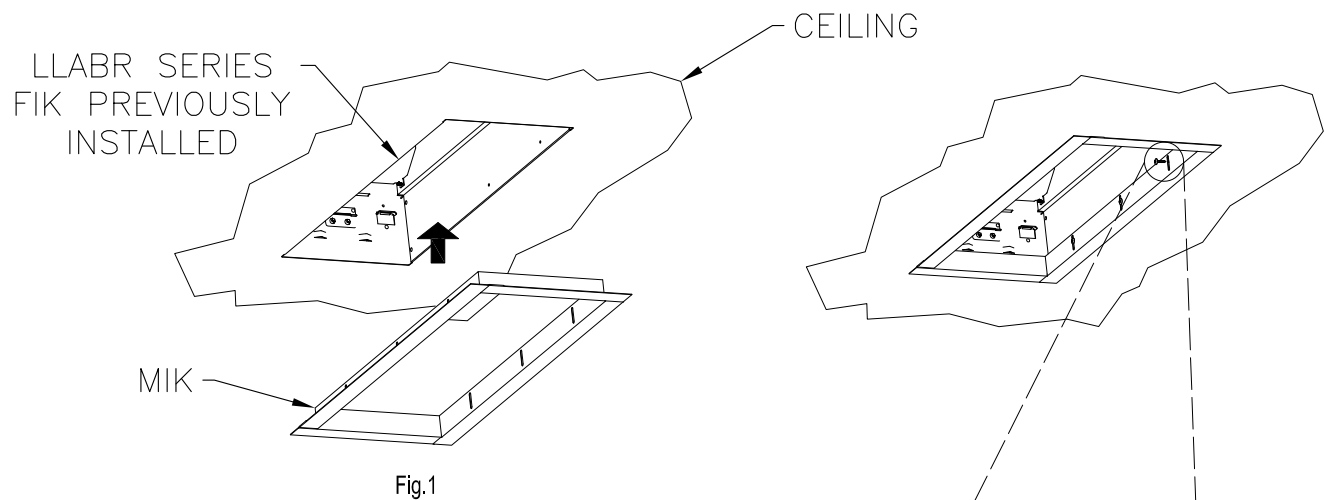


Fig.1

Fig.2

Step 2:

Add additional drywall screws as needed, once secured use joint compound to plaster MIK into ceiling. Use multiple layers and sand as necessary to have a smooth transfer from MIK to the surrounding ceiling. Paint ceiling and then install LLABR Series Trims per IS:LLABR TRIM to complete installation.