

INSTALLATION INSTRUCTIONS FOR RECESSED SPOTLED FINISHING SECTION (LIGHT ENGINE)**Read and understand these instructions before installing luminaire.**

This luminaire is intended for installation in accordance with the National Electrical Code and Local Regulations. To assure full compliance with local codes and regulations, check with your local electrical inspector before installation. To prevent electrical shock, turn off electricity at fuse box before proceeding.

Retain these instructions for maintenance reference.Items needed for Installation:


1. Phillips head screwdriver or cordless driver
2. LLABR Series Rough-in and Finishing section

NOTE: If installing the Finishing Section, follow steps 1-4. If removing the Finishing Section, follow steps 1-4 and actions in reverse.

NOTE: For installation of accessories, skip to page 3.


Step 1:

Locate the set of hinges on the rough-in section as shown in (Fig. 1). These hinges are only on one side of the rough-in section.

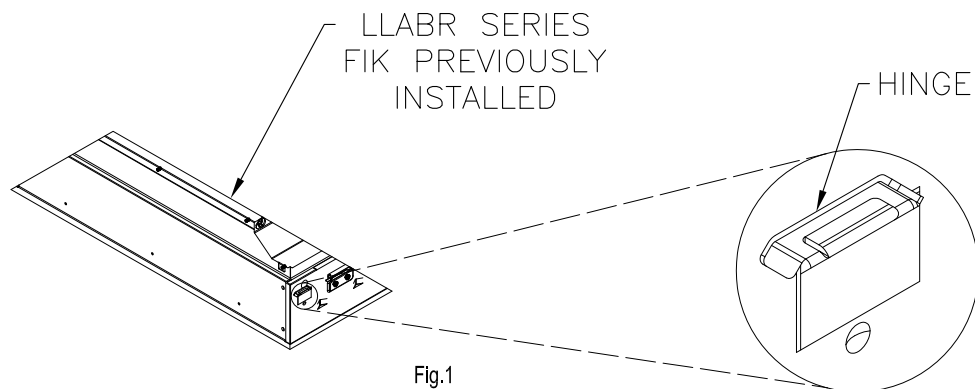Step 2:

NOTE: Do not loosen the set screws shown in (Fig. 2) if applicable.

Locate the side of the finishing section with two hooks as shown in (Fig. 2). Now rotate the head downward on the same side of the finishing section. This will ease installation.

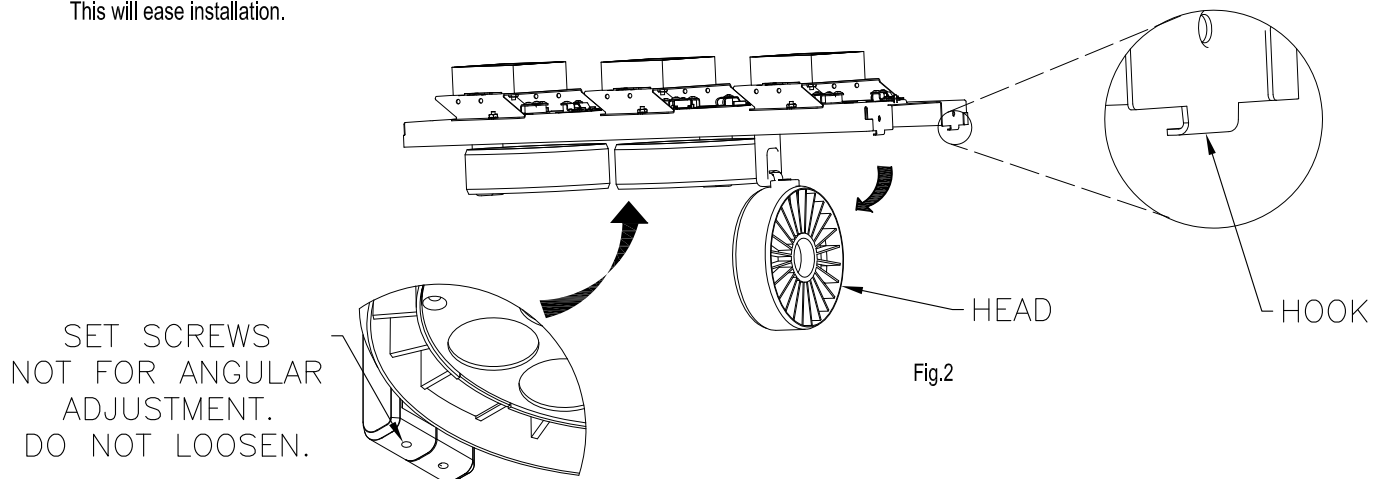

INSTALLATION INSTRUCTIONS FOR RECESSED SPOTLED FINISHING SECTION (LIGHT ENGINE)**Step 3:**

Catch the hooks on the finishing section to the hinges on the rough-in section and hang the finishing section see (Fig. 3A). Locate the connector within the rough-in section. Connect the factory wired connector from the finishing section to the rough-in section as shown in (Fig. 3B).

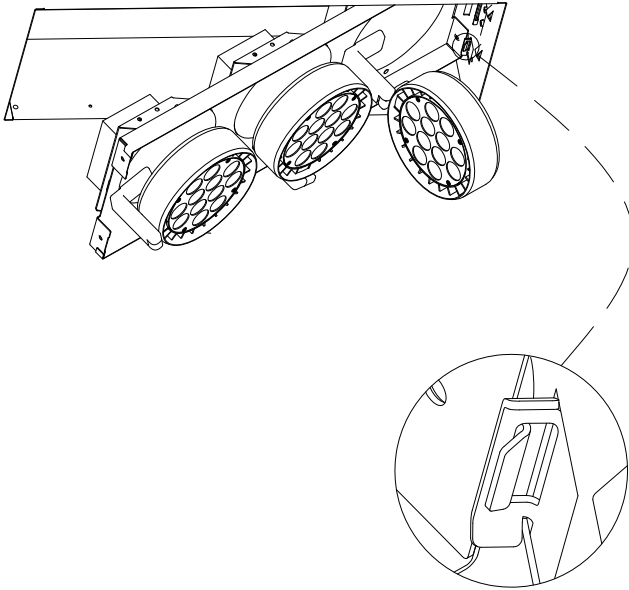


Fig. 3A

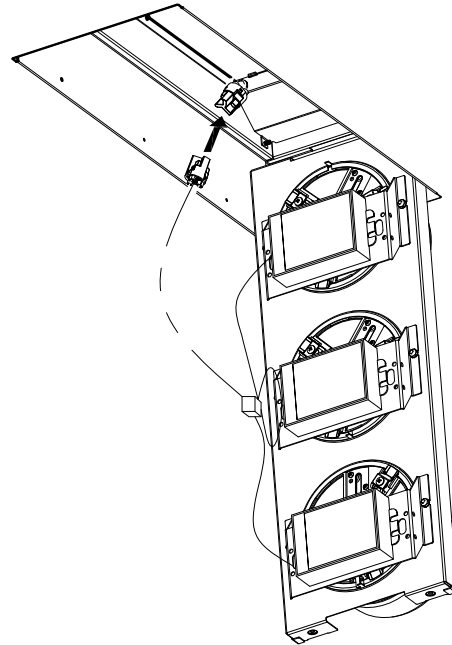


Fig. 3B

Step 4:

Swing the finishing section up onto spring clips to lock it in (Fig. 4A). Secure the finishing section to the rough-in section with the four supplied screws in each corner as shown in Fig. 4B. Rotate head near hinge (Fig. 3A) upwards as shown in Fig. 4B. Installation is complete.

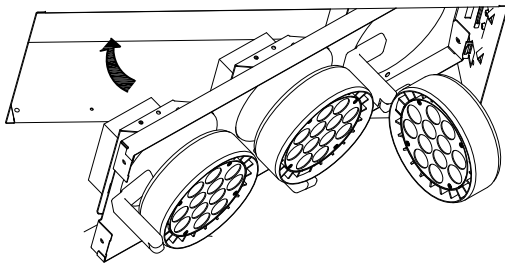


Fig. 4A

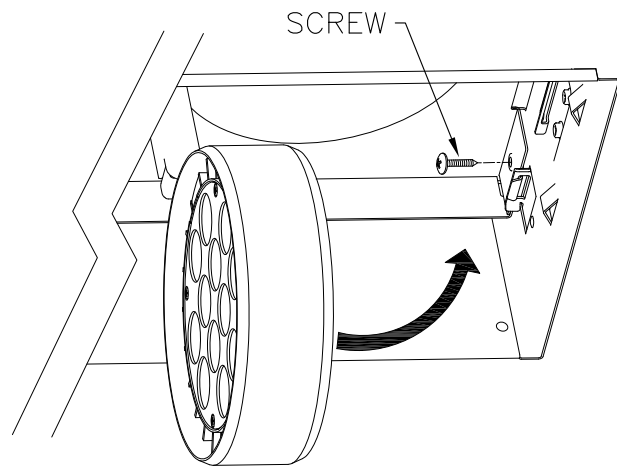


Fig. 4B

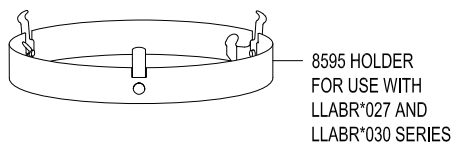
INSTALLATION INSTRUCTIONS FOR RECESSED SPOTLED FINISHING SECTION (LIGHT ENGINE)**ACCESSORY HOLDERS 8595 AND LLAB1AH COMPATIBILITY USE**

Fig. 5A

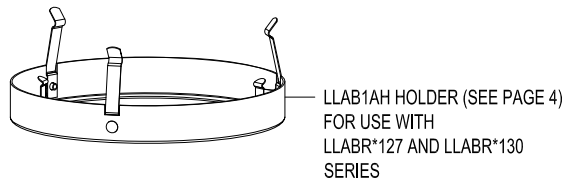


Fig. 5B

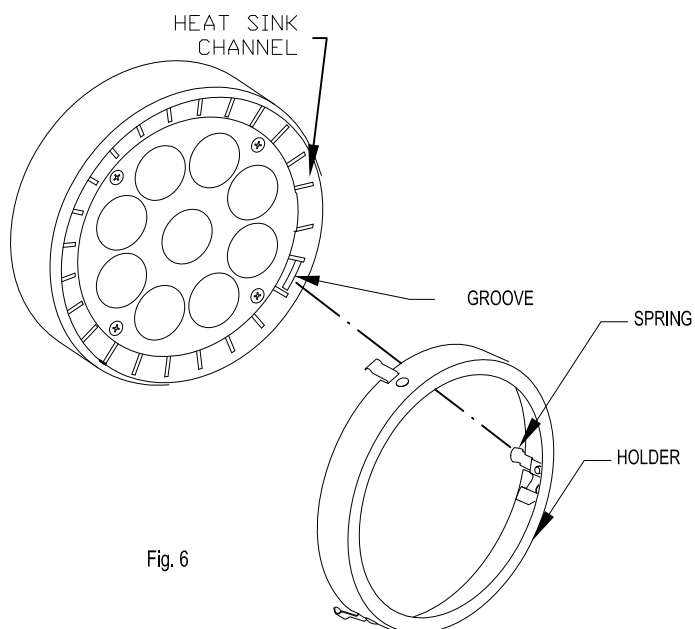
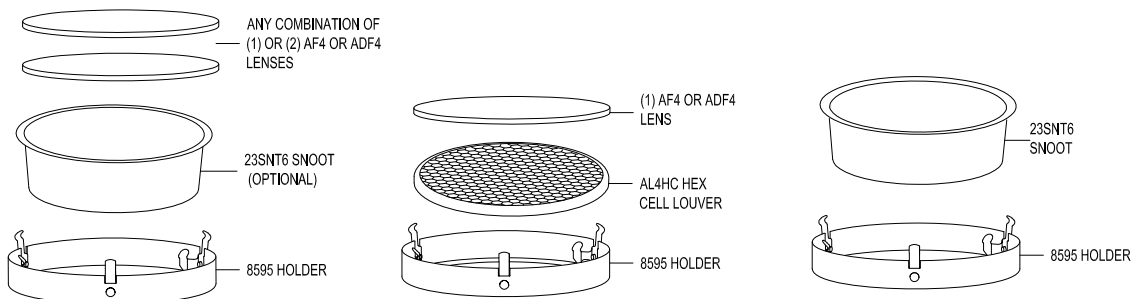
LLABR_0 SERIES ACCESSORIES (NEED 8595 ACCESSORY HOLDER)

Fig. 6

INSTALLING HOLDER
LINE-UP SPRING OF HOLDER
WITH GROOVE AND PUSH
ACCESSORY HOLDER UNTIL SPRINGS
SNAP INTO GROOVES.

CAUTION:
TO PREVENT DISLODGE MENT DO NOT INSTALL HOLDER
SPRINGS IN HEAT SINK CHANNEL WITHOUT GROOVE.
HOLDER SPRINGS NEED TO SNAP INTO GROOVES.

INSTALLATION INSTRUCTIONS FOR RECESSED SPOTLED FINISHING SECTION (LIGHT ENGINE)**LLABR_1 SERIES ACCESSORIES (NEED LLAB1AH ACCESSORY HOLDER)**

ACCESSORY HOLDER LLAB1AH COMPATIBILITY USE
FOR GEN2 MARKED PRODUCTS ONLY

NOTICE: For LLABR_1 SERIES Only

NOTE: To identify a product as GEN 2 pull trim down and look for a "GEN 2" label located at the corner by the hinge identifying the product as such (see Fig. 7).

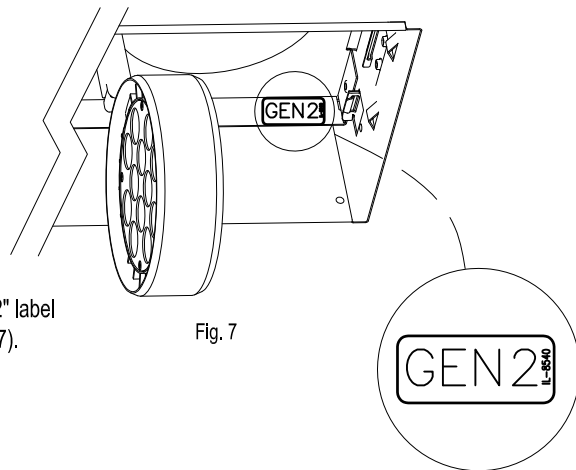


Fig. 7

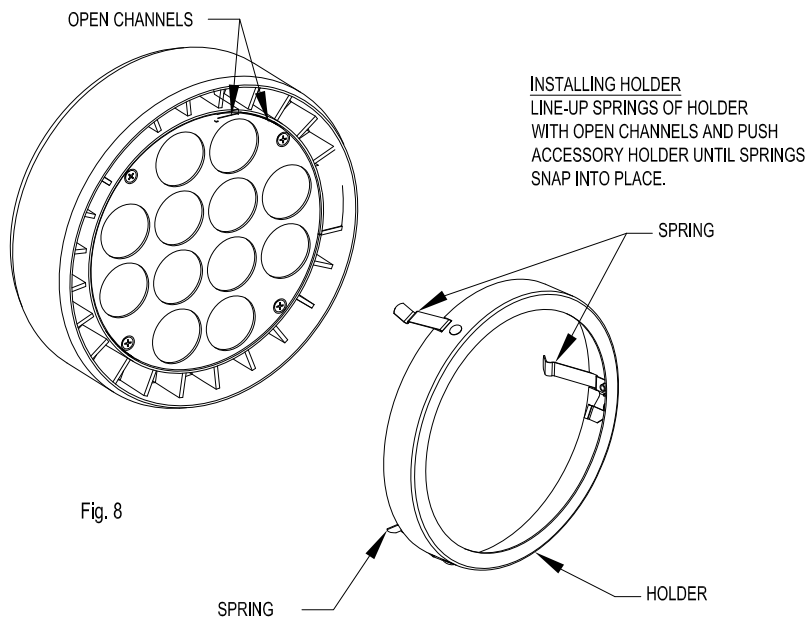
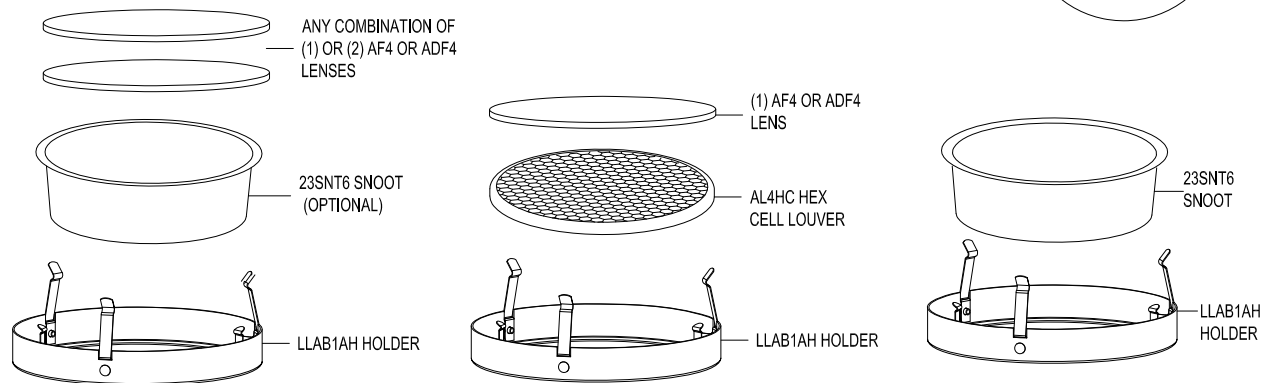


Fig. 8