

INSTRUCTIONS FOR INSTALLING THE ACCESSORY HOLDER FOR MINI HID CYLINDERS USING T4 CMH (GU6.5), T4.5 (G8.5) LAMPS

WARNING: Please read these instructions before installing the luminaire. To avoid electric shock, turn off the power from the electric panel before beginning. For safety, this luminaire must be grounded. Consult an electrician to make sure all the requirements of the Canadian Code for electricity and the current local regulations are complied. Keep these instructions as reference.

INSTALLATION: (Fig.1)

1. Unscrew the 2 knurled knobs.
2. Remove the cover.
3. Remove the protective glass and spring-loaded band.
4. Place the accessory holder into the cover (position it as far in as possible).
5. Place the lens or the louver into the accessory holder.
6. Place the protective glass, the spring-loaded band and the cover back in place.

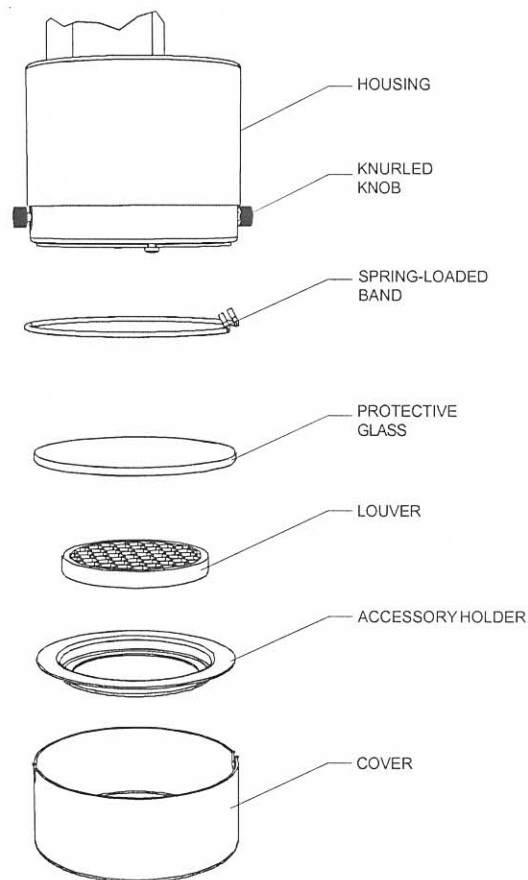


FIG.1

