


# INSTALLATION INSTRUCTIONS

## LYTEPRO SCONCE WALL COVER PLATE


**WARNING: MAKE SURE POWER IS OFF BEFORE BEGINNING ANY WORK**

**NOTICE: DO NOT MOUNT LYTEPRO SOLELY TO THIS COVER PLATE. IT IS NOT INTENDED TO SUPPORT THE WEIGHT OF THE LUMINAIRE.**


REMOVE OLD LUMINAIRE; LEAVING J-BOX EXPOSED.

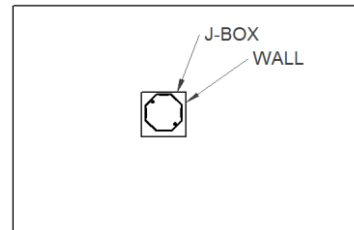

RUN A BEAD OF SILICONE ON BACK SIDE OF COVER PLATE, ALONG TOP AND SIDES TO SEAL SPLICE BOX. ALIGN AND LEVEL COVER PLATE WITH J-BOX MOUNTING HOLES.

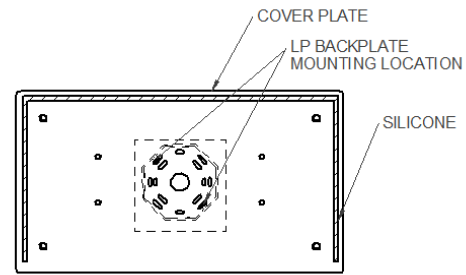

ATTACH PLATE TO WALL USING EITHER SET OF (QTY4) MOUNTING HOLES. PUNCH OUT TABS TO ALLOW LAG BOLTS TO PASS THROUGH. (HARDWARE PROVIDED BY OTHERS)

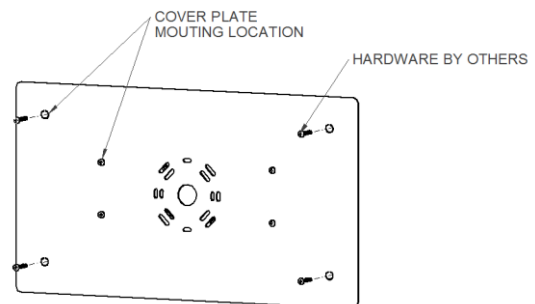

MOUNT LYTEPRO SCONCE ACCORDING TO INSTALLATION INSTRUCTIONS INCLUDED WITH LUMINAIRE.

