

INSTALLATION INSTRUCTIONS FOR RECESSED SPOTLED TRIM**Read and understand these instructions before installing luminaire.**

This luminaire is intended for installation in accordance with the National Electrical Code and Local Regulations. To assure full compliance with local codes and regulations, check with your local electrical inspector before installation. To prevent electrical shock, turn off electricity at fuse box before proceeding.

Retain these instructions for maintenance reference.Step 1:

See (IS-LLABR FIK) and (IS-LLABR LE) Instruction sheets prior to installing Trim installation.

Step 2:

Pinch torsion springs on trim.

Step 3:

Look for the torsion spring slots located within the FIK rough-in section (Fig. 1). While holding the springs in the step 2 position, insert them into the slots as seen in (Fig. 2). Push up flush to ceiling to complete installation.

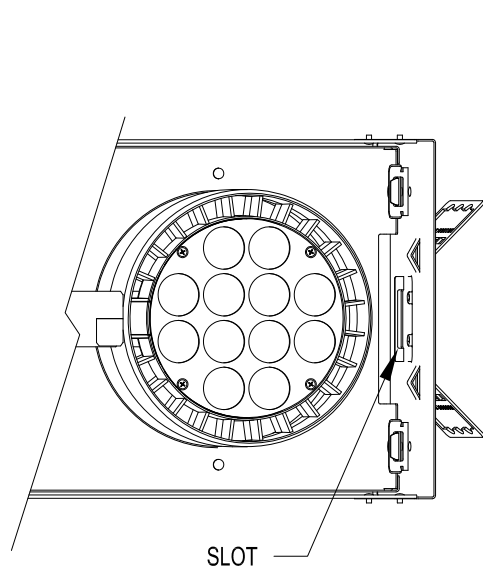


Fig. 1

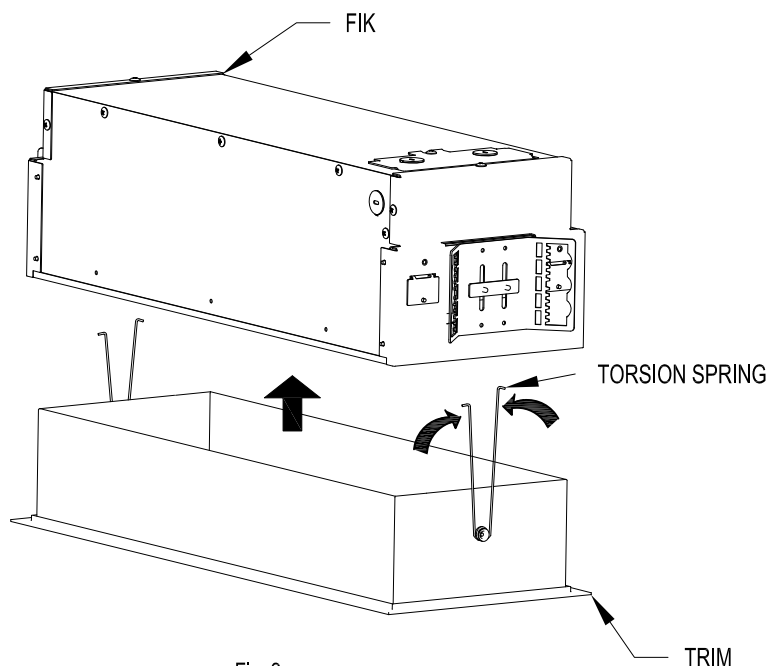


Fig. 2