



Read and understand these instructions before installing fixture.

INSTALLATION INSTRUCTIONS FOR ACCESSORIES FOR BEZELED SHADES AND LASSO PAR-TECH® LYTESPOTS

1. Place **HOLDER** into the back of **BEZEL** or **RUBBER RING** as shown in Fig.1.
2. Position the two **SPRINGS** by swinging them out as indicated in Fig.1

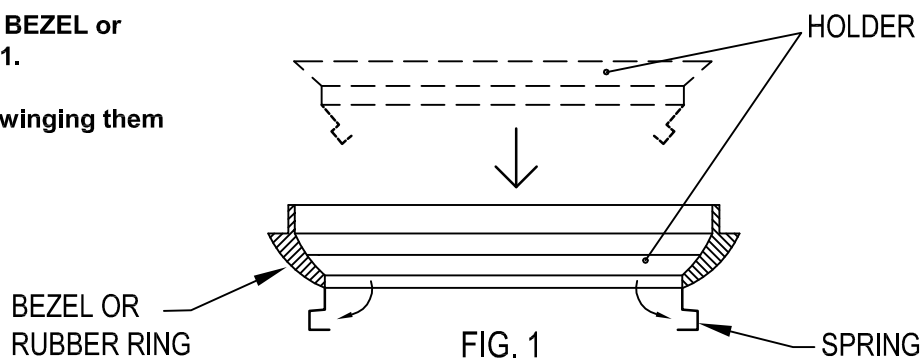

3. Slide the selected **LENS** or **LOUVER** (only one may be used) between the two **SPRINGS** as shown in Fig. 2

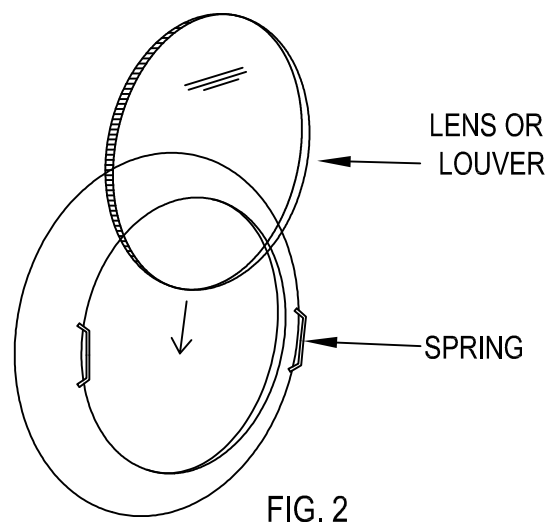

ACCESSORY	PAR 16	PAR 20	PAR 30
HOLDER	# 8591	# 8592	# 8593
BEAM ELONGATOR	AF2AS	AF25AS	AF3AS
SOFTENING LENS	AF2SF	AF25SF	AF3SF
LOUVER	AL2HC	AL25HC	AL3HC

INSTALLATION INSTRUCTIONS FOR BARNDOOR ACCESSORY

1. Install the accessories holder (see other side).
2. Fold BARNDOOR BLADES forward so they won't interfere. Hook one SPRING into one SLOT in the back of BARNDOOR'S frame, then pull the second SPRING and let it fall into the second SLOT as shown in Fig. 3

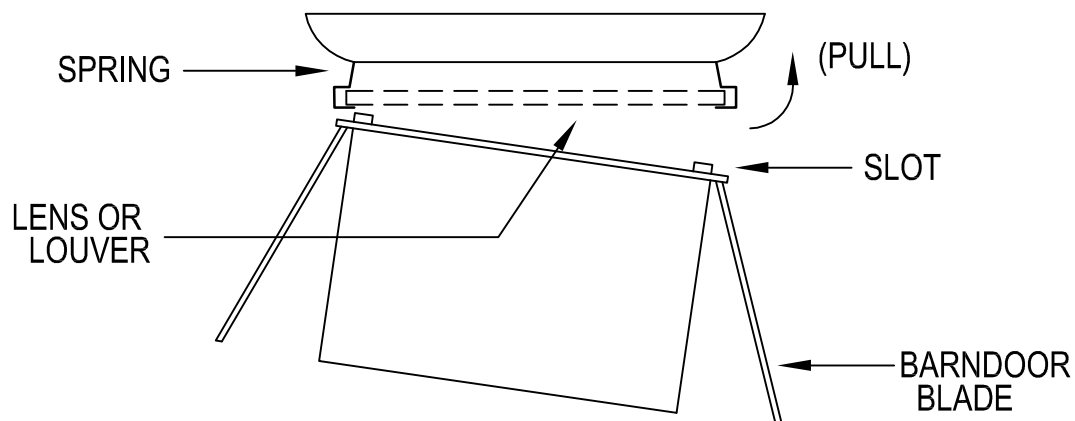


FIG. 3

3. When BARNDOOR is used in combination with one LENS or LOUVER, install LENS or LOUVER (behind BARNDOOR'S frame) as shown in Fig.2.
4. Adjust BLADES to desired position.

	PAR 16	PAR 20	PAR 30	PAR 38
BARNDOORS	N/A	# 8542BK	# 8543BK	# 8544BK