


INSTALLATION INSTRUCTIONS

ROUND FORM 10, GLOW TOP - LENS REPLACEMENT GARDCO

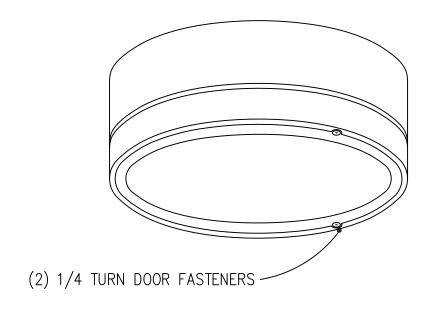

(2) 8-32 SCREWS AND LOCKNUTS

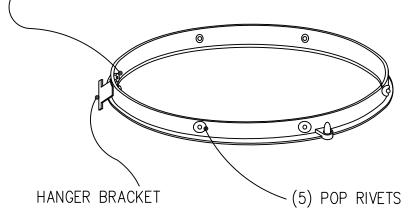

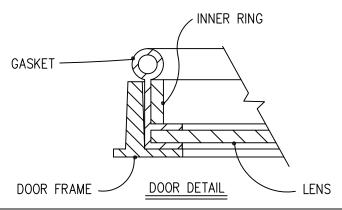

INSTALLATION PROCEDURES

- 1. Disengage (2) 1/4 turn door fasteners and carefully open and remove door from luminaire housing.
- 2. Drill out (5) pop rivets using #29 (.136 diameter) drill bit.
- 3. Remove hanger bracket, (2) 8-32 screws, and (2) locknuts.
- 4. Pry inner ring loose from gasket with flat blade screw driver, being careful not to damage gasket.
- 5. Push existing lens out of door frame. Gasket will come with it.
- 6. Carefully peel gasket off of lens.
- 7. Discard lens.
- 8. Install gasket onto replacement lens.
- 9. Install gasket and replacement lens into door frame, lining up holes in gasket with holes in frame.
- 10. Re-install inner ring, lining up holes in ring with holes in gasket.
- 11. Re-install hanger bracket with (2) 8-32 screws and (2) locknuts.
- 12. Fasten inner ring in place with (5) 6-32 x 1/2" long pan head screws and locknuts.
- 13. Re-install door in luminaire.

