

READ AND UNDERSTAND THESE INSTRUCTIONS BEFORE INSTALLING FIXTURE

This fixture is intended for installation in accordance with the National Electrical Code and local regulations.

To assure full compliance with local codes and regulations, check with your local electrical inspector before installation. To prevent electric shock, turn off electricity at fuse box before proceeding.

Retain these instructions for maintenance reference.

INSTALLATION OF CALCULITE COMPACT FLUORESCENT VERTICAL DOWNLIGHT & SINGLE WALL WASHER TRIMS.

CAUTION: (RISK OF FIRE) THE LUMINAIRE SHALL, UNDER NO CIRCUMSTANCES BE COVERED WITH INSULATING MATTING OR SIMILAR MATERIALS

CAUTION: THIS LUMINAIRE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN. LIGHTOLIER IS NOT RESPONSIBLE IF IT'S LUMINAIRES ARE NOT INSTALLED ACCORDING TO LOCAL SAFETY STANDARDS. DISCONNECT THE LUMINAIRE FROM THE POWER SUPPLY BEFORE REMOVING AND/OR REPLACING THE LAMP. USE WITH LIGHTOLIER FRAME-IN-KITS ONLY.

1. FRAME-IN KIT

See Frame-In Kit Instruction Sheet for installation instructions.

2. SNAP-IN

NOTE: For overlapping flange installation (Fig.1), slip WHITE TRIM RING over REFLECTOR (Fig. 3). For Flangeless (Fig. 2) and Self-Flanged Trims, WHITE TRIM RING is not required.

Engage RETAINING SPRINGS into SLOTS in REFLECTOR (Fig. 5).


Use chart below to determine lamp position.

Recommended Lamping Postions:

REFLECTOR TRIM SERIES	TRIPLE TUBE LAMP			
	18W	26W	32W	42W
8011	SINGLE			
8021		LOWER	UPPER	
8022		LOWER	UPPER	UPPER
8023				SINGLE

3. PUSH-IN

Push REFLECTOR straight up into MOUNTING FRAME until tight against finished ceiling. RETAINING SPRINGS on MOUNTING FRAME hold REFLECTOR in place.

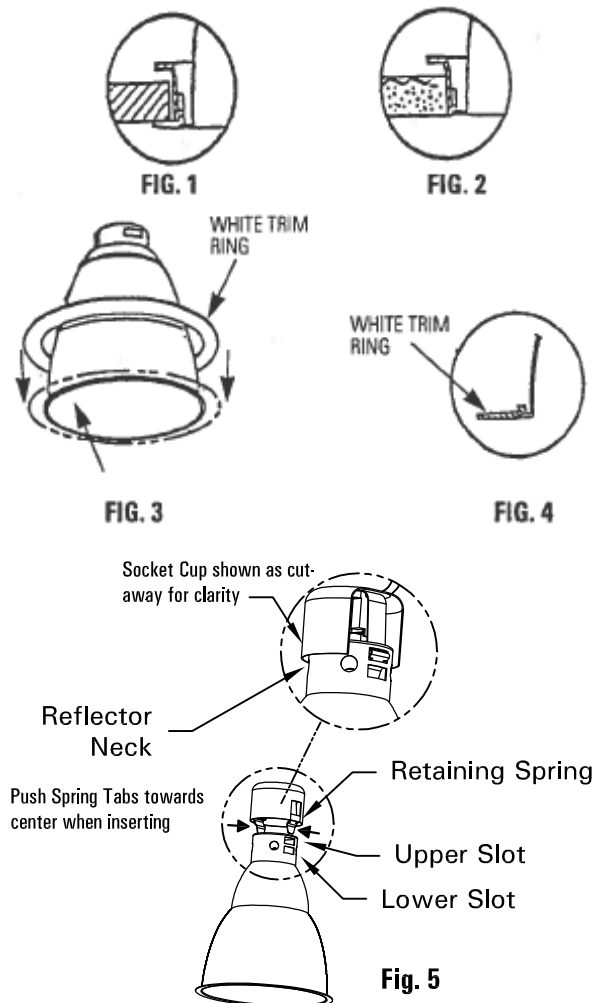

NOTE: To remove REFLECTOR turn counter clockwise while pulling down. (Fig. 7)

FOR OPEN WALL WASHER TRIMS (SELF-FLANGED)

Push REFLECTOR up as shown in Fig. 6 with WINDOW CUT OUT opposite wall to be illuminated.

FOR OPEN WALL WASHER TRIMS (FLANGELESS)

First bend all four(4) RETAINING SPRINGS away from wall as shown in (Fig. 4). Proceed as described above.(Fig. 6)

4. CARE AND MAINTENANCE OF REFLECTORS

If handling of reflectors with anodize finish is required, the use of clean white or plastic film gloves is recommended to avoid fingerprints.

Anodized surfaces can be cleaned by the following methods:

1. Wipe off with a soft, clean, dry, lint-free cloth.
2. Wipe off with a soft, clean cloth dampened in mild detergent.
3. Wipe off with a clean cloth dampened with a solution of wetting agent and water (such as 2oz. per gallon "Pluronic L62-LF" by Wyandotte Products). Then wipe dry.

