INSTALLATION INSTRUCTIONS

ICL - Internal Concentric Glare Louver

Opening Glass Door Frame


Note: Procedure to open glass door frame is the same on slip fitter and yoke mount fixtures.

STEP 1:

Loosen two captive socket head cap screws with 5/32 allen key on either side of top rear floodlight cast housing.

STEP 2:

Rotate glass door frame down to fully open position as shown here.

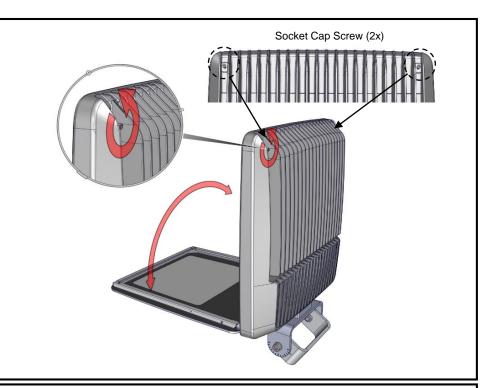

Insert connector side of louver first. Snap ends of louver onto optic plate ends. Louver Optic plate ends. Led board Led board

STEP 3:

Correctly position louver over optic plate and LED board assembly in luminaire. There should be one (1) louver for each LED/Optic assembly configuration.

STEP 4:

Slide connector side of louver under reflector pan and lightly push down on louver to snap onto end of optic plate.

STEP 5:

Carefully align louver with optics and lightly push louver down to snap onto other end of optic plate.

STEP 6:

After installing internal louvers, carefully rotate glass door frame up into closed position and retighten screws loosened in

