


INSTALLATION INSTRUCTIONS

P21 – FWC SHIELDING

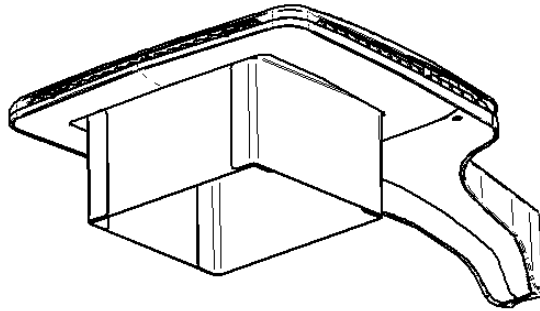

PARTS INCLUDED IN FWC SHIELDING KIT:

1. FRONT SHIELD
2. BACK SHIELD
3. RIGHT SHIELD
4. LEFT SHIELD
5. 10 X 6-32UNC X 1/4" PHILLIPS PAN HEAD SCREWS

TOOLS REQUIRED:

1. PHILLIPS HEAD SCREWDRIVER
2. 5/64" HEX DRIVER

READ ALL INSTRUCTIONS BEFORE BEGINNING ANY WORK.

STEP 1: LOOSEN DOOR SCREWS TO DRIVER COMPARTMENT AND ALLOW TO HANG.

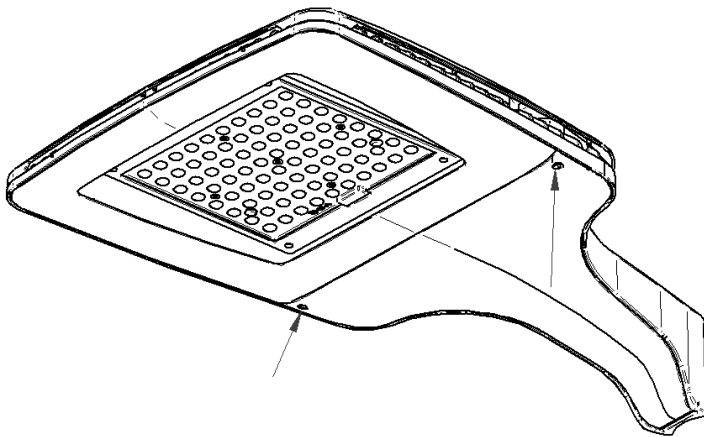


FIG 1

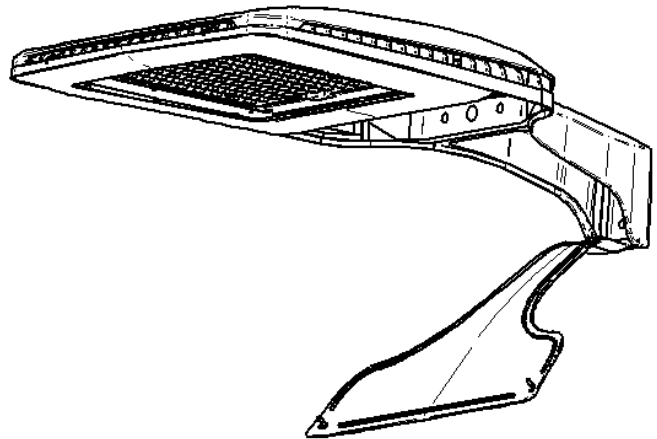


FIG 2

INSTALLATION INSTRUCTIONS

P21 – FWC SHIELDING

STEP 2: LOOSEN DOOR FRAME SCREWS TO LIGHT ENGINE COMPARTMENT AND ALLOW TO HANG. REMOVE BLACK FOAM GASKETING FROM INSIDE OF DOOR FRAME.

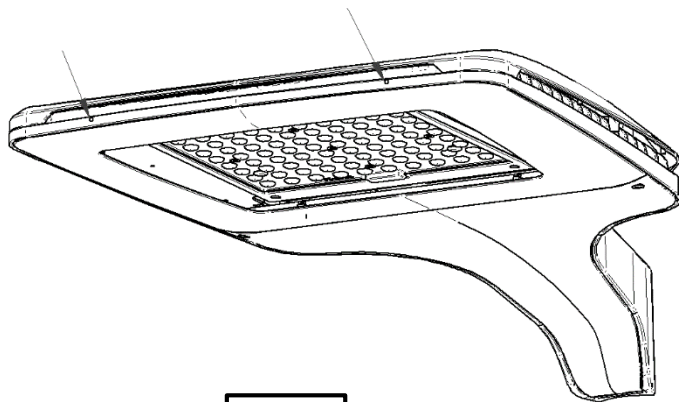


FIG 3

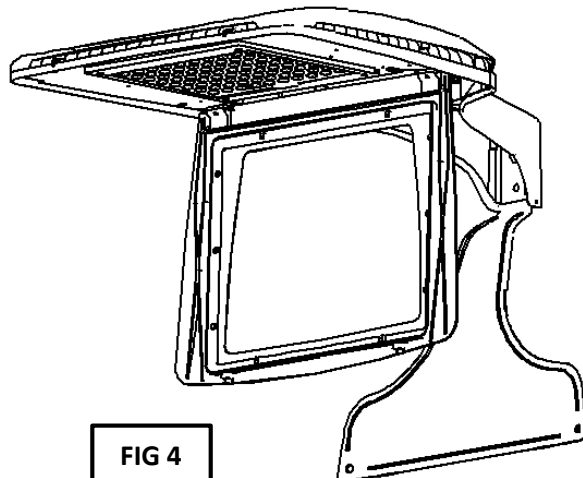


FIG 4

STEP 3: ATTACH SIDE SHIELDS USING 6X 6-32UNC SCREWS TO MOUNT SHIELDS TO FRAME AS SHOWN BELOW.

NOTE: LEFT AND RIGHT SHIELDS ARE IDENTICAL

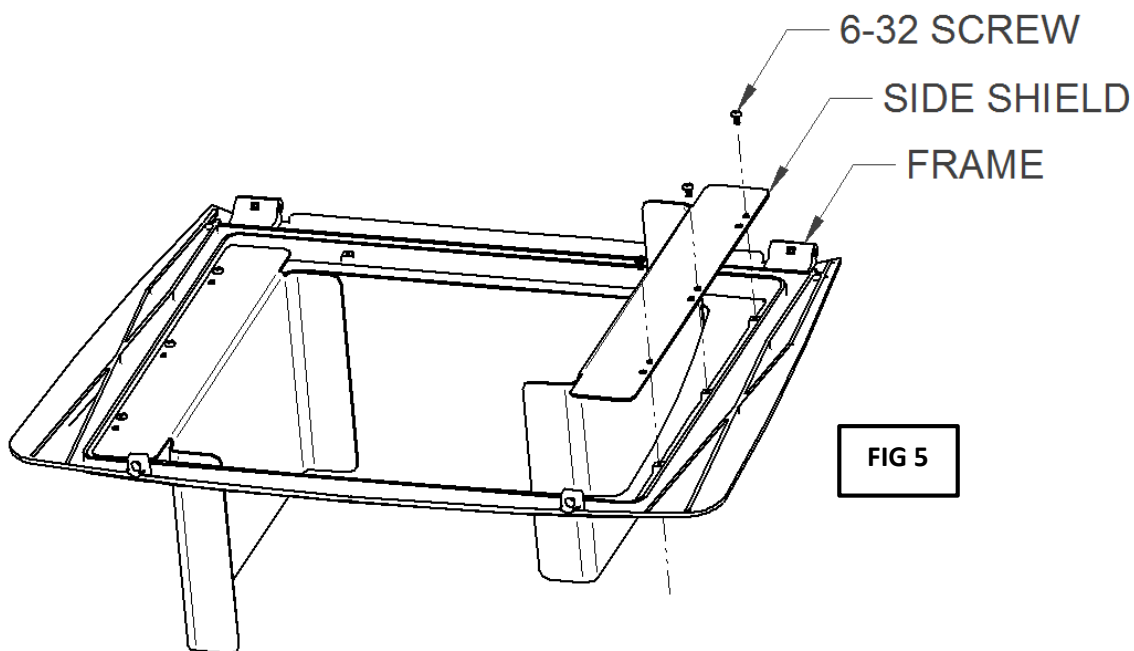


FIG 5

INSTALLATION INSTRUCTIONS

P21 – FWC SHIELDING

STEP 4: ATTACH FRONT AND BACK SHIELDS USING 4X 6-32UNC SCREWS TO MOUNT SHIELDS TO FRAME AS SHOWN BELOW. NOTE: FRONT AND BACK SHIELDS ARE IDENTICAL

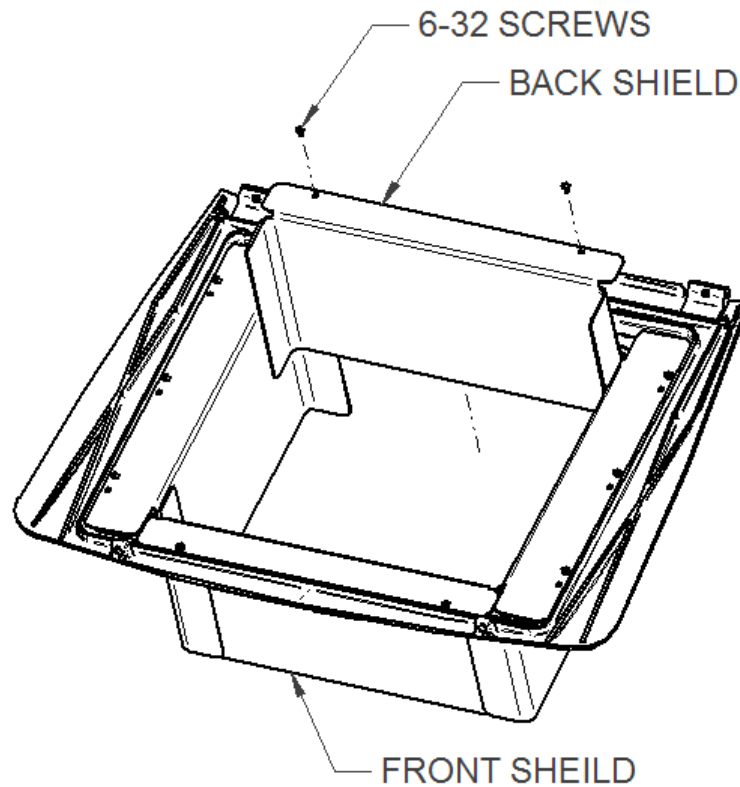


FIG 6

STEP 5: ONCE SHIELD INSTALLATION IS COMPLETE; CLOSE AND SECURE LIGHT ENGINE DOOR FRAME, THEN DRIVER COMPARTMENT DOOR. MAKE SURE BOTH ARE PROPERLY CLOSED BEFORE CONCLUDING WORK.

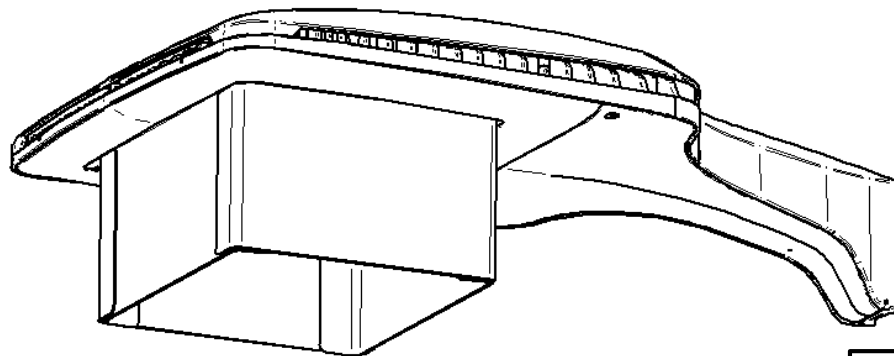


FIG 7



© 2016 Philips Lighting Holding B.V. All rights reserved.

www.philips.com/luminaires

443561210470 Rev. B

Page 3 of 3

Philips Lighting North America
Corporation
200 Franklin Square Drive,
Somerset, NJ 08873, USA

Philips Lighting Canada Ltd.
281 Hillmount Road,
Markham ON, Canada L6C 2S3