# **INSTRUCTION SHEET**

SGLO EDGE-GLO EXIT

#### ALKCO where quality comes to light™ 1500 Melrose Avenue, P.O. Box 1389 Franklin Park, IL 60131-8389



A Division of JJI Lighting Group, Inc.

## CAUTION — READ AND FOLLOW ALL SAFETY INSTRUCTIONS

- Carefully read the instructions appropriate to your fixture. IF YOU HAVE ANY QUES-TIONS REGARDING THE PROPER INSTAL-LATION OR LOCAL CODES, CONSULT A QUALIFIED ELECTRICIAN.
- To avoid shock hazard do not work with live electrical wires.
- Install fixture in dry, indoor applications only. Do not install in applications other than intended use.
- Install and wire fixture in locations and at heights in accordance with national, state, and local codes.
- Ensure that supply is a 24-hour circuit of correct rated voltage.


# SAVE THESE INSTRUCTIONS

### MOUNTING INSTRUCTIONS

The SGLO surface mount fixture is designed to mount to any ceiling or wall conduit box by using the universal mounting plate. Knockouts and mounting holes are also provided in the center of the top of the housing for mounting to the ceiling. Knockouts and mounting holes are also provided in the center of one long side and one end for mounting to a wall.

Figure 1 provides an overall view of the fixture and shows all the critical dimensions. Refer to this illustration as you mount the fixture.

- 1. Remove Edge-Glo Exit fixture and hardware from the box. Inspect contents to ensure that no damage occurred during shipment.
- 2. Remove the two screws securing the wireway and remove the wireway from the housing.
- 3. Determine where the Edge-Glo fixture is going to be mounted.

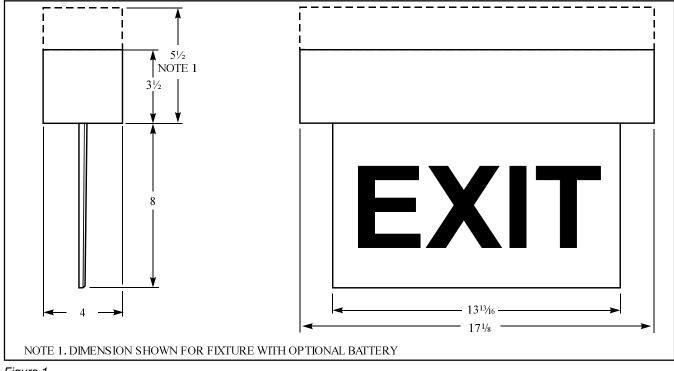


#### WARNING:

# Be certain that power is turned off before proceeding.




- **NOTE:** The universal mounting plate may not need to be used in ceiling installations. Use the plate if the conduit box plate does not match the hole configuration in the housing.
- 4. Remove and retain the two screws from the conduit box. Orient the universal mounting plate to the conduit box so that the studs align with the mounting holes in the fixture. Attach the plate using the screws removed from the conduit box.
- 5. Pull the ac feed wires through the center hole in the universal mounting plate.
- 6. Remove the appropriate knockouts from the housing depending on the mounting configuration.
- **NOTE:** The cover plate does not need to be used in ceiling installations.
- 7. Place the cover plate over the universal mounting plate as shown in Figure 2.
- 8. Pull the ac feed wires into the housing.
- 9. Secure the housing to the mounting plate with two lockwashers and nuts.
- 10. Using wire connectors, connect the wires from the wireway to the incoming ac feed. Connect black wire (supply) to black, the white wire (neutral) to white, and the green wire (ground) to green. Make sure that the wire connectors are secure and that no bare wire is exposed.

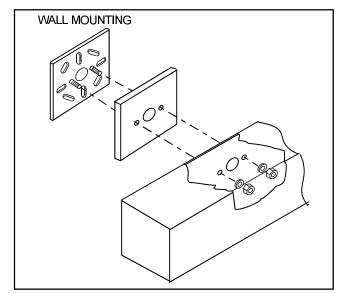



- 11. Reattach the wireway to the housing using the two screws removed in step 2.
- 12. To install the Exit panel, squeeze the ends of each torsion spring together and insert the ends into the slots in the wireway cover. Slowly release the springs, making sure that they stay in the slots. Carefully push the panel in place.
- 13. Energize the ac circuit and ensure that the fixture lights.





A Division of JJI Lighting Group, Inc.