

INSTALLATION INSTRUCTIONS FOR ASSEMBLING SHADES TO PAR-TECH® ADAPTERS

INSTRUCTION SHEET NO.


IS:8215

0790

Page 1 of 2

FOR USE WITH LYESPAN BASIC OR ADVENT TRACK SYSTEM ONLY


1. LINE UP SHADE'S NECK FLANGES WITH CORRESPONDING OPENINGS AT INSIDE DIAMETER OF ADAPTER.
2. PUSH IN AND TWIST-LOCK SHADE BY TURNING IT CLOCKWISE UNTIL IT IS TIGHTLY HELD.

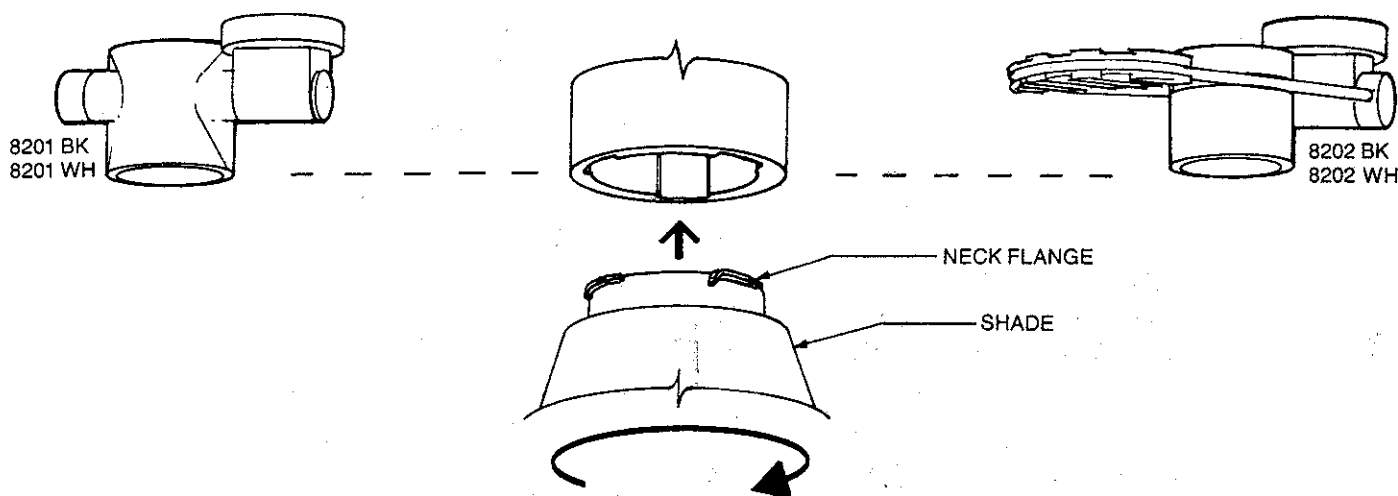


RELAMPING WITH SHADES INSTALLED.

1. FOR CONE AND CYLINDER SHADES, SIMPLY REMOVE OLD LAMP AND INSTALL NEW PAR LAMP. BE SURE LAMP IS ALL THE WAY IN BY TURNING IT CLOCKWISE WITH YOUR FINGER TIPS.
2. FOR BEZELED SHADES, PULL OUT FRONT BEZEL EVENLY UNTIL IT SNAPS OUT OF SHADE. THEN INSTALL PAR LAMP. REPLACE BEZEL BY ALIGNING TABS WITH THE INSIDE DIAMETER OF THE SHADE AND PUSHING UNTIL THE BEZEL SNAPS IN.


CYLINDER

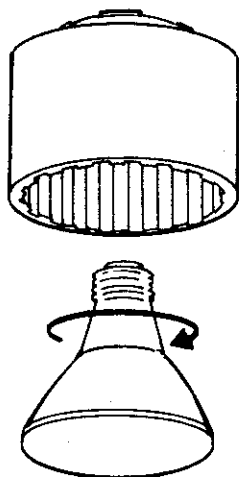

CONE

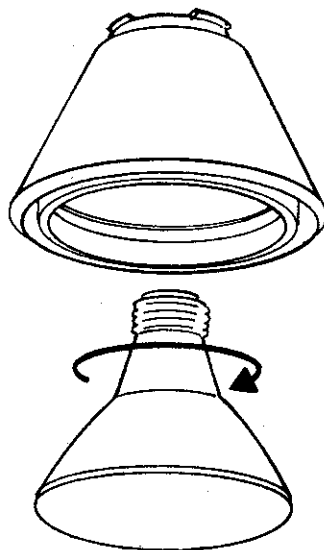

BEZELED SHADE

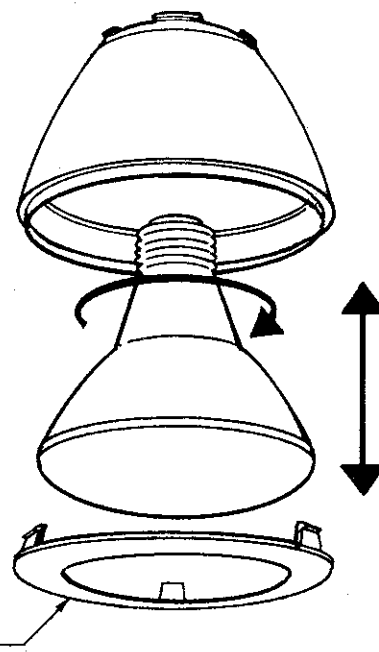

SEE BACK FOR LAMPING INFORMATION

LIGHTOLIER® SECAUCUS, NEW JERSEY, 07096-0508
MONTREAL, QUEBEC, CANADA

SHADE	LAMP TYPE
CONE 16 #8215 BK or #8215 WH CYLINDER 16 #8216 BK or #8216 WH BEZELED SHADE 16 #8217 BK or #8217 WH	PAR 16 MAX. 75W
CONE 20 #8225 BK or #8225 WH CYLINDER 20 #8226 BK or #8226 WH BEZELED SHADE 20 #8227 BK or #8227 WH	PAR 20 MAX. 50W
CONE 30 #8235 BK or #8235 WH CYLINDER 30 #8236 BK or #8236 WH BEZELED SHADE 30 #8237 BK or #8237 WH	PAR 30 MAX. 75W