

READ AND UNDERSTAND THESE INSTRUCTIONS BEFORE INSTALLING LUMINAIRE

This luminaire is intended for installation in accordance with the National Electrical Code and local regulations.

To assure full compliance with local codes and regulations, check with your local electrical inspector before installation. To prevent electric shock, turn off electricity at fuse box before proceeding.

Retain these instructions for maintenance reference.

INSTALLATION PROCEDURE FOR: **2090, 2090LV**

2090 for use with 2000IC/AIC, 2002P1 and 2003R only.
2090LV for use with 2000AIC/LV/LVNT and 2004ICV only

CAUTION: (RISK OF FIRE) DO NOT INSTALL INSULATION WITHIN 3 INCHES (76mm) OF FIXTURE SIDES OR WIRING COMPARTMENT, NOR ABOVE FIXTURE IN SUCH A MANNER SO AS TO ENTRAP HEAT.

CAUTION: USE ONLY REFLECTOR TRIMS PROVIDED BY LIGHTOLIER. USE OF OTHER MANUFACTURERS' REFLECTOR TRIMS VOIDS THE UNDERWRITERS LABORATORIES LISTING AND COULD CONSTITUTE A FIRE HAZARD.

CAUTION: BEFORE INSTALLING REFLECTOR TO FRAME-IN-KIT, READ MARKINGS IN REFLECTOR AND IN SOCKET CUP OF FRAME-IN-KIT TO DETERMINE LAMP WATTAGE AND TYPE APPLICABLE FOR YOUR INSTALLATION.

1 FRAME-IN KIT (FIK) INSTALLATION: See Frame-In Kit Instruction Sheet for installation procedure.

2 INSTALLATION OF TRIM IN FIK'S WITH ROTO-CLIPS:

- Rotate (3) Roto-clips so that the short legs extend inwardly toward center opening.
- Remove lens holder assembly from trim by pulling lens holder assembly away from housing then squeeze Torsionite springs together and removing from slots in housing.
- Insert FIK socket cup into neck of trim making sure springs of socket cup snap into the slots of trim.
- Push trim straight up until it is tight against ceiling.
- Reinstall lens holder assembly by squeezing Torsionite springs and inserting through housing slots.
- NOTE:** To remove trims from ceiling, first remove lens holder assembly as in Step B above, then turn trim counterclockwise while pulling downward.



Figure A



Figure B



Figure C



Figure D



Figure E

3. PREPARATION OF SOCKET CUP ON FIK's WITH LAMP ADJUSTMENT MECHANISM:

- Locate the 3 tabs that retain the lamp adjustment mechanism to the socket cup. See figure F below.
- With a small flat blade screwdriver, bend the tabs outward so they are flush with the socket cup wall.
- Remove adjustment mechanism and discard. See figure G below.
- Attach lamp to socket. See figure H below.
- Mount lamp in holder provided in trim. See figure I below.

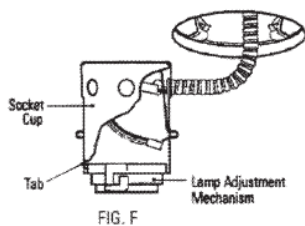


FIG. F

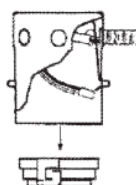


FIG. G



FIG. H

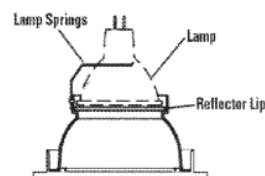


FIG. I

