


SmartBright Direct Panel


RC092V

Mounting instruction/安裝說明書

V1.0




Product Type 產品型號	Dimension(mm) 尺寸(mm) LxVxH (mm)	LEDs 顆粒	CCT (K) 色溫	Power 功率	Lumen Output 流明輸出	Voltage 電壓	Frequency 頻率	
RC092V LED36S/840 PSU W60L60 TW	603x603x64	143	4000	38W	3600lm	110-240V~	50/60Hz	2.3
RC092V LED36S/865 PSU W60L60 TW	603x603x64	143	6500					2.3
RC092V LED36S/840 PSU W30L120 TW	1210x303x64	140	4000					2.3
RC092V LED36S/865 PSU W30L120 TW	1210x303x64	140	6500					2.3
RC092V LED26S/840 PSU W60L60 TW	603x603x64	121	4000	28W	2600lm			2.3
RC092V LED26S/865 PSU W60L60 TW	603x603x64	121	6500					2.3
RC092V LED26S/840 PSU W30L120 TW	1210x303x64	120	4000					2.3
RC092V LED26S/865 PSU W30L120 TW	1210x303x64	120	6500					2.3

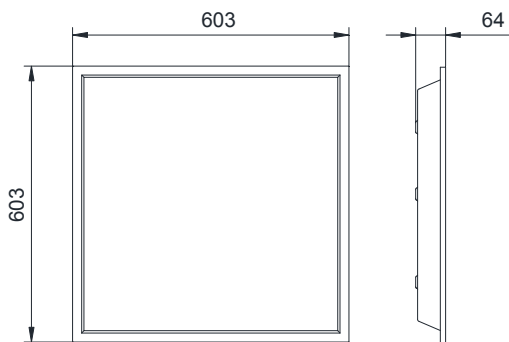

RC092V LED36S/840 PSU W60L60 TW
RC092V LED36S/865 PSU W60L60 TW
RC092V LED26S/840 PSU W60L60 TW
RC092V LED26S/865 PSU W60L60 TW


Unit/單位: mm

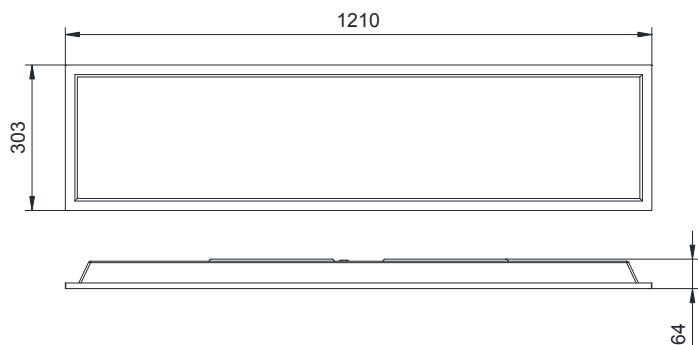

RC092V LED36S/840 PSU W30L120 TW
RC092V LED36S/865 PSU W30L120 TW
RC092V LED26S/840 PSU W30L120 TW
RC092V LED26S/865 PSU W30L120 TW


Unit/單位: mm

Recessed/嵌入式

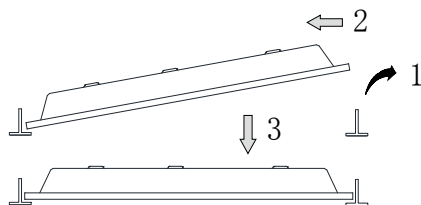


Adjust the luminaire position to fit ceiling well
安裝並調整好燈具位置

Safety chain / 安全繩

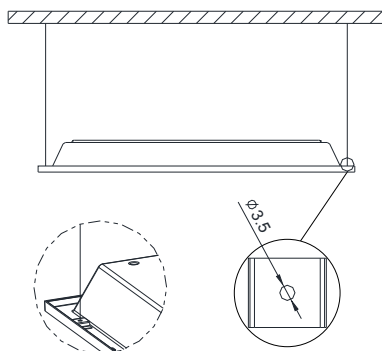

The product should install safety chain
(Safety chain is not included.).
本產品需要安裝安全繩
(本產品不含安全繩)

Wiring Method/接線方式

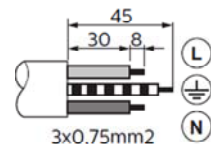

60227 IEC 52(RVV)
60227 IEC 53(RVV)
N: Blue/藍色
L: Brown/棕色

Please use IP20 or above terminal box (dimension can't smaller than 10x20x25), it is not provided by Philips Lighting.
請使用IP20以上的接線盒
(接線端子的尺寸不小於10x20x25mm), 飛利浦照明不提供接線盒

SmartBright Direct Panel

RC092V

Mounting instruction/安裝說明書

V1.0

Model	Run Current (A) (@230V)	Start (Inrush) Current(A) / Ipeak (A)	Start Current Duration (μs) / T(@50% of Ipeak) (μs)	* Touch current or protective conductor current (mA)	Maximum Number of Luminaire on MCB 16A Type B (pcs)	Maximum Number of Luminaire on MCB 16A Type C (pcs)
RC092V LED36S/840 PSU W60L60 TW	0.17-0.35	7	440	≤3.5	32	32
RC092V LED36S/865 PSU W60L60 TW	0.17-0.35	7	440	≤3.5	32	32
RC092V LED36S/840 PSU W30L120 TW	0.17-0.35	7	440	≤3.5	32	32
RC092V LED36S/865 PSU W30L120 TW	0.17-0.35	7	440	≤3.5	32	32
RC092V LED26S/840 PSU W60L60 TW	0.13-0.27	9	400	≤3.5	36	41
RC092V LED26S/865 PSU W60L60 TW	0.13-0.27	9	400	≤3.5	36	41
RC092V LED26S/840 PSU W30L120 TW	0.13-0.27	9	400	≤3.5	36	41
RC092V LED26S/865 PSU W30L120 TW	0.13-0.27	9	400	≤3.5	36	41

The leakage current *(touch current or protective conductor current) of electrical circuit may be greatly dependent upon electrical supply cables used such as its rating and length, proper connection of electrical supply cables to luminaires and wiring connection topology of luminaires to the supply electrical circuit amongst other site conditions.

* In some cases referred to as Earth Leakage Current.



Please read this manual carefully before using the product.

1. For indoor use only.
2. Do not switch on before complete installation.
3. The luminaire shall be installed by a qualified electrician and wired in accordance with the latest IEE electrical regulations or the national requirements.
4. If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.
5. The luminaire shall not be covered with thermal insulation or similar material under any circumstance.
6. The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.
7. The luminaire is complied with IEC 60598 and GB 7000.
8. The corrosive atmosphere or hazardous materials such as sulfur, chlorine, phthalate, etc. must be avoided during the use and storage.



在使用產品前請仔細閱讀這個安裝說明書：

1. 僅適用於室內燈具；
2. 接線過程中，切勿通電；
3. 此燈具應由有資格的電工安裝，接線要符合IEE電氣標準或國家標準；
4. 如果此燈具的外部軟纜或軟線損壞了，該線要由製造商或其服務代理商或一個類似的有資格的人來更換，以避免發生危險；
5. 燈具不能被隔熱或類似材料覆蓋；
6. 此燈具的光源應由製造商或其服務代理商或一個類似的有資格的人來更換；
7. 此燈具是依據IEC60598所製造；
8. 此燈具避免在腐蝕性環境或者含有有害物質，例如硫化物，鹵化物，鄰苯二甲酸酯等環境中存儲和使用。