

SmartBright Direct Panel


RC092V

Mounting instruction/安装说明书


V1.0




Product Type 产品型号	Dimension(mm) 尺寸 (mm) LxWxH (mm)	LEDs 颗粒	CCT (K) 色温	Power 功率	Lumen Output 流明输出	Voltage 电压	Frequency 频率	
RC092V LED26S/840 PSU W60L60	597x597x64	121	4000	28W	2600lm	220-240V~	50/60Hz	2.2
RC092V LED26S/840 PSU W30L120	1197x297 x64	120						2.2
RC092V LED26S/865 PSU W60L60	597x597x64	121	6500					2.2
RC092V LED26S/865 PSU W30L120	1197x297 x64	120						2.2
RC092V LED26S/840 PSU W60L60 CPC	600x600x64	121	4000					2.5
RC092V LED26S/840 PSU W30L120 CPC	1200x300 x64	120						2.5
RC092V LED26S/865 PSU W60L60 CPC	600x600x64	121	6500					2.5
RC092V LED26S/865 PSU W30L120 CPC	1200x300x64	120						2.5

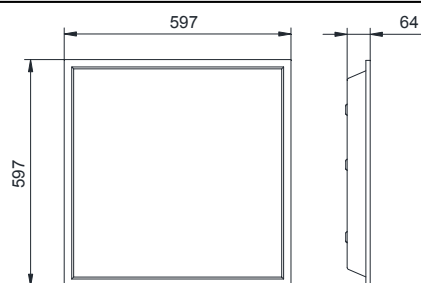


RC092V LED26S/840 PSU W60L60
RC092V LED26S/865 PSU W60L60

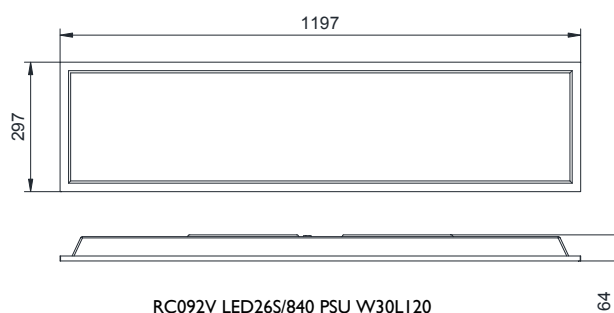

RC092V LED26S/840 PSU W30L120
RC092V LED26S/865 PSU W30L120

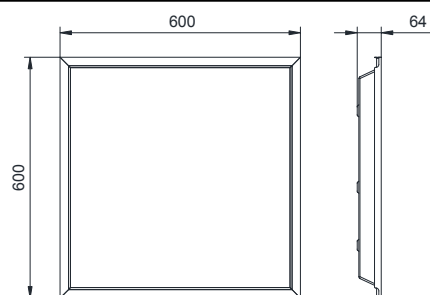


RC092V LED26S/840 PSU W60L60 CPC
RC092V LED26S/865 PSU W60L60 CPC

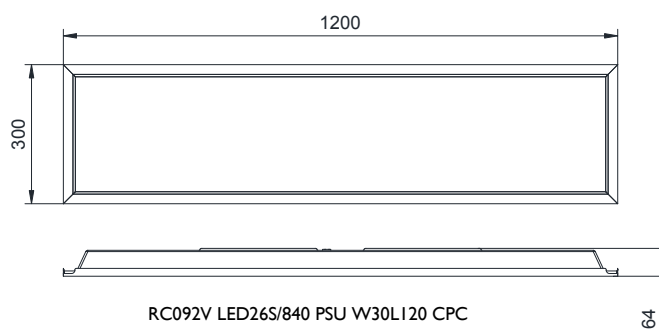

RC092V LED26S/840 PSU W30L120 CPC
RC092V LED26S/865 PSU W30L120 CPC

Recessed/嵌入式

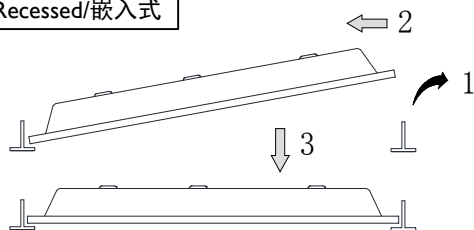

RC092V LED26S/840 PSU W60L60
RC092V LED26S/840 PSU W30L120
RC092V LED26S/865 PSU W60L60
RC092V LED26S/865 PSU W30L120

Adjust the luminaire position to fit ceiling well
安装并调整好灯具位置


CPC/集成吊顶



RC092V LED26S/840 PSU W60L60 CPC
RC092V LED26S/840 PSU W30L120 CPC
RC092V LED26S/865 PSU W60L60 CPC
RC092V LED26S/865 PSU W30L120 CPC

Adjust the luminaire position to fit ceiling well
安装并调整好灯具位置

Wiring Method/接线方式

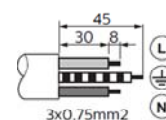

60227 IEC 52(RVV)
60227 IEC 53(RVV)
N: Blue/蓝色
L: Brown/棕色

Please use IP20 or above terminal box
(dimension can't smaller than 10x20x25),
it is not provided by Philips Lighting.
请使用IP20以上的接线盒(接线端子尺寸
不小于10x20x25mm),飞利浦照明
不提供接线盒。


SmartBright Direct Panel

RC092V

Mounting instruction/安装说明书

V1.0


PCV / 石膏板安装

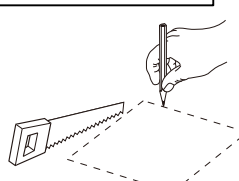

石膏板开口尺寸 cutout size
W60L60 : 580*580mm(+/-2mm)
W30L120 : 280*1180mm (+/-2mm)
石膏板厚度 : 8mm~16mm

RC092V LED26S/840 PSU W60L60
RC092V LED26S/840 PSU W30L120
RC092V LED26S/865 PSU W60L60
RC092V LED26S/865 PSU W30L120

Safety chain / 安全绳

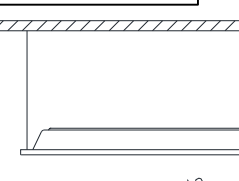

The product should install safety chain
(Safety chain is not included.).
本产品需要安装安全链 (本产品不含安全链)

A



B



C



D



Spring is not provided by Philips Lighting.
If the customer need to use, please buy it.
飞利浦照明不提供安装弹簧, 如果需要请另行购买。

Model	Run Current (A) (@230V)	Start (Inrush) Current(A) / Ipeak (A)	Start Current Duration (µs) / T(@50% of Ipeak) (µs)	* Touch current or protective conductor current (mA)	Maximum Number of Luminaire on MCB 16A Type B (pcs)	Maximum Number of Luminaire on MCB 16A Type C (pcs)
RC092V LED26S PSU W60L60	0.13	7	770	≤3.5	21	33
RC092V LED26S PSU W30L120	0.13	7	770	≤3.5	21	33
RC092V LED26S PSU W60L60 CPC	0.13	7	770	≤3.5	21	33
RC092V LED26S PSU W30L120 CPC	0.13	7	770	≤3.5	21	33

The leakage current *(touch current or protective conductor current) of electrical circuit may be greatly dependent upon electrical supply cables used such as its rating and length, proper connection of electrical supply cables to luminaires and wiring connection topology of luminaires to the supply electrical circuit amongst other site conditions.

* In some cases referred to as Earth Leakage Current.



Please read this manual carefully before using the product.

1. For indoor use only.
2. Do not switch on before complete installation.
3. The luminaire shall be installed by a qualified electrician and wired in accordance with the latest IEE electrical regulations or the national requirements.
4. If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.
5. The luminaire shall not be covered with thermal insulation or similar material under any circumstance.
6. The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.
7. The luminaire is complied with IEC 60598 and GB 7000.
8. The corrosive atmosphere or hazardous materials such as sulfur, chlorine, phthalate, etc. must be avoided during the use and storage.



在使用产品前请仔细阅读这个安装指南:

1. 仅适用于室内灯具;
2. 接线过程中, 切勿通电;
3. 灯具应由有资格的电工安装, 接线要符合IEE电气标准或国家标准;
4. 如果此灯具的外部软缆或软线损坏了, 该线要由由制造商或其服务代理商或一个类似的有资格的人来更换, 以避免发生危险;
5. 灯具不能被隔热或类似材料覆盖;
6. 此灯具内的光源应由制造商或其服务代理商或一个类似的有资格的人来更换;
7. 此灯具是依据IEC60598或国标GB 7000所制造;
8. 此灯具避免在腐蚀性环境或者含有有害物质, 例如硫化物, 卤化物, 邻苯二甲酸酯等环境中存储和使用。

用户资料
用户姓名: _____ 身份证号码: _____
地址: _____
联系电话: _____ 邮政编码: _____
产品名称: _____ 产品型号: _____
出售单位及地址: _____
购买日期: 年 月 日 发票号码: _____

飞利浦照明

上海办事处
上海市闵行区虹梅路1535号
1号楼11F
电话: 021-53989000
邮政编码: 200233

南京办事处
南京市汉中路2号金陵饭店
世界贸易中心6楼
电话: 025-85055588
邮政编码: 210005

武汉办事处
湖北省武汉市汉口建设大道568号
新世界国贸大厦4708室
电话: 027-85565999
邮政编码: 430022

广州办事处
广州市越秀区中山三路33号
中华国际中心B座18楼
电话: 020-83141888
邮政编码: 510055

北京办事处
北京市朝阳区光华路9号世
贸天阶大厦10楼
电话: 010-85373888
邮政编码: 100020

西安办事处
西安市南大街西段88号老三
阳世纪星大厦30楼
电话: 029-88205546
邮政编码: 710045

成都办事处
成都市高新区天府大道中段
1268号华联国际中心10楼
电话: 028-62727666/7888
邮政编码: 610041

沈阳办事处
沈阳市沈河区北站路59号财
富中心B座11楼
电话: 024-81285092
邮政编码: 110013

仅限中国大陆地区

飞利浦灯具产品 专用说明书 保修条例

本公司保证该产品在正常使用及保养下能发挥其优越性能。
同时本公司将为持证用户提供一年之保修服务(不含光源)。
1 自购买之日起一年内, 凡经本公司维修人员确认为正常使用情况
下因制造工艺或材料而导致的故障或损坏, 您都将获得免费门市
保修服务;
2 此免费保修服务包括附件、辅助装置、运费;
3 维修时, 保修证及安装正本或其他有效证明同时使用方为有效;
4 以下情况将不能享受免费服务:
1) 接不当电源, 使用不当之安装而造成的损坏;
2) 非经本公司认可之维修和改装而造成的损坏;
3) 错误或超急使用或不适当配件而造成的损坏;
4) 因运输及其他意外而造成的损坏;
5 此证若经涂改即作废;
6 此证仅限在中国境内使用有效。

服务热线: 8008201201

飞利浦灯具(上海)有限公司

仅限中国大陆地区

产品中有害物质的名称及含量

12NC: 444100099181

部件名称	有害物质					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
LED灯板/光源	○	○	○	○	○	○
驱动器(板), 铜 制及电子零部件	×	○	○	○	○	○
透镜光学部件	○	○	○	○	○	○
外壳及其 他零部件	○	○	○	○	○	○

本表格依据SJ/T 11364的规定编制。

○: 表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。

×: 表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。

Applicable to China Only