INSTALLATION INSTRUCTIONS

SLENDERFORM RECESSED (SFCR)

THESE INSTRUCTIONS APPLY TO THE SFCR (SLENDERFORM RECESSED) FAMILY INTENDED TO BE INSTALLED IN A NON-INSULATED, COVERED CEILING.

IMPORTANT! BE SURE ALL POWER IS OFF PRIOR TO INSTALLING LUMINIARES. READ ALL INSTRUCTIONS BEFORE PERFORMING ANY WORK

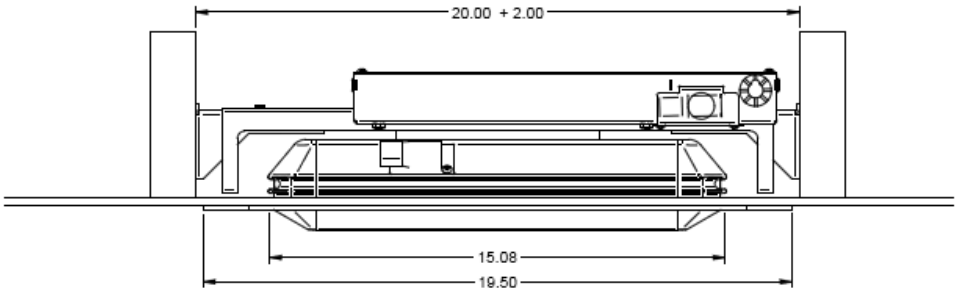

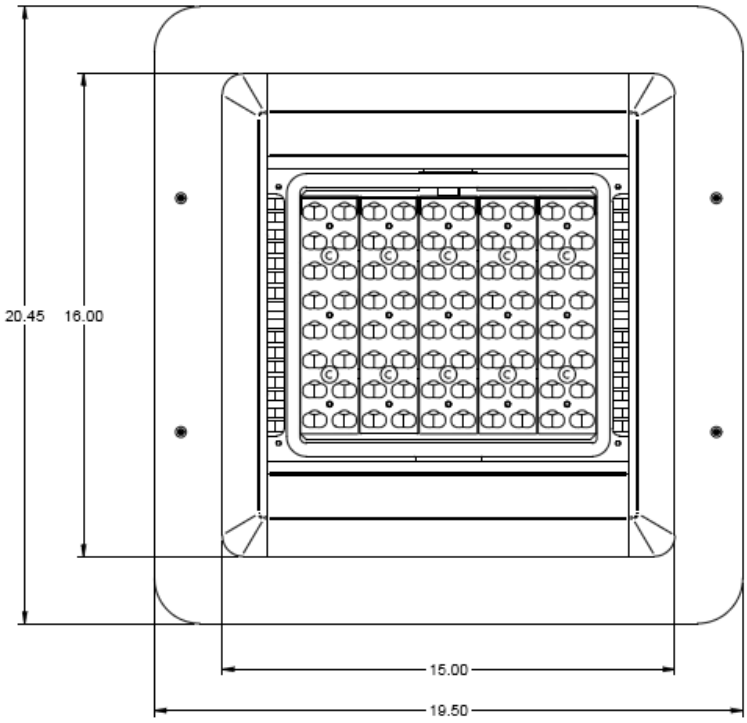

© 2016 Philips Lighting Holding B.V. All rights reserved.
www.philips.com/luminaires

INSTALLATION INSTRUCTIONS

SLENDERFORM RECESSED (SFCR)

CEILING PREPARATION

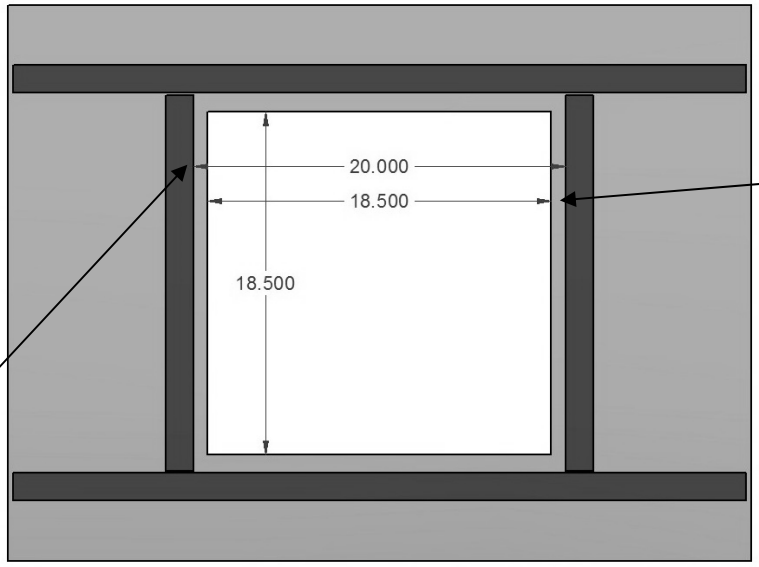

18.5” SQUARE CUT OUT FOR UNIT CLEARANCE CENTERED IN OPENING

MOUNTING SUPPORT BRACKETS REQUIRE A RANGE OF 20-23.4”

COMPONENTS:

COSMETIC COVER

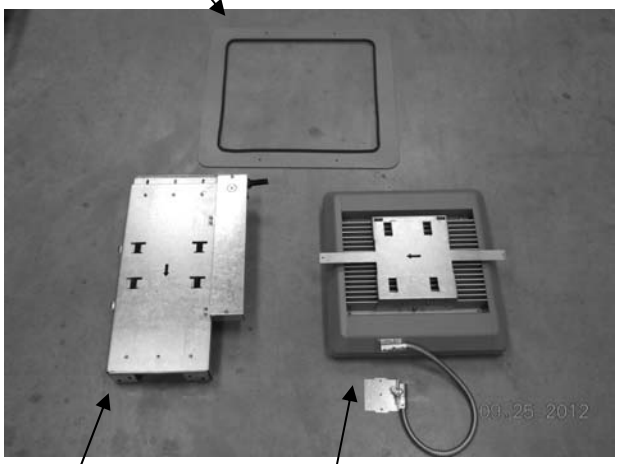

CEILING BRACKET ASSEMBLY

LUMINAIRE WITH FLEX CONDUIT AND MOUNTING BRACKET

STEP 1: ON BACK OF MOUNTING BRACKET LOOSEN 4X ADJUSTMENT SCREWS

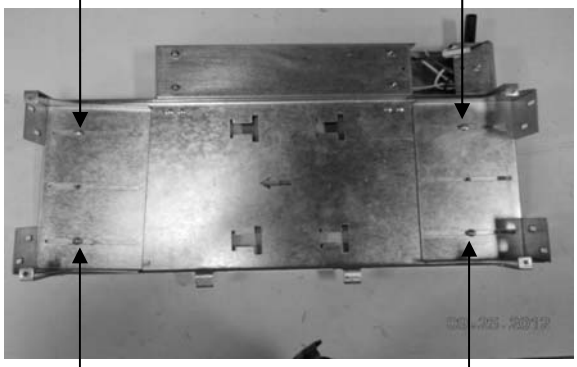

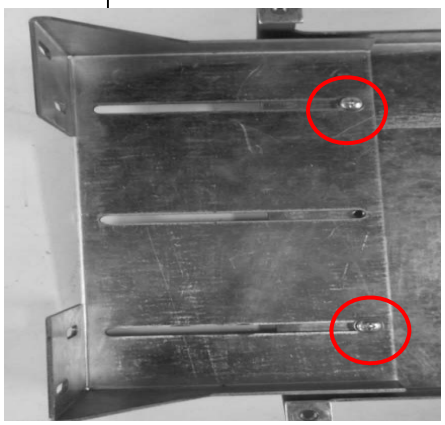

© 2016 Philips Lighting Holding B.V. All rights reserved.
www.philips.com/luminaires

PHILIPS

INSTALLATION INSTRUCTIONS

SLENDERFORM RECESSED (SFCR)

STEP 2: SLIDE 2X SIDE BRACKETS INWARD

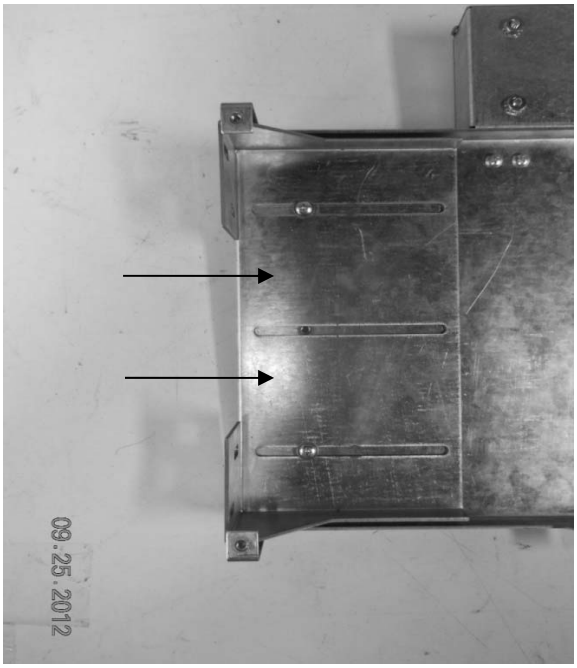

STEP 3: PLACE MOUNTING BRACKET INTO CEILING AND EXTEND SIDE BRACKETS OUTWARD

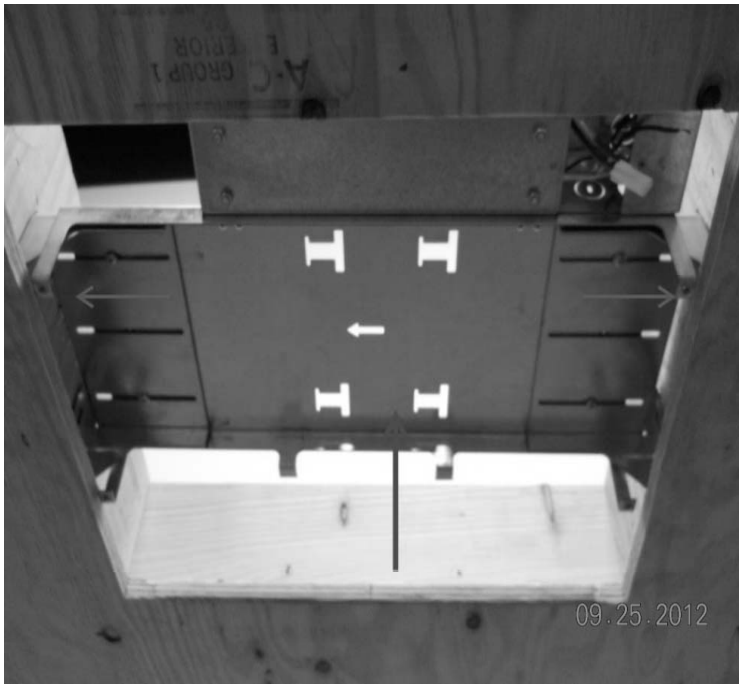

USE 4X WASHERS AND SCREWS TO SECURE SIDE BRACKETS TO STUD (HARDWARE SUPPLIED BY OTHERS)

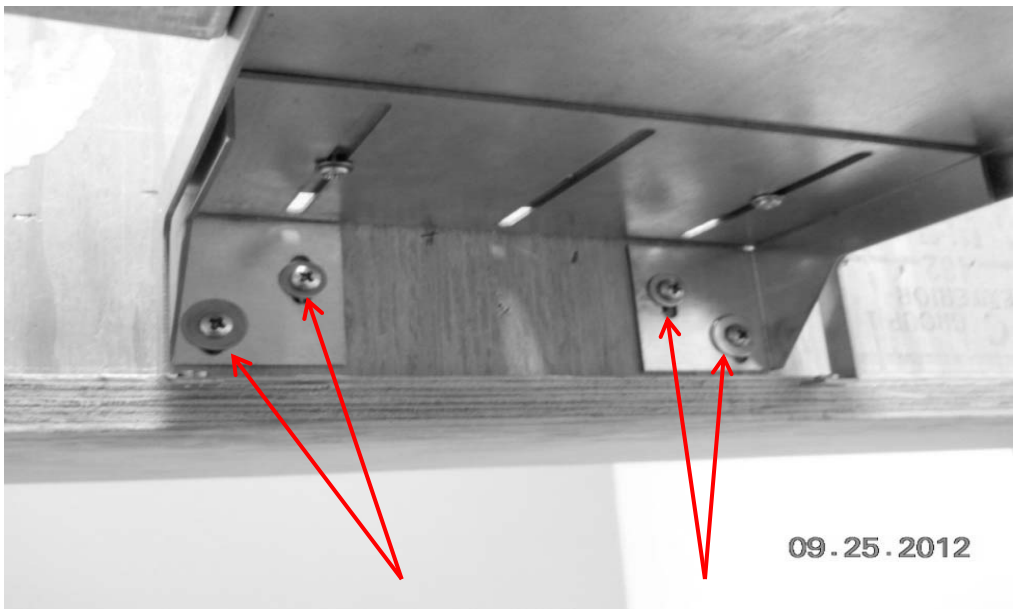

© 2016 Philips Lighting Holding B.V. All rights reserved.
www.philips.com/luminaires

INSTALLATION INSTRUCTIONS

SLENDERFORM RECESSED (SFCR)

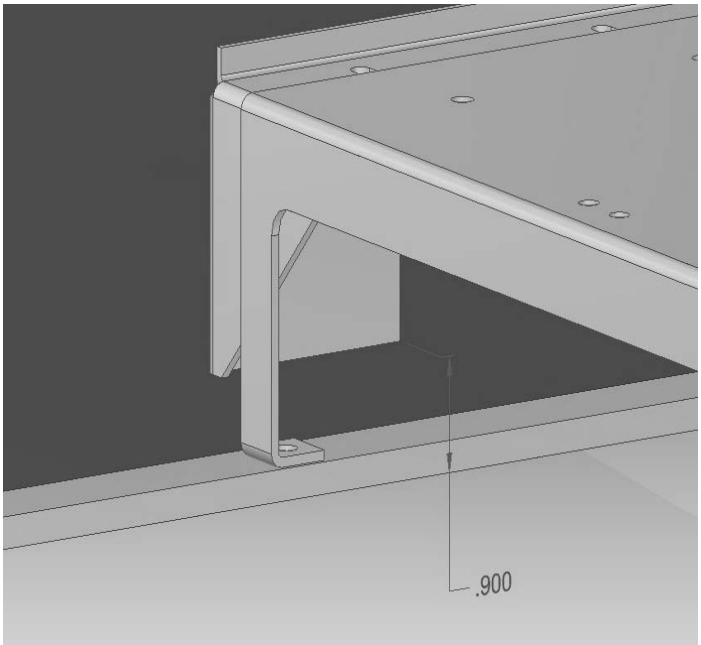

NOTE: For the fixture to mount flush with the ceiling it is important that the side brackets adjacent to the mounting bracket be raised so that the bottom of the bracket sits 9/10” from the room side of the ceiling.

STEP 4: PULL IN OUTSIDE POWER LINES USING THE INCLUDED CUTOUTS ON THE DRIVER BRACKET ASSEMBLY. USE WIRE-NUTS TO CONNECT THE OUTSIDE POWER TO THE FIXTURE’S CONNECTIONS. BLK TO BLK, WHT TO WHT, GRN TO GRN.

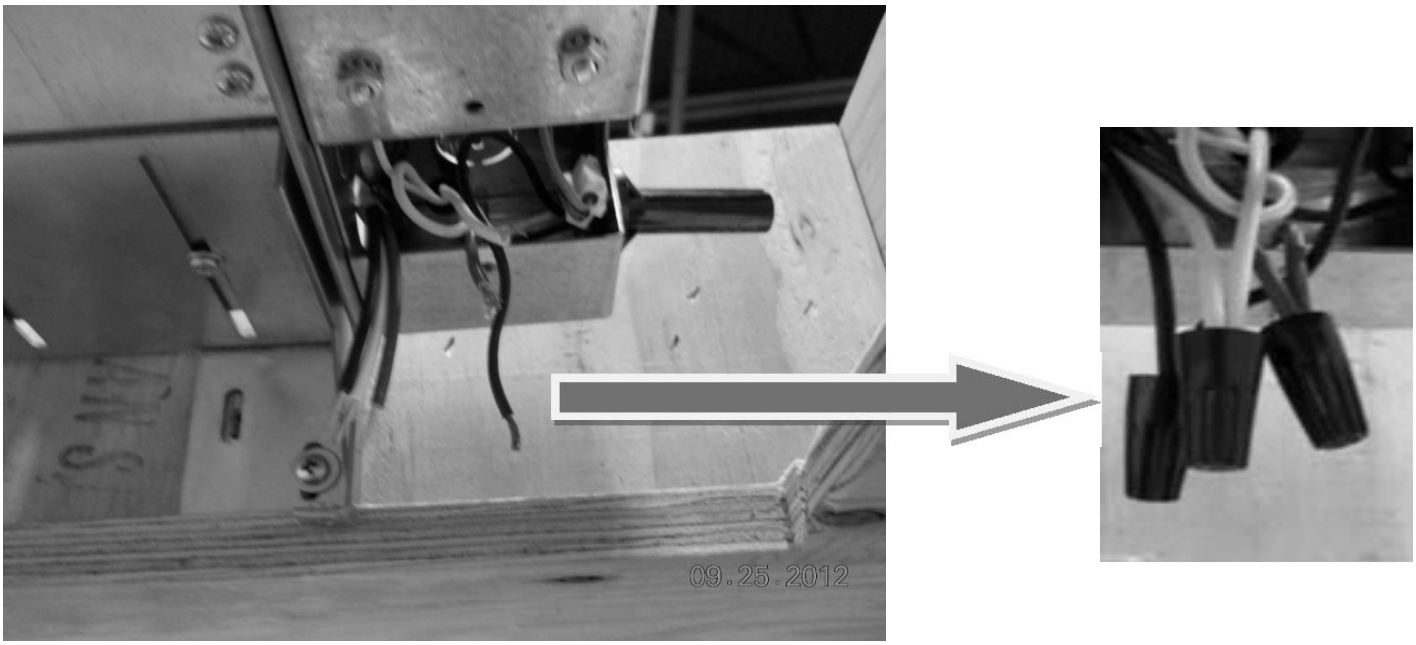

© 2016 Philips Lighting Holding B.V. All rights reserved.
www.philips.com/luminaires

INSTALLATION INSTRUCTIONS

SLENDERFORM RECESSED (SFCR)

USE CUTOUTS ON FIXTURE BRACKET TO HANG THE FIXTURE ON THE TOP MOUNTING BRACKET FOR EASE OF CONNECTION.

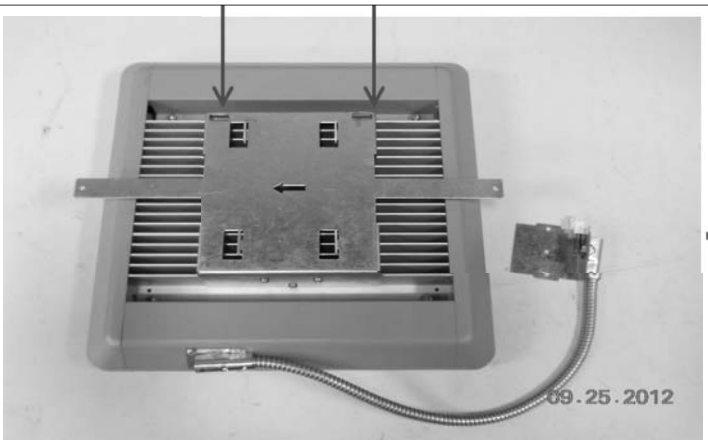

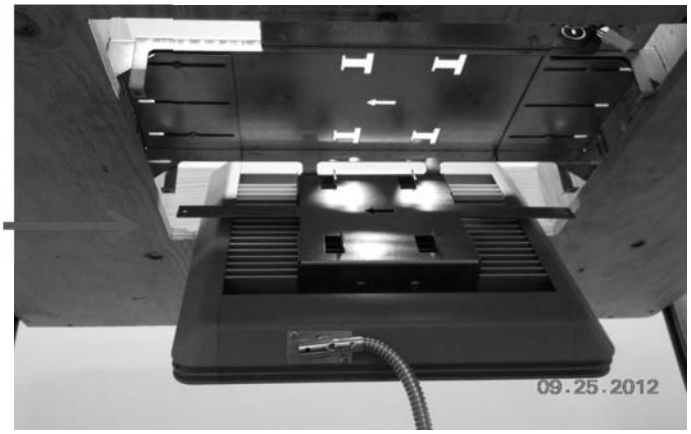

STEP 5: CONNECT THE CABLE FROM THE LUMINAIRE TO THE MATING HARNESS OF THE DRIVER. SECURE THE CABLE TO THE DRIVER BRACKET WITH 2X #8-32 X 5/16" SCREWS.

Place the luminaire to the far side of the opening. Note the flex conduit and its placement between luminaire and mounting bracket to be sure it doesn't prevent proper mounting.

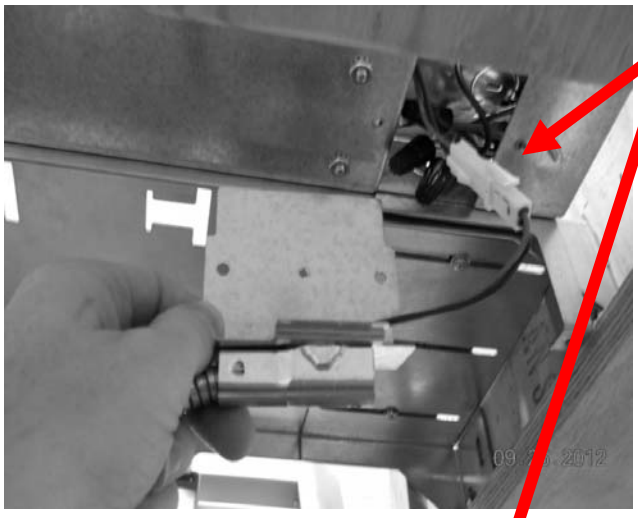

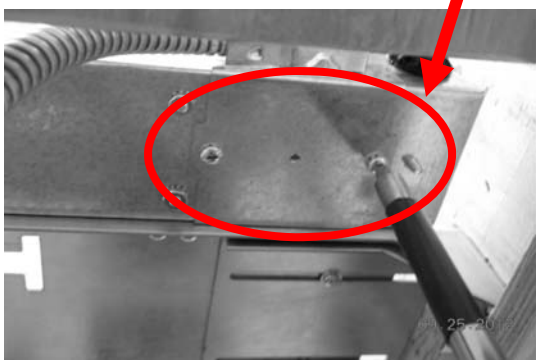

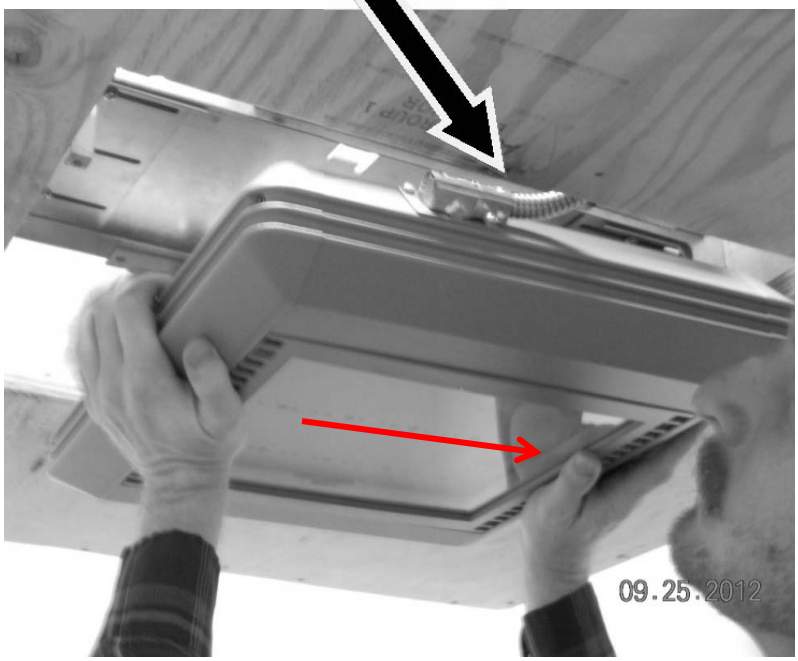

© 2016 Philips Lighting Holding B.V. All rights reserved.

PHILIPS

INSTALLATION INSTRUCTIONS

SLENDERFORM RECESSED (SFCR)

STEP 6: PUSH THE LUMINAIRE UP INTO THE MOUNTING BRACKET AND SLIDE THE LUMINAIRE IN THE DIRECTION OF THE ARROW TO LOCK IT IN PLACE. (AS SHOWN IN THE TOP VIEWS BELOW)

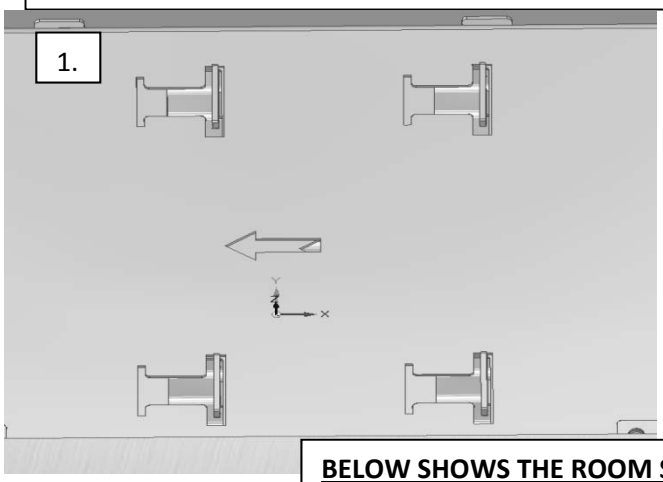

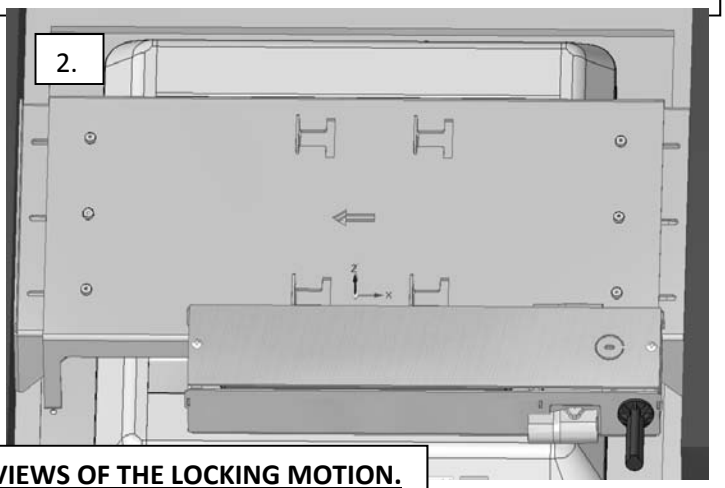

BELOW SHOWS THE ROOM SIDE VIEWS OF THE LOCKING MOTION.

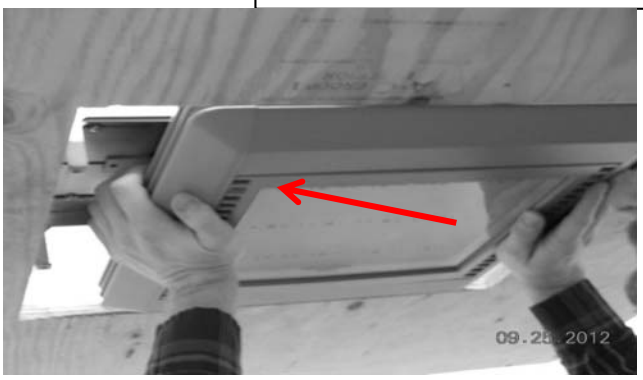

STEP 7: RELEASE THE FIXTURE; IT SHOULD HANG SECURELY IN PLACE. ON EITHER SIDE OF THE FIXTURE ARE LOCK TABS. USE 2X #8-32 X 1/2" TO SECURE THE FIXTURE TO THE TOP MOUNTING BRACKET.

STEP 8: MOUNT THE COSMETIC COVER TO THE FIXTURE USING 4X #8-32 X 5/8" FLAT HEAD MACHINE SCREWS.

© 2016 Philips Lighting Holding B.V. All rights reserved.
www.philips.com/luminaires

PHILIPS

INSTALLATION INSTRUCTIONS

SLENDERFORM RECESSED (SFCR)

WIRING DIAGRAM: FOR USE WITH 120 OR 277V INPUT ONLY

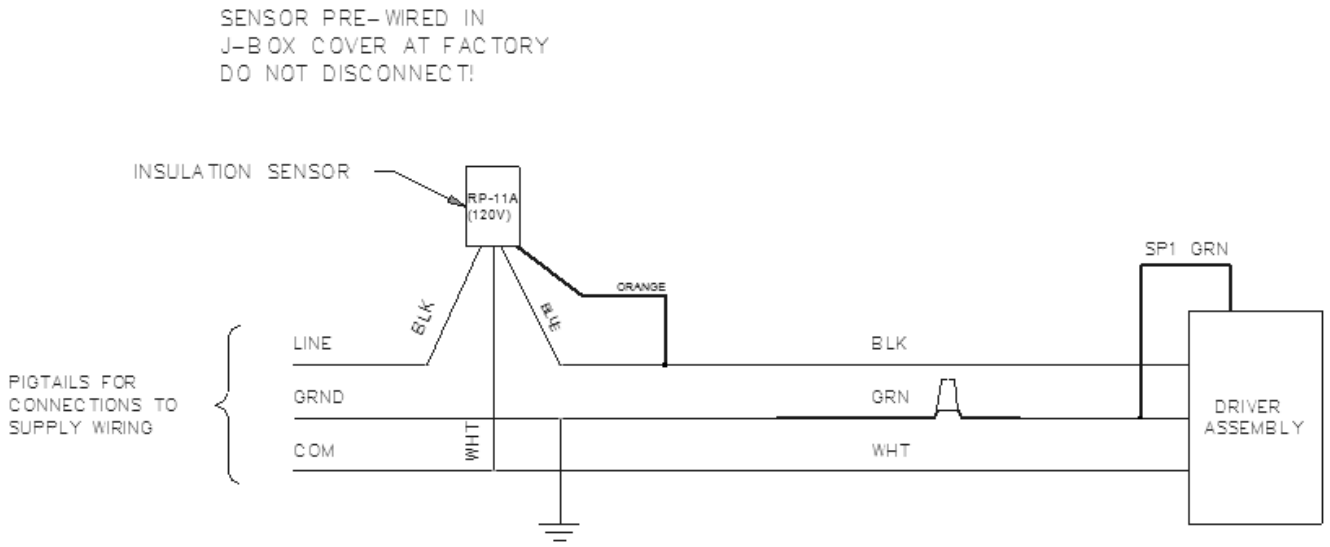

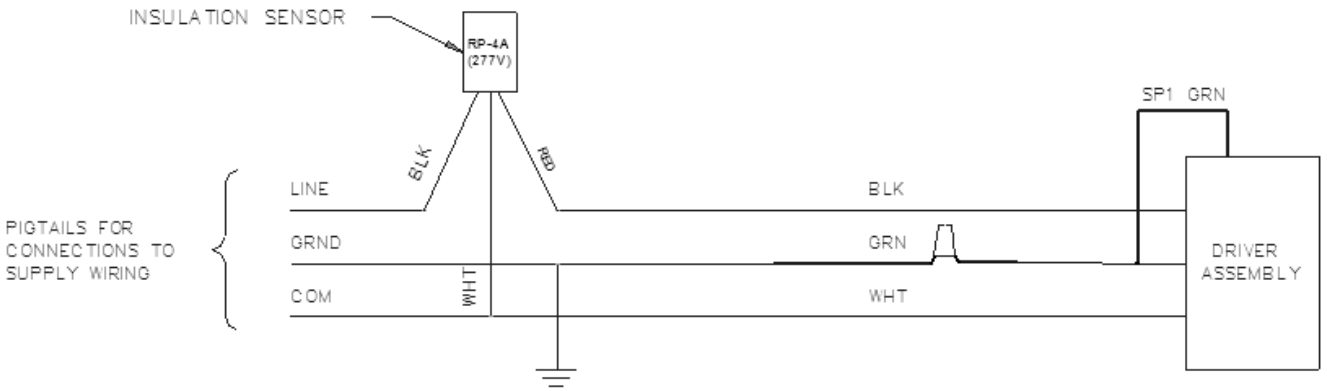

INSULATION SENSOR WIRING DIAGRAM

© 2016 Philips Lighting Holding B.V. All rights reserved.
www.philips.com/luminaires

Philips Lighting North America Corporation
200 Franklin Square Drive,
Somerset, NJ 08873, USA

Philips Lighting Canada Ltd.
281 Hillmount Road,
Markham ON, Canada L6C 2S3