


Coffaire (CF) and HP90 (H9)

Installation Instructions


Page 1 of 2

- 1 IMPORTANT:** For Parapilus remove the Louver before installing fixture into ceiling system (by others). To remove the Louver, depress one side of the Louver to clear the Hinge Pin and


pull the Louver towards you. Rotate the Louver upwards and remove from the Hinge Pins on the opposite side of the Housing.

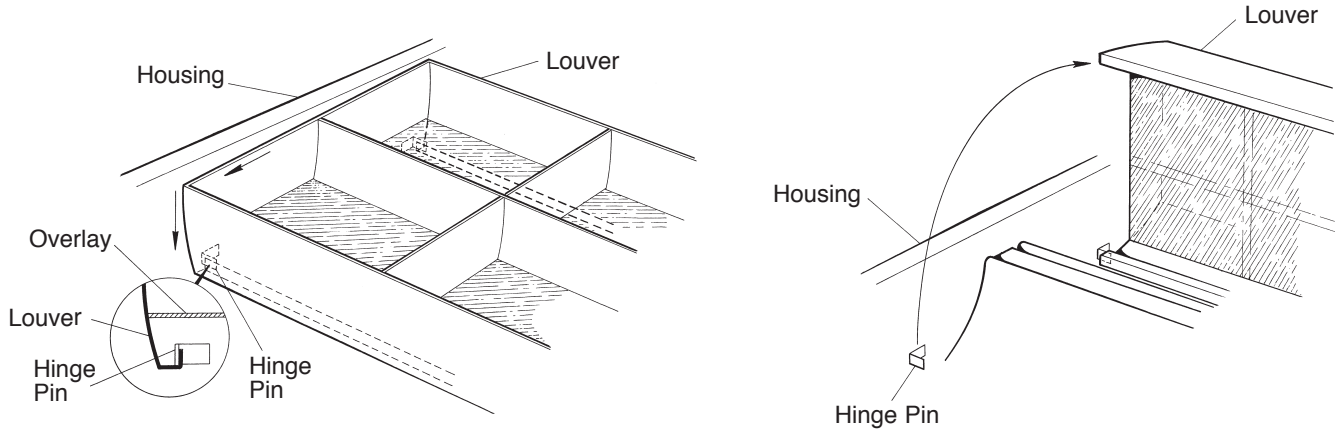



- 2 Access Plate for Coffaire**
Remove Access Plate (snaps in and out of position). Bend Housing Tab up to attach ground screw to green screw on the Housing Tab. Then bend Housing Tab down into the Housing as shown. Install Access Plate.

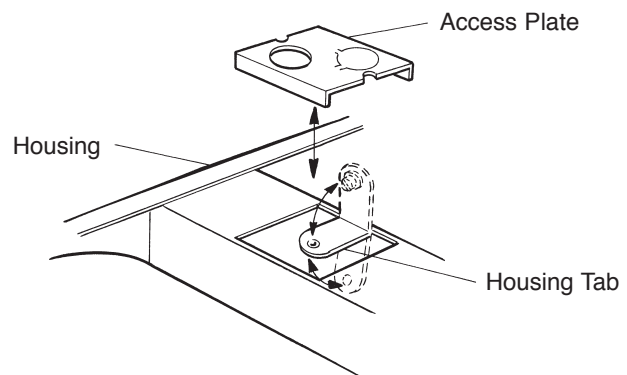

- 3** To install fixture into the ceiling system (by others), bend Earthquake Clips out 90 degrees from Housing End. Install fixture into ceiling system. Secure the fixture to the ceiling system by bending the Locking Tabs on the Earthquake Clips towards the T-bar.

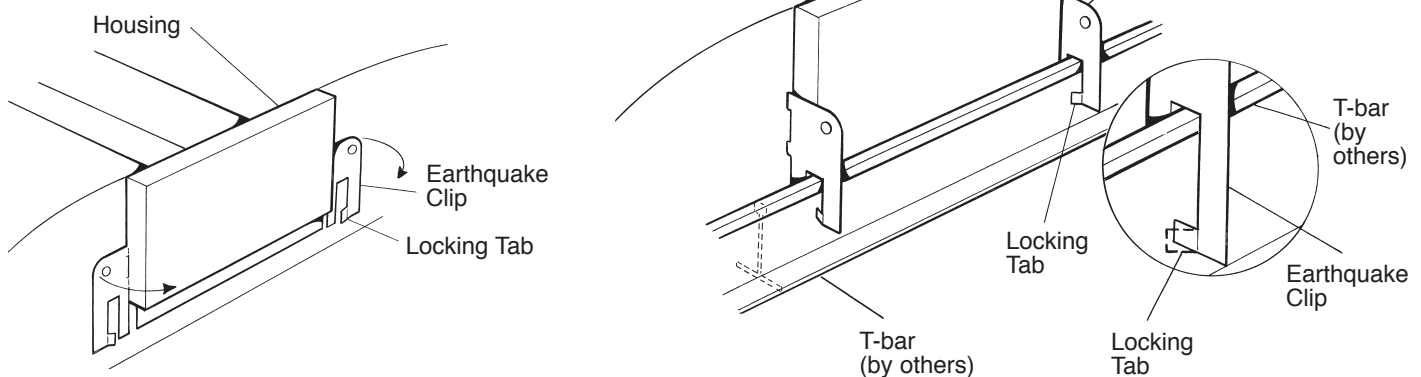

- 4 Install fixture into Ceiling System (by others). For Coffaire (CF) open Lamp Shield by gripping Narrow Flange of Lamp Shield and pull Lamp Shield towards you, letting the opposite side of the Lamp Shield rest on the Hinge Pins (Wide Flange).

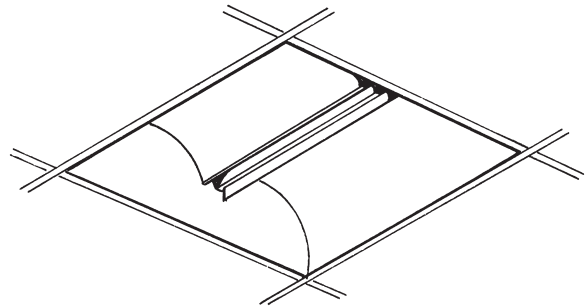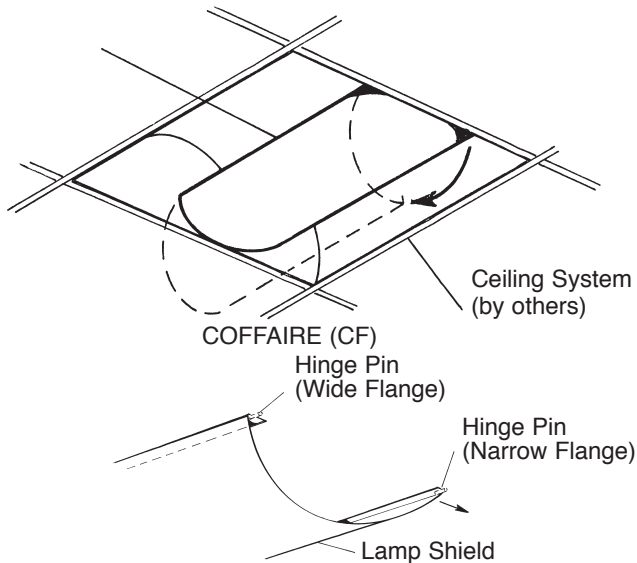

HP90 Lens Removal

Push Lens to one side (A), and pull Lens off Hinge Pins (B) and downward. Unlink Lens from all Hinge Pins (both ends of fixture) clearing the lamps for removal.

