




by  **Signify**

Signify North America Corporation
200 Franklin Square Drive
Somerset, NJ 08873
Telephone 855-486-2216

Signify Canada Ltd.
281 Hillmount Road,
Markham, ON, Canada L6C 2S3
Telephone 800-668-9008

INSTALLATION INSTRUCTIONS: 44 MED CLIP-ON REFLECTOR ASSEMBLY

Medium

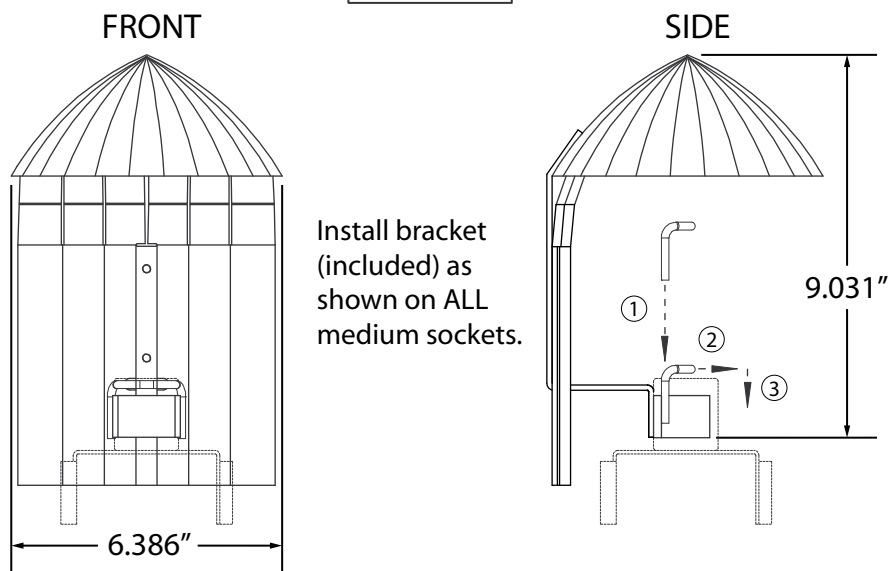

READ THESE INSTRUCTIONS CAREFULLY BEFORE INSTALLING THIS FIXTURE.

These clip-on reflector assemblies are intended for field installation. Hadco strongly recommends you disconnect power from the luminaire prior to installing the reflector assembly to avoid bodily harm from the lit lamp. These instructions do not purport to cover all details or variations in equipment or installation. If specific problems occur, contact Hadco for assistance. Retain these instructions for future reference.

1. Install bracket over assembly's clip as shown until it is just above the top of the socket.
2. Slide bracket toward front of assembly's clip until it "clicks" in to place.
3. Push bracket down until it stops.