

PHILIPS Day-Brite CFI

Healthcare

SurgiCare Sealed Troffer 2x4

SSTRG24 & SSTRF24
T8, T5, or T5HO



Project: _____
Location: _____
Cat.No: _____
Type: _____
Lamps: _____ Qty: _____
Notes: _____

The Philips Day-Brite / CFI SurgiCare Sealed Troffer is designed for the illumination, electrical shielding and infection control requirements of the surgical suite. The asymmetric/symmetric light distribution provides ambient illumination while contributing supplemental illumination for the surgical field. The housing is fully sealed to minimize potential room contamination and simplify cleaning.

Ordering guide

example: SSTRG246T82773HALPDSTA1ASMEM1

Model No.	No of Lamps*	Lamp Type	Voltage	No. of Circuits	Housing Material	Door Frame Material	Door Mounting	Lens	Options
					HALP				
SSTRG24 SurgiCare Sealed 2x4 Grid model	3 4 6 ¹ 21 ² 3 lamps (2 white / 1 green) 22 ² 4 lamps (2 white / 2 green) 33 ² 6 lamps (3 white / 3 green) 42 ² 6 lamps (4 white / 2 green)	T8 F32T8 T5 F28T5 T5HO F54T5HO	120 277 120D ³ (0-10V dimming) 277D ³ (0-10V dimming)	1 ⁴ 2 ⁴ 3 ^{4,5}	HALP .050" aluminum	DST 18 ga. cold rolled steel DALP Painted silver extruded aluminum DALP Painted white extruded aluminum	A1 Stainless steel hinge/ screws A2 Stainless steel screws/ dual aircraft safety cables	ASM Asymmetric/ symmetric lens SYM Symmetric lens	EM1 ⁶ 1-lamp emergency ballast battery back-up (90 min.) EM2 ^{2,6} 2-lamp emergency ballast battery back-up (90 min.) 1/3 One 3-lamp ballast 1/21 2-lamp & 1-lamp ballasts 1/4 One 4-lamp ballast 2/2 Two 2-lamp ballasts 2/3 Two 3-lamp ballasts 3/2 Three 2-lamp ballasts 1/42 4-lamp & 2-lamp ballasts EB Electronic ballast, <20% THD EBD Electronic dimming ballast EB10I T8 electronic ballast, instant start, <10% THD EB10R Elec. ballast, program rapid start, <10% THD SBF Slow blow fuse TBC T-bar support clips

Footnotes

- * See standard lamp chart on page 2.
- 1 Not available for T5HO models.
- 2 Available for T8 models only.
- 3 Not available for T5 models.
- 4 Must specify ballast quantity and type listed under options.
- 5 Available for T8 6 and 42 lamp configuration models only.
- 6 UL listed (not CUL).

SSTRG24 & SSTRF24 SurgiCare Sealed Troffer 2x4

T8, T5, or T5HO



Features

- Removable electrical gear trays, centralized wiring compartment and continuous hinged door allows simplified installation and servicing.
- Seamless door frame, antimicrobial paint finish and smooth, room-side lens supports infection control efforts.
- Meets MIL-STD 461F, wet location listed and is IP65 rated.

Specifications

- **Construction:** Fully sealed .050" aluminum housing with seam welded construction. Housing painted after fabrication.
- **Door Frame:** Seamless door frame formed from 18 gauge cold rolled steel. Full length, stainless steel hinge and stainless steel Phillips head screws secure frame to the housing. Screws are captive and flush to the door frame. Full length, galvanized steel brackets secure the lens to the frame. A continuous high density microcellular polyurethane foam gasket provides a seal between the door frame and housing.
- **Lens:** SSTR utilizes either an asymmetric/symmetric or symmetric dual lens assembly. The asymmetric/ symmetric assembly has an asymmetric linear prism acrylic lens (with a nominal thickness of .125") positioned behind a clear acrylic lens (with a nominal thickness of .125"). The symmetric assembly has a pattern 12 prismatic acrylic lens (with a nominal thickness of .125") positioned behind the clear acrylic lens. The external clear lens provides a smooth room-side surface for easy cleaning and is sealed to the door frame with a continuous bead of silicone sealant. The entire lens assembly is secured to the door frame on all four sides with full-length galvanized steel brackets.
- **Finish:** The housing and door frame are painted after fabrication with a white polyester powdercoat paint. The finish has an antimicrobial finish to inhibit the growth of microbes.
- **Lamps:** SSTR is available with T8, T5 and T5HO linear fluorescent lamps. Lamps are included with the fixture. The standard color temperature is 3500K. Other color temperatures are available upon request. See the ordering information below for further detail.
- **Electrical:** T8 lamp models have instant-start electronic ballasts. T5 and T5HO models have program start electronic ballasts. Dimming ballasts are program start electronic ballasts with a dimming range of 100-5% and operate with 0-10v controls. Compliant to IEC 60929. All standard lamp and ballast configurations have been certified for MIL-STD 461F. RFI filters are provided on all models.
- **Installation:** The grid housing is suitable for use with T-Grid ceiling systems having cross section dimensions up to 1.5" high and 1" wide. For proper door operation, grid housings must be mounted in T-Section only. Not for installation with wall molding. Optional T-Bar clips are available. The flange housing is suitable for recessed applications. Swing-out sway bars support fixtures in the ceiling structure. (See Installation Instructions for more detailed information.)
- **Listing:** UL and CUL Listed for Wet Locations. MIL-STD 461F – Navy Fixed & Air Force. IP65 rated.
- **Warranty:** 5 year limited warranty.

Dimensions

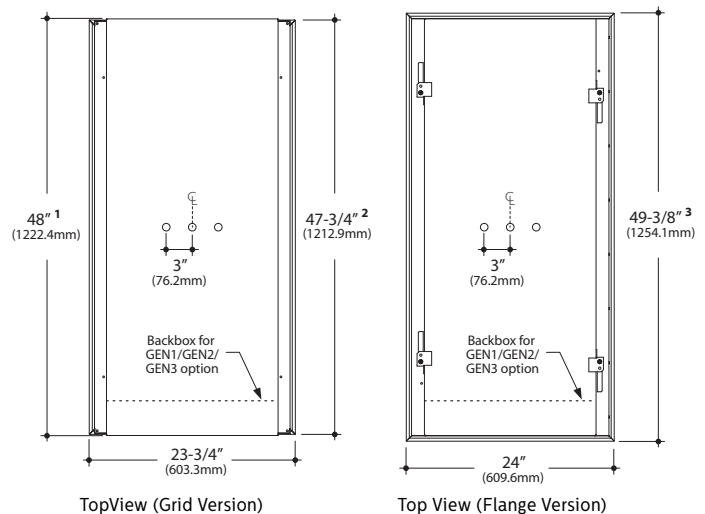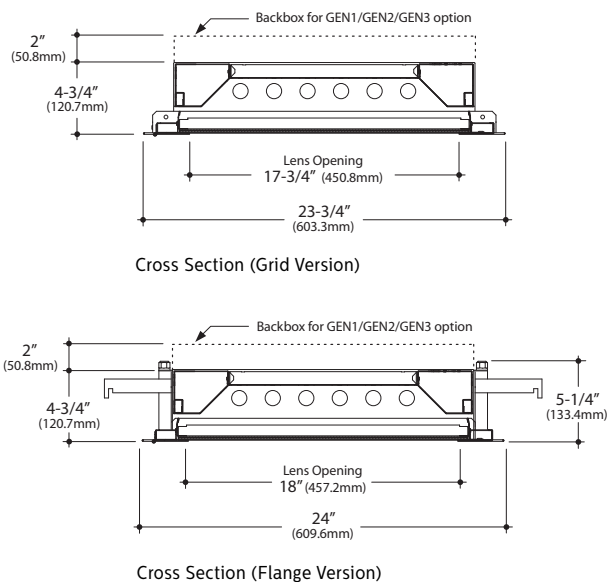

¹ Housing length at lamp compartment.

² Measured at fixture trim (Recess for T-Grid).

³ Measured from flange to flange.

Note: The recommended ceiling opening for a single flange model is 22-7/8" x 48-5/16". Refer to the Installation Instructions for more detailed instructions including the ceiling opening size for multiple fixture installations.

SSTRG24 & SSTRF24 SurgiCare Sealed Troffer 2x4


T8, T5, or T5HO

Photometry

Standard Lamps & Circuits


SSTR (F/G) 24-6-T8-ASM

(6) 32W T8 Fluorescent -
2950 lumens per lamp
Report No.: ITL62210
Efficiency: 61.6%

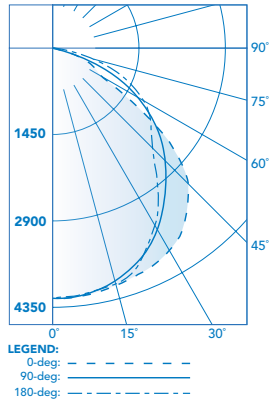

SSTR (F/G) 24-6-T8- SYM

(6) 32W T8 Fluorescent -
2950 lumens per lamp
Report No.: ITL62211
Efficiency: 58.8%

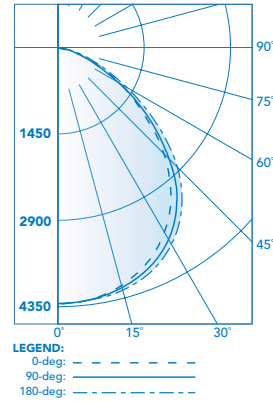


Lamp Option	Combinations	Lamp Type
6	6 lamps, 3 circuits ① ② ③ ③ ② ①	T8, T5
6, 42"	6 lamps, 2 circuits (6 white lamps) or (4 white/2 green lamps) ① ② ② ② ② ①	T8, T5
6, 33"	6 lamps, 2 circuits (3 white/3 green lamps) ① ② ① ② ① ②	T8, T5
4, 22"	4 lamps, 2 circuits ① ② ② ①	T8, T5, T5HO
3, 21"	3 lamps, 2 circuits ① ② ①	T8, T5 T5HO

* Green Lamp options are only available with T8 lamps.
Note: Emergency ballasts have separate circuits.

SSTR (F/G) 24-6-T8-ASM

(6) 32W T8 Fluorescent -
2950 lumens per lamp
Report No.: ITL62210
Efficiency: 61.6%

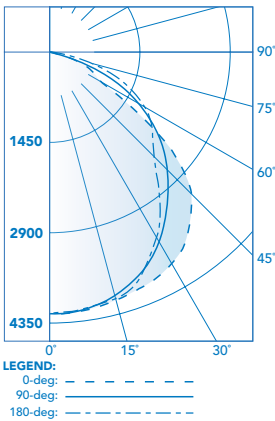

CO-EFFICIENTS OF UTILIZATION

Effective floor cavity reflectance=20%

rc	80				70				50				30				10				0
rw		70	50	30	10	70	50	30	10	50	30	10	50	30	10	50	30	10	0		
RCR	0	73	73	73	73	72	72	72	72	68	68	68	66	66	66	63	63	63	62		
	1	68	65	63	61	66	64	62	60	61	59	58	59	57	56	57	55	54	53		
	2	62	57	53	50	60	56	53	50	54	51	48	52	49	47	50	48	46	45		
	3	57	51	46	42	55	50	45	42	48	44	41	46	43	40	45	42	40	38		
	4	52	45	40	36	51	44	39	36	43	39	35	41	38	35	40	37	34	33		
	5	48	40	35	31	47	40	35	31	38	34	31	37	33	30	36	33	30	29		
	6	44	36	31	27	43	36	31	27	35	30	27	34	30	27	33	29	26	25		
	7	41	33	28	24	40	33	28	24	32	27	24	31	27	24	30	26	24	22		
	8	38	30	25	22	37	30	25	22	29	25	21	28	24	21	28	24	21	20		
	9	36	28	23	19	35	27	23	19	27	22	19	26	22	19	25	22	19	18		
10	34	26	21	18	33	25	21	18	25	20	18	24	20	17	24	20	17	16			

CANDLEPOWER DISTRIBUTION

Vertical Angle	Horizontal Angle				
	0°	45°	90°	135°	180°
0°	4196	4196	4196	4196	4196
5°	4209	4202	4194	4168	4177
15°	4124	4077	4044	4036	4099
25°	4012	3872	3740	3678	3709
35°	3769	3582	3232	3064	3085
45°	3211	3086	2667	2460	2369
55°	1797	2132	2019	1993	1992
65°	783	646	1223	1312	1464
75°	365	370	345	562	698
85°	84	53	22	79	101
90°	0	0	0	0	0

ZONAL LUMEN SUMMARY

Zone	Lumens	% Lamp	% Fixt.
0-30	3294	18.6	30.2
0-40	5371	30.3	49.2
0-60	9266	52.3	84.9
0-90	10912	61.6	100.0
90-120	0	0.0	0.0
0-180	10912	61.6	100.0




Some luminaires use fluorescent or high intensity discharge (HID) lamps that contain small amounts of mercury. Such lamps are labeled, "Contain Mercury" and/or the symbol "Hg". Lamps that contain mercury must be disposed of in accordance with local requirements. Information regarding lamp recycling and disposal can be found at www.lamprecycle.org

SSTRG24 & SSTRF24 SurgiCare Sealed Troffer 2x4

T8, T5, or T5HO

SSTR (F/G) 24-6-T8-SYM

(6) 32W T8 Fluorescent -
2950 lumens per lamp
Report No.: ITL62211
Efficiency: 58.8%

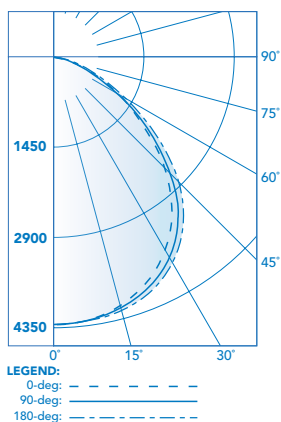

CO-EFFICIENTS OF UTILIZATION

Effective floor cavity reflectance=20%

rc	80				70				50				30				10				0
rw	70	50	30	10	70	50	30	10	50	30	10	50	30	10	50	30	10	50	30	10	0
RCR	0	70	70	70	70	68	68	68	68	65	65	65	63	63	63	60	60	60	59	59	0
1	65	62	60	58	63	61	59	57	59	57	55	56	55	54	54	53	52	51	51	51	0
2	60	55	52	49	58	54	51	48	52	49	47	50	48	46	48	47	45	44	44	44	0
3	55	49	45	41	53	48	44	41	46	43	40	45	42	40	43	41	39	38	38	38	0
4	50	44	39	36	49	43	39	35	42	38	35	40	37	34	39	36	34	33	33	33	0
5	47	39	35	31	45	39	34	31	38	34	30	37	33	30	35	32	30	29	29	29	0
6	43	36	31	27	42	35	31	27	34	30	27	33	30	27	32	29	26	25	25	25	0
7	40	33	28	24	39	32	27	24	31	27	24	30	27	24	30	26	24	23	23	23	0
8	37	30	25	22	36	29	25	22	29	24	22	28	24	21	27	24	21	20	20	20	0
9	35	27	23	20	34	27	23	20	26	22	19	26	22	19	25	22	19	18	18	18	0
10	33	25	21	18	32	25	21	18	24	20	18	24	20	18	23	20	18	17	17	17	0

CANDLEPOWER DISTRIBUTION


Vertical Angle	Horizontal Angle				
	0°	45°	90°	135°	180°
0°	4285	4285	4285	4285	4285
5°	4275	4273	4271	4276	4277
15°	4123	4133	4162	4194	4206
25°	3803	3837	3909	3976	4000
35°	3277	3333	3434	3504	3555
45°	2512	2533	2636	2750	2828
55°	1603	1634	1676	1793	1825
65°	867	825	796	870	910
75°	376	340	324	372	419
85°	63	66	69	78	76
90°	0	0	0	0	0

ZONAL LUMEN SUMMARY

Zone	Lumens	% Lamp	% Fixt.
0-30	3384	19.1	32.5
0-40	5523	31.2	53.1
0-60	9086	51.3	87.3
0-90	10407	58.8	100.0
90-180	0	0.0	0.0
0-180	10407	58.8	100.0

SSTR (F/G) 24-5-T5HO-ASM

(4) 54W T5HO Fluorescent -
4500 lumens per lamp
Report No.: ITL62213
Efficiency: 54.6%

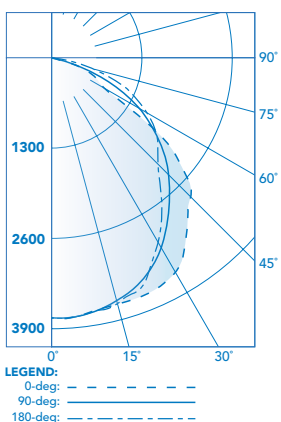

CO-EFFICIENTS OF UTILIZATION

Effective floor cavity reflectance=20%

rc	80				70				50				30				10				0
rw	70	50	30	10	70	50	30	10	50	30	10	50	30	10	50	30	10	50	30	10	0
RCR	0	65	65	65	65	64	64	64	64	61	61	61	58	58	58	56	56	56	55	55	0
1	60	58	55	54	59	56	54	53	54	52	51	52	51	49	50	49	48	47	47	47	0
2	55	51	47	44	53	50	46	44	48	45	43	46	44	42	44	43	41	40	40	40	0
3	50	45	41	37	49	44	40	37	42	39	36	41	38	36	39	37	35	34	34	34	0
4	46	40	35	32	45	39	35	32	38	34	31	37	33	31	35	33	30	29	29	29	0
5	42	36	31	27	41	35	31	27	34	30	27	33	29	27	32	29	26	25	25	25	0
6	39	32	27	24	38	32	27	24	31	27	24	30	26	24	29	26	23	22	22	22	0
7	36	29	25	21	35	29	24	21	28	24	21	27	24	21	26	23	21	20	20	20	0
8	34	27	22	19	33	26	22	19	26	22	19	25	21	19	24	21	19	18	18	18	0
9	32	25	20	17	31	24	20	17	24	20	17	23	19	17	22	19	17	16	16	16	0
10	30	23	18	16	29	22	18	16	22	18	15	21	18	15	21	18	15	14	14	14	0

CANDLEPOWER DISTRIBUTION

Vertical Angle	Horizontal Angle				
	0°	45°	90°	135°	180°
0°	3740	3740	3740	3740	3740
5°	3744	3745	3737	3744	3739
15°	3668	3623	3619	3596	3653
25°	3635	3483	3359	3300	3348
35°	3335	3258	2902	2741	2763
45°	2833	2696	2382	2179	2167
55°	1848	1960	1802	1800	1830
65°	725	601	1094	1189	1324
75°	338	338	309	512	651
85°	73	54	25	80	110
90°	0	0	0	0	0

ZONAL LUMEN SUMMARY

Zone	Lumens	% Lamp	% Fixt.
0-30	2950	16.4	30.0
0-40	4810	26.7	48.9
0-60	8324	46.2	84.6
0-90	9836	54.6	100.0
90-120	0	0.0	0.0
0-180	9836	54.6	100.0

© 2014 Koninklijke Philips N.V. All rights reserved.
Philips reserves the right to make changes in specifications and/or to discontinue any product at any time without notice or obligation and will not be liable for any consequences resulting from the use of this publication.
philips.com/luminaires



Philips Lighting North America Corporation
200 Franklin Square Drive, Somerset, NJ 08873
Tel. 855-486-2216

Imported by: Philips Lighting
A division of Philips Electronics Ltd.
281 Hillmount Road, Markham, ON, Canada L6C 2S3
Tel. 800-668-9008