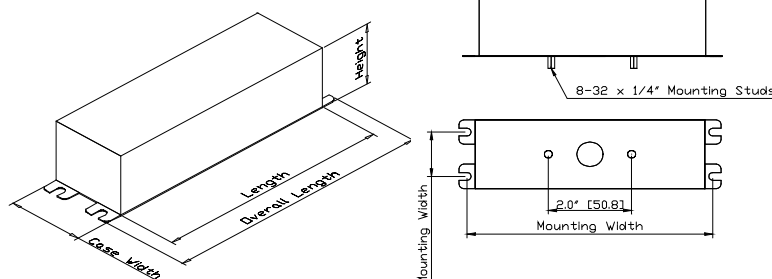
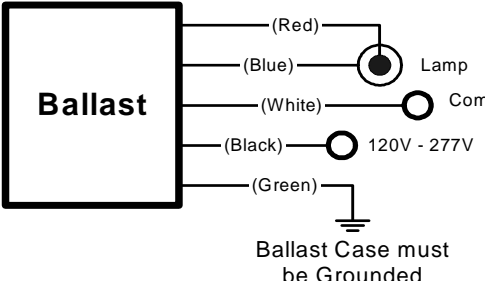
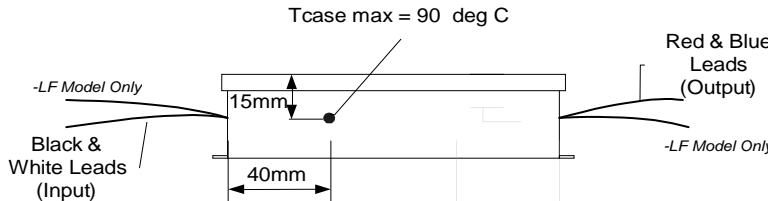



PHILIPS ADVANCE				e-Vision® Electronic Ballast for Metal Halide Lamps			Catalog Number: IMH-39-E For 39W Metal Halide Lamps ANSI C130/M130 120-277V 50/60Hz Electronic Status: RELEASED			
DIMENSIONS AND DATA										
Lamp		Input Volts	Catalog Number*	Line Current (Amps)	Input Power (Watts)	Min Power Factor	Wiring Diag	Fig.	Weight (lb)	Max. Distance to Lamp (ft)
Number	Watts									
39W Watt Lamp, ANSI Code C130/M130 Minimum Starting Temp -20°C/-4°F										
1	39	120 277	IMH-39-E-XXX	0.38 0.16	44 43	0.9	3	E	0.8	5
							 <p>Wiring Diagram 3</p>			
Case Figure	Overall Length	Case Length	Case Width	Height	Mountin Length	Mounting Width				
E	140mm [5.5"]	127mm [5.0"]	44mm [1.7"]	30mm [1.2"]	135mm [5.3"]	26mm [1.0"]				
 <p>Case Temperature Measurement Location</p>										
INSTALLATION & APPLICATION NOTES:							*Ordering Information			
1. Maximum allowable case temperature is 90°C. See figure above for measurement location							Order Suffix			
2. Ignition pulse is 4 kV max							Description			
3. All leads are 12 inches long							-LF			
4. Ballast output will shutdown after 20 minutes if lamp fails to ignite										
5. Power must be cycled off – then on, after replacing lamp										
Data is based on tests performed by Philips Advance in a controlled environment and is representative of relative performance. Actual performance can vary depending on operating conditions. Specifications are subject to change without notice. All specifications are nominal unless otherwise noted.										

Philips Lighting Electronics N.A.

10275 West Higgins Road • Rosemont, IL 60018 • www.philips.com/advance

Tel: 800-322-2086 • Fax: 800-423-1882 • Customer Support: 800-372-3331 • OEM Support: 866-915-5886