

# PHILIPS Day-Brite CFI

## Healthcare

### Overbed light AH

32W T8



Project:	
Location:	
Cat.No:	
Type:	
Lamps:	Qty:
Notes:	

The Philips Day-Brite / CFI overbed light AH is a sturdy wall mounted luminaire suitable for hospitals and other health care facilities. It has separate lamp compartments for segregated uplight and downlight preferences.

#### Ordering guide

Family	No of Lamps*	Lamp Type	Voltage	Options
<input type="text" value="AH"/>	<input type="text"/>	<input type="text" value="32"/>	<input type="text"/>	<input type="text"/>
<b>AH</b> Overbed Light w/aluminum ends	<b>2</b> 1up/1down <b>3</b> 2up/2down <b>4</b> 2up/2down	<b>32</b> 32wT8 (48")	<b>120</b> <b>277</b> <b>347</b>	<b>E1</b> Factory installed emergency ballast, 350-450 lumens <b>E7</b> Factory installed emergency ballast, 600-700 lumens <b>OAK</b> Oak Fascia Insert <b>RF1</b> RFI suppressors 1 per luminaire <b>RF2</b> RFI suppressors 2 per luminaire

#### Notes

With generic Electronic Ballasts (Brand selected by Day-Brite)  
 Suffix Catalog # with – **Ballast Quantity / Lamps Per Ballast – EB**.

Example: – **2/1-EB** = Two 1 Lamp Electronic Ballasts (1 up/1 down).

Example: – **1/21-EB** = One 2 Lamp Electronic Ballast and One 1 Lamp Electronic Ballast (2 up/1 down).

Example: – **2/2-EB** = Two 2 Lamp Electronic Ballasts (2 up/2 down).

#### CONSTRUCTION/FINISH

- Wall mounted luminaire suitable for hospitals and other health care facilities.
- Separate lamp compartments for segregated uplight and downlight.
- Housing constructed from die-formed code gauge steel.
- Die-cast aluminum ends standard, secured by hidden screws.
- Baked white enamel finish standard.
- Linear prismatic refractor is .125" nominal thickness, made from DR (high impact) acrylic.
- Lens is removable without tools.
- Flat white front fascia standard.
- Oak fascia insert optional.


#### ELECTRICAL

- Class P, HPF ballasts comply with (E) Federal Ballast Law (Public Law 100-357,1988).
- UL listed for damp locations.
- Four position pull switch is standard on 120 volt models (requires two ballasts), not available on 277 volt models.

# AH Overbed light


32W T8

## Dimensions

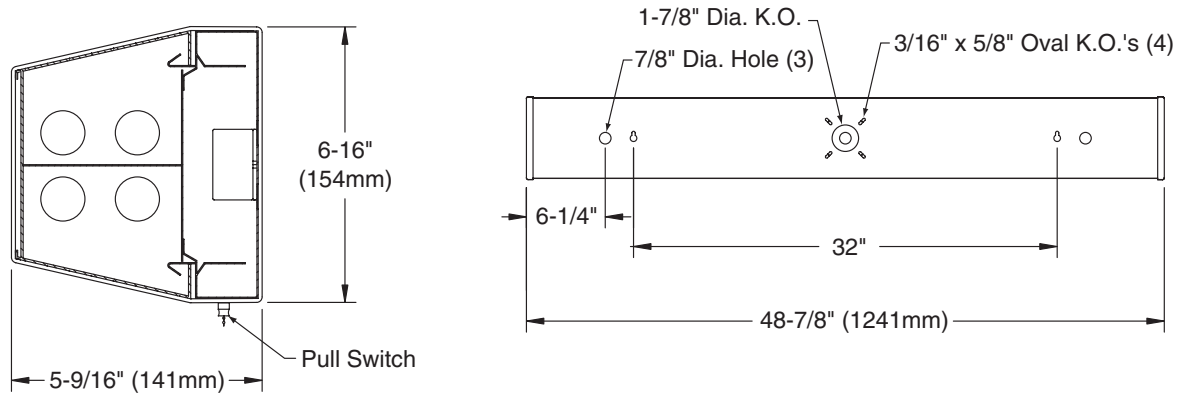

## ILLUMINATION - AH332 Initial Footcandles on Bed

U&D - Uplight & Downlight  
U - Uplight Only  
D - Downlight Only

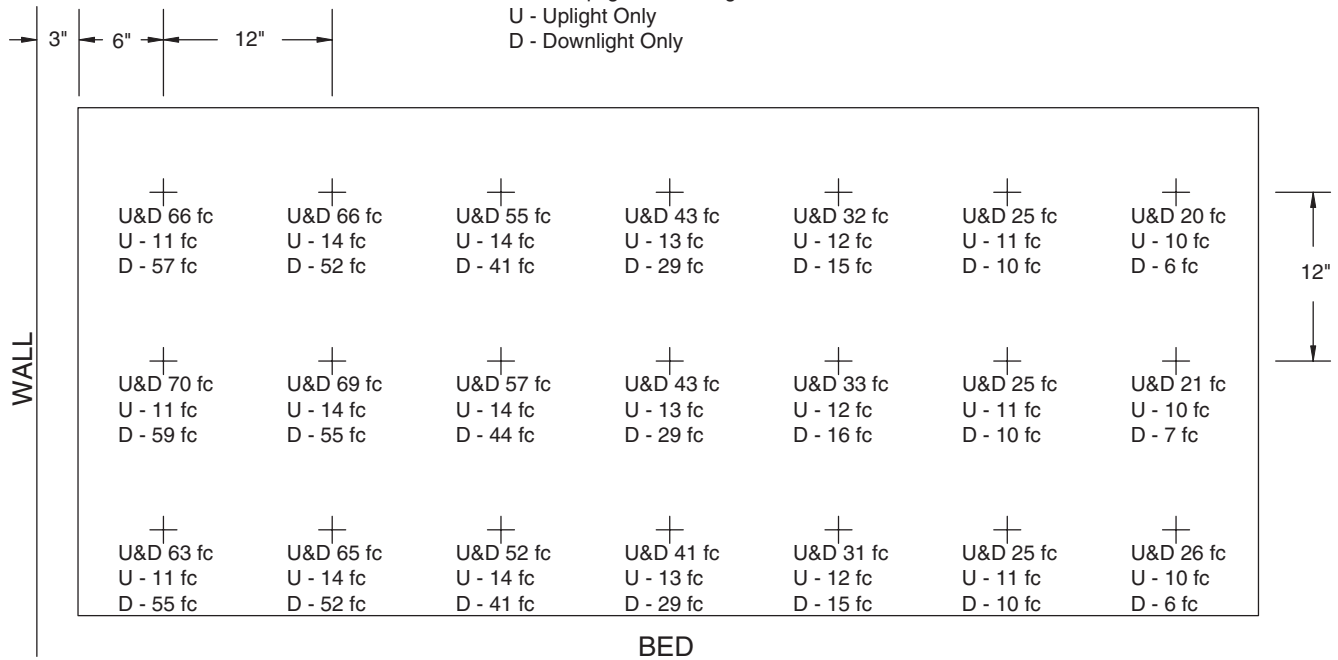

# AH Overbed light

32W T8


FOR PHOTOMETRIC INFORMATION,

ASK FOR TEST NUMBERS:

2 LAMP (1 UP/1 DOWN) - #24901

3 LAMP (2 UP/1 DOWN) - #24902

4 LAMP (2 UP/2 DOWN) - #24900

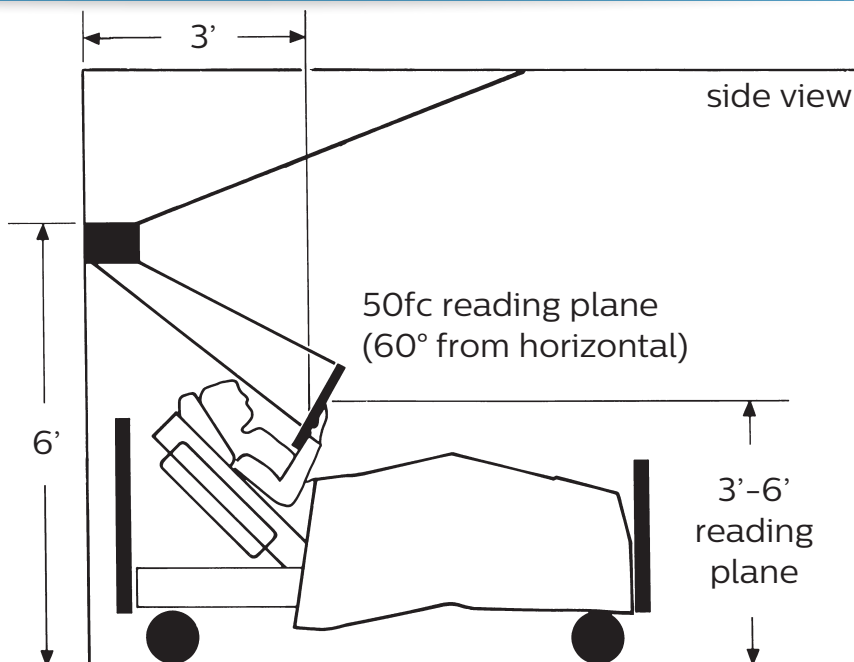

Some luminaires use fluorescent or high intensity discharge (HID) lamps that contain small amounts of mercury. Such lamps are labeled, "Contain Mercury" and/or the symbol "HG". Lamps that contain mercury must be disposed of in accordance with local requirements. Information regarding lamp recycling and disposal can be found at [www.lamprecycle.org](http://www.lamprecycle.org)

