



# MSR Gold™ FastFit

## MSR Gold™ 2500/2 FastFit 1CT/4

All lamps burn out eventually, but when this happens with single ended MSR Gold™ FastFit, it is replaced in seconds – thanks to the specially designed lamp base and lamp holder. This lamp provides a high beam intensity of pure, white light for a truly illuminating performance, while the gold-plated caps provide superior heat protection and prevent premature failure. P3 technology allows use in any position and at higher temperatures, further extending lamp life and consistency of high-quality light output. Also, because the FastFit design is applied to Philips Halogen lamps, switching between lamp technologies can be done quickly and easily. The Philips MSR Gold™ 1200 FastFit can be operated in a lamp wattage range between 800W and 1400W.

### Product data

General Information	
Base	PGJX50 [ PGJX50]
Operating Position	Universal [ Universal]
Main Application	Entertainment
Life to 50% Failures (Nom)	750 h
System Description	FastFit
Light Technical	
Color Code	2
Initial lumen (Min)	187500 lm
Initial lumen (Nom)	193000 lm
Chromaticity Coordinate X (Nom)	301
Chromaticity Coordinate Y (Nom)	325
Correlated Color Temperature (Nom)	7200 K
Luminous Efficacy (rated) (Nom)	77 lm/W
Color Rendering Index (Nom)	85

Operating and Electrical	
Power (Rated) (Nom)	2500 W
Lamp Current (Nom)	19.53 A
Ignition Supply Voltage (Min)	198 V
Controls and Dimming	
Dimmable	Yes
Mechanical and Housing	
Cap-Base Information	PGJX50
Luminaire Design Requirements	
Bulb Temperature (Max)	950 °C
Pinch Temperature (Max)	500 °C
Product Data	
Order product name	MSR Gold™ 2500/2 FastFit 1CT/4

# MSR Gold™ FastFit


EAN/UPC - Product	8718291221319
Order code	287011
Numerator - Quantity Per Pack	1
Numerator - Packs per outer box	4

Material Nr. (12NC)	928106405115
Net Weight (Piece)	0.150 kg

## Warnings and Safety

- A lamp breaking is extremely unlikely to have any impact on your health. If a lamp breaks, ventilate the room for 30 minutes and remove the parts, preferably with gloves. Put them in a sealed plastic bag and take it to your local waste facilities for recycling. Do not use a vacuum cleaner.
- Lamp contains mercury. Manage in Accord with Disposal Laws. See: [www.lamprecycle.org](http://www.lamprecycle.org) or 1-800-555-0050



## Dimensional drawing

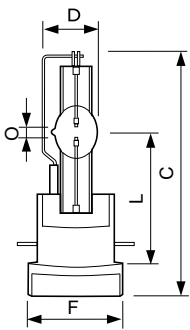

Product	D (max)	O	L (min)	L (max)	L	C (max)	F
MSR Gold™	35.5 mm	9.5 mm	73.9 mm	75.9 mm	74.9	153 mm	50 mm
2500/2 FastFit					mm		
1CT/4							

MSR GOLD 2500/2 FastFit

## Photometric data

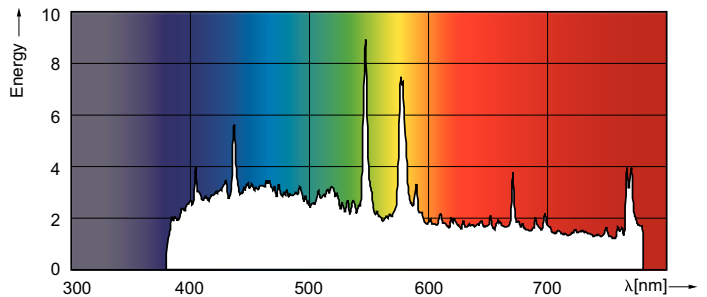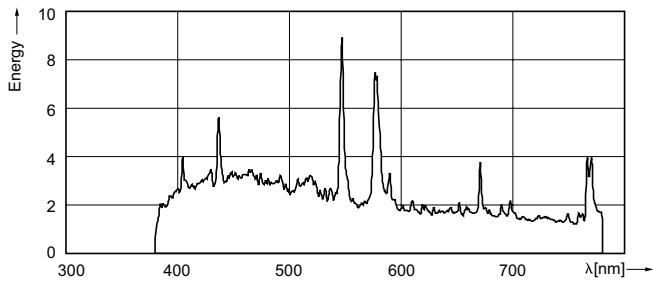

MSR Gold™ 2500/2 FastFit

MSR Gold™ 2500/2 FastFit

